

Hamilton Beach®

汉美驰

Toaster
多士炉

如有疑问?

请致电我们, 我们的团队

随时准备为您提供帮助。

中国大陆客服热线:

400-852-2655

官方网站: www.hamiltonbeach.cn

型号: 22215-CN

使用产品前请仔细阅读本使用说明书, 并妥善保管。


重要安全说明

本电器预定用于家庭及类似应用场合, 例如:

(1) 办公室、商铺及其它工作环境的员工厨房区; (2) 农舍; (3) 酒店、汽车旅馆和其它居住型的旅客使用; 以及 (4) 住宿早餐型环境场合。

当使用电器时, 应始终遵守基本的安全防范措施, 以减少火灾、触电和/或人身伤害的风险, 包括以下内容:

1. 阅读所有相关说明。
2. 该电器不适合以下人群 (包括儿童) 使用: 行动不便者、精神或智商缺陷者, 或缺乏经验和常识者, 除非他们在责任人的监督或指导下使用以确保安全。
3. 请确保勿用于儿童玩耍。当电器由儿童使用或距离儿童较近时, 需有成人看护。
4. 为防止触电, 请勿将电源线、插头或多士炉放入水或其他液体中。
5. 不使用与清洁前, 请从插座拔下电源。应在冷却后再安装、拆解部件或移动多士炉。
6. 在下列情况下, 请勿使用电器: 电源线或插头破损、电器出现故障、电器曾跌落或已经出现任何形式的损坏。请拨打我们的售后服务电话, 咨询有关电器检查、修理或调整的相关信息。如果电源软线损坏, 为了避免危险, 必须由制造商、其维修部或类似部门的专业人员更换。
7. 请勿在多士炉中加热油酥糕点 - 应使用电烤箱加热。如果一定要用多士炉进行此类操作, 务必使用烘烤色泽的最低档。禁止加热碎、破或扭曲的糕点, 并禁止无人看护使用。
8. 尺寸过大的食物或金属厨具绝对禁止放入多士炉中, 可能引起火灾或电击。
9. 请勿在无人看护时使用多士炉。
10. 请勿在多士炉通电时尝试取出食物。
11. 取出卡在插槽的食物时, 请先从插座上拔下电源插头并让多士炉冷却后再操作。然后倒转多士炉并摇晃。请勿尝试插入任何厨具来取出。
12. 面包可能燃烧, 因此多士炉不得在靠近窗帘及其他可燃材料的地方或在窗帘及其他可燃材料的下方使用。
13. 请勿将多士炉放置于热燃气、电炉、热烤箱之上或附近。
14. 请勿接触设备热表面。请使用把手或者旋钮。
15. 使用非设备制造商推荐的配套附件可能会导致人身伤害。
16. 请勿将电源线悬挂在桌子或柜台边缘, 或

- 接触包括炉子在内的热表面。
17. 拔掉电源前请确保烤面包拨杆位于顶端。
 18. 请勿在室外使用。
 19. 请勿将多士炉用于非预期用途。
 20. 本产品仅限家庭使用。
 21. 为防电路过载, 请勿在此电器的同一电路上使用其他大功率电器。
 22. 本电器不可用通过外部定时器或单独的遥控系统进行操作。
 23. 若要断开电源, 请将控制开关转到关闭(取消)位置; 然后从插座上拔下插头。
 24.  **注意: 高温表面! 器具工作期间, 外表面的温度很高, 在使用过程中会变烫。**
 25. 不清理集屑盘容易导致火灾。
 26. 请勿使用金属清洁球清洁本电器。金属丝可能会被折断卡入其中并可能接触到带电部件, 有电击的危险。
 27. 将电器和电线放在儿童够不到的地方。

请妥善保管说明书!

其他用户安全信息

 
 
为防电路过载, 请勿在此电器的同一电路上使用其他大功率电器。

此设备使用的电源线缆长度经过设计挑选, 以降低线缆缠结或过长导致误绊的危害。如需使用更长的线缆, 可使用经过认可的加长线缆。加长线缆的电性能需等同或优于此设备的电性能。加长线缆需谨慎安置以免其挂于橱面或桌面而因此可能被儿童拉扯或导致误绊。

警告 为了减少火灾风险:

- 请勿在无人看护时使用。
 - 请勿用于烘烤涂有黄油、果酱、调料等的食物。
 - 请勿用于烘烤米糕、油炸食物、冷冻食物或非面包类食物。
 - 请勿用于烘烤油酥糕点。务必在电烤箱中烘烤油酥糕点。
 - 请勿在窗帘、壁纸、橱柜、纸或塑料制品、毛巾布等附近使用或被此类物品覆盖。
 - 当设备由儿童使用、或在其附近使用时, 应予以密切监护。
 - 请勿在密闭空间里 (如: 橱柜、车厢、车库或其它仓储区) 使用多士炉。
 - 为了减少火灾的风险, 请定期清洁滑出式屑盘。
 - 未使用时, 务必拔下多士炉电源插头。
- 不遵守这些说明会导致死亡或火灾。

部件和功能

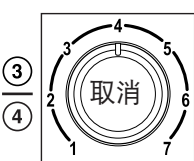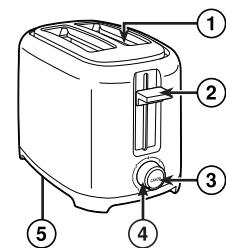

1. 带导杆的食物插槽
2. 升降开关 (上/下) - 下按[升降开关]启动多士炉。在使用过程中, 上提[升降开关]可停止烘烤。在烘烤循环结束后, 上提升降开关 (上/下) 便于轻松取出食物。
3. 取消按钮 - 要取消或结束一个循环, 可按[取消]按钮。
4. 烤面包色度选择开关 - 选择旋钮以调节所需的色度。
5. 滑出式屑盘

如何烤面包

1. 将电源插头插入插座中。
2. 将合适的食物放入食物插槽中。
3. 旋转烤面包色度选择开关以选择所需的色度。
4. 下按[升降开关]启动多士炉。**注意:** 多士炉通电状态下[升降开关]才会被锁定。
5. 完成烘烤后, 面包会自动弹出。上提升降开关 (上/下) 便于轻松取出食物。

注意:

- 冷冻食物可能需要更长的烘烤循环时间。
- 如果多士炉接通电源, 即使加热元件未亮红色, 食物将被烘烤。烘烤期间, 加热元件不亮红色, 也在正常工作。

保养与清洗

注意: 如果每天使用多士炉, 应每周清洁一次屑盘。

1. 拔下多士炉的电源插头并让其冷却。
2. 抽出屑盘并用清洁的布擦拭干净; 然后装回原位。
3. 请使用湿布擦拭多士炉外部。请勿使用磨蚀性清洁剂, 这可能会刮伤多士炉的表面。
4. 取出卡在插槽的食物时, 请先从插座上拔下电源插头并让多士炉冷却后再操作。然后倒转多士炉并摇晃。请勿尝试插入任何厨具来取出。

IMPORTANT SAFEGUARDS


This product is intended for household environments such as in shops, offices and other similar working environments; in farm houses; by

clients in hotels, motels and other residential type environments; in bed and breakfast type environments.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. Read all instructions.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
3. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off

parts, or moving toaster.

6. Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. Do not heat toaster pastries in toaster— use toaster oven. If you must use toaster, always set to lowest toast color setting. Never heat cracked, broken, or warped pastries, and never leave unattended.
8. Oversized foods or metal utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
9. Do not operate toaster while unattended.
10. Do not attempt to dislodge food when toaster is plugged in.
11. To remove food that is lodged in slots, unplug and allow to cool. Turn upside down and shake. Do not insert any utensils.
12. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
13. Do not place on or near a hot gas or electric burner or in a heated oven.
14. Do not touch hot surfaces. Use handles or knobs.
15. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
16. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
17. Before unplugging toaster, make sure bread lifter is in “up” position.
18. Do not use outdoors.
19. Do not use toaster for other than intended use.
20. This product is for household use only.
21. To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.
22. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
23. To disconnect cord, turn control to Off (CANCEL); then remove plug from wall outlet.
24.  **CAUTION: HOT SURFACE.** The temperature of accessible surfaces may be high when the appliance is operating, the accessible surfaces are liable to get hot during use.
25. Failure to clean crumb tray may result in a fire hazard.
26. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electrical shock.
27. Keep the appliance and cord out of reach of children.

SAVE THESE INSTRUCTIONS

Other Consumer Safety Information

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.



The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

警告 To reduce the risk of fire:

- Do not operate while unattended.
- Do not use with food that has been spread with butter, jelly, frosting, etc.
- Do not use with rice cakes, fried foods, frozen prepared foods, or nonbread items.
- Do not use with toaster pastries. Always cook toaster pastries in a toaster oven broiler.
- Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc.
- Closely supervise when used by or near children.
- Do not operate toaster in an enclosed space, such as an appliance cabinet, caddy, garage, or other storage area.
- To reduce the risk of fire, clean crumb trays regularly.
- Always unplug toaster when not in use.

Failure to follow these instructions can result in death or fire. Have an electrician replace the outlet.

Parts and features

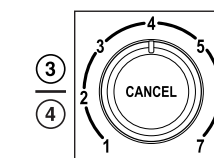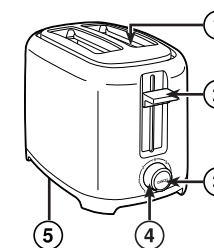

1. **Food Slots With Guides**
2. **Bread Lifter/High-Lift Toast Boost (上/下)** - Push down Bread Lifter to start Toaster. The Bread Lifter may be lifted up to stop toasting during a cycle. After toast cycle ends, raise High-Lift Toast Boost (上/下) to easily remove food.
3. **CANCEL Button** - To cancel or end a cycle, press the CANCEL button.
4. **Shade Selector** - Turn dial to adjust toast shade.
5. **Slide-Out Crumb Tray**

How to toast

1. Plug into outlet.
2. Place appropriate food items in Food Slots.
3. Turn Shade Selector to select toast shade.

4. Push Bread Lifter down to start Toaster.
NOTE: The Bread Lifter will not latch down unless the Toaster is plugged in.
5. At the end of toasting cycle, bread will pop up automatically. Raise the High-Lift Toast Boost (按钮) to easily remove food.

NOTES:

- Frozen foods may require an additional toasting cycle.
- If Toaster is plugged in, and elements are not glowing red, food will get toasted. While toasting, elements do not have to be red to be working properly.

Care and cleaning

NOTE: If the Toaster is used daily, the Crumb Tray should be cleaned weekly.

1. Unplug Toaster and let cool.
2. Slide out the Crumb Tray and wipe off with clean cloth; then slide back into place.
3. Wipe outside of Toaster with a damp cloth. Do not use abrasive cleansers that may scratch the surface of the Toaster.
4. To remove food that is lodged in slots, unplug and allow to cool. Turn upside down and shake. Do not insert any utensils.

本产品符合相应食品安全国家标准要求，食品接触用材料及其执行标准的符合性信息说明如下：

序号	部件名称	材质	执行标准	备注
1	前支承	镀铝板	GB 4806.1-2016 GB 4806.9-2016	不得接触酸性食品
2	后支承	镀铝板	GB 4806.1-2016 GB 4806.9-2016	
3	面包托	镀铝板	GB 4806.1-2016 GB 4806.9-2016	
4	开合网	铁镀铬	GB 4806.1-2016 GB 4806.9-2016	
5	隔热罩	不锈钢 10Cr17 (SUS 430)	GB 4806.1-2016 GB 4806.9-2016	/

注：特殊使用说明：请严格遵照说明书及产品所带附件资料使用本产品。


产品中有害物质的名称及含量
 Name and content of hazardous substances in product

部件名称 (Component name)	有害物质(hazardous substance)					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
电子板 PCB	X	O	O	O	O	O

本表格依据 SJ/T 11364 的规定编制。This table is prepared in accordance with the provisions of SJ/T 11364.

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。
 Indicates that the said hazardous substance contained in all the homogeneous materials for this component is below the limit requirement in GB/T 26572.

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。这是由于目前技术或经济等的原因暂时无法实现替代。
 Indicates that the said hazardous substance contained in at least one of the homogeneous materials used for this component is above the limit requirement in GB/T 26572. Due to technological and/ or economic reasons, these hazardous substances cannot be easily replaced at this time.

 使用标志。标志内的数字代表在正常使用状态下，产品的环保使用推荐年限。
 This is the logo of environmental protection use. The number inside indicates the environmental protection use recommended period (Year) of product in normal use.

Model/型号: 22215-CN **Type/类别:** T115 **Rating/规格:** 220-240V~ 50-60Hz 640-760W

制造商：汉密尔顿海滩电器（深圳）有限公司
 地址：深圳市福田区深南西路车公庙工业区天安数码时代大厦主楼 1306-1308、1309-1311 单元
 本产品执行标准：GB4706.1-2005 4706.14-2008
 © 2020 Hamilton Beach Brands, Inc.

以上内容如有改动，恕不预先通知



添加官方微博 微信
 开启美食人生

产品保修卡

产品名称: 多士炉
 产品类别: T115
 产品型号: _____
 购买日期: _____
 购买商店: _____
 经销商: _____

保修规定

1. 自购买之日起，在本保修规定的五年保修期内，按照使用说明及其它注意事项使用的情况下，出现故障时，依照保修规定可持商品及商品发票和保修卡到当地维修站，或致电客服热线4008522655进行免费维修或者免费更换。
2. 如在保修期内出现以下情况时，不享受免费维修、修理费或更换费自付。
 - ① 因使用上的错误和擅自改动、修理而产生的故障及损伤。
 - ② 购买后因跌落、搬运不当等而产生的故障及损伤。
 - ③ 因火灾、地震、水灾、打雷、其它天灾人祸及公害、异常电压、其它外部因素而产生的故障及损伤。
 - ④ 属于家庭正常使用以外而出现的故障及损伤。
 - ⑤ 不出示本保修卡的。
 - ⑥ 本保修卡只在中国大陆有效。
 - ⑦ 本保修卡不再发行，请妥善保管。
 - ⑧ 在不能携带本产品进行修理的情况下，请向本公司维修站询问。

维修记录

维修日期	维修内容	维修结果	维修地点	维修人签字

中国大陆客服热线：
400-852-2655

官方网站: www.hamiltonbeach.cn
 制造商: 汉密尔顿海滩电器(深圳)有限公司
 地址: 深圳市福田区深南西路车公庙工业区天安数码时代大厦主楼1306-1308、1309-1311单元

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>