
Kodak EasyShare CX7330 zoom digital camera



User's guide

www.kodak.com

For interactive tutorials, www.kodak.com/go/howto

For help with your camera, www.kodak.com/go/cx7330support



Eastman Kodak Company

343 State Street

Rochester, New York 14650


© Eastman Kodak Company, 2004

All screen images are simulated.

Kodak, EasyShare, and Max are trademarks of Eastman Kodak Company.


P/N 4J1291_en

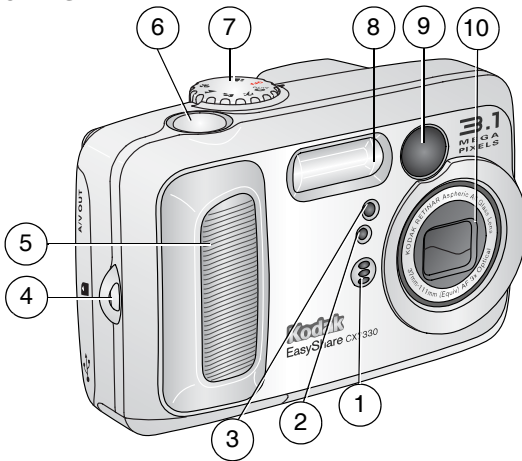

Front View




- | | | | |
|---|------------------------|----|-----------------|
| 1 | Microphone | 6 | Shutter button |
| 2 | Light sensor | 7 | Mode dial/Power |
| 3 | Self Timer/Video light | 8 | Flash unit |
| 4 | Wrist strap post | 9 | Viewfinder |
| 5 | Grip | 10 | Lens/Lens cover |

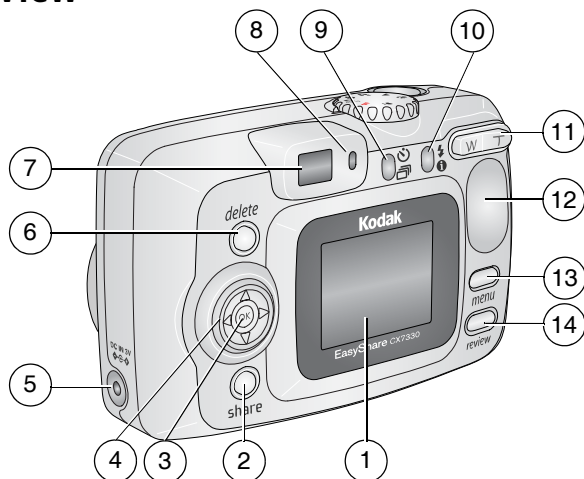
Back View




- | | | | |
|---|---|----|---|
| 1 | Camera screen (LCD) | 8 | Ready light |
| 2 | Share button | 9 | Self Timer/Burst button  |
| 3 | OK button (press) | 10 | Flash/status button  |
| 4 | 4-way controller  | 11 | Zoom (Wide Angle/Telephoto) |
| 5 | DC-In (3V)  , for optional AC adapter | 12 | Grip |
| 6 | Delete button | 13 | Menu button |
| 7 | Viewfinder | 14 | Review button |

 Side View

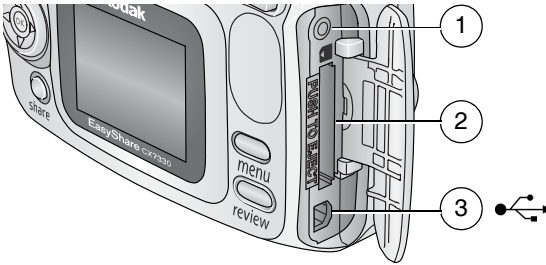

- 1 AV Out, for television viewing
- 2 Slot for **optional** SD/MMC card
- 3 USB Port 

Bottom View

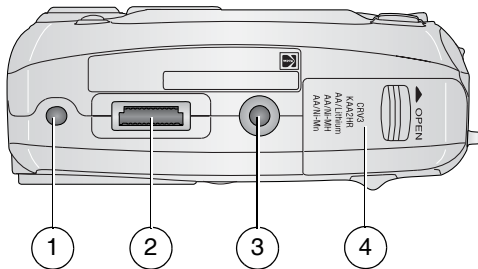

- 1 Locator for EasyShare camera dock or printer dock
- 2 Dock connector
- 3 Tripod socket/locator for EasyShare camera dock or printer dock
- 4 Battery door


Table of contents

1 Getting started	1
Package contents	1
Installing the software first	1
Inserting the batteries	2
Important battery information	3
Turning the camera on and off	4
Setting the date and time	5
Checking camera and picture status	6
Storing pictures on an SD/MMC card	7
2 Taking pictures and videos	8
Taking a picture	8
Taking a video	8
Camera modes	9
Using the camera screen as a viewfinder	10
Reviewing the picture or video just taken	12
Using optical zoom	13
Using digital zoom	13
Using the flash	14
Putting yourself in the picture	16
Putting yourself in the video	16
Taking a burst series of pictures	17
Changing picture-taking settings	18
Customizing your camera	20
Pre-tagging for album names	22
3 Reviewing pictures and videos	23
Viewing single pictures and videos	23
Viewing multiple pictures and videos	23
Playing a video	24
Deleting pictures and videos	24
Changing optional review settings	25
Magnifying pictures	25
Protecting pictures and videos from deletion	26
Tagging pictures/videos for albums	26
Running a slide show	27
Displaying pictures and videos on a television	28
Copying pictures and videos	29
Viewing picture/video information	29

4	Installing the software	30
	Minimum system requirements	30
	Install the software	31
5	Sharing pictures and videos	32
	When can I tag my pictures and videos?	32
	Tagging pictures for printing.....	33
	Tagging pictures and videos for emailing	34
	Tagging pictures and videos as favorites	35
6	Transferring and printing pictures	36
	Transferring pictures with the USB cable	36
	Printing pictures from your computer	37
	Ordering prints online	37
	Printing from an optional SD/MMC card	37
	Printing without a computer	37
7	Troubleshooting	38
	Camera problems.....	38
	Computer/connectivity problems.....	39
	Picture quality problems	40
	Camera ready light status.....	41
8	Getting help	42
	Helpful links	42
	Software help.....	42
	Telephone customer support	42
9	Appendix	44
	Camera specifications	44
	Tips, safety, maintenance	46
	Storage capacities	47
	Power-saving features	47
	Regulatory compliance	48
	Upgrading your software and firmware.....	49

1 Getting started

Package contents

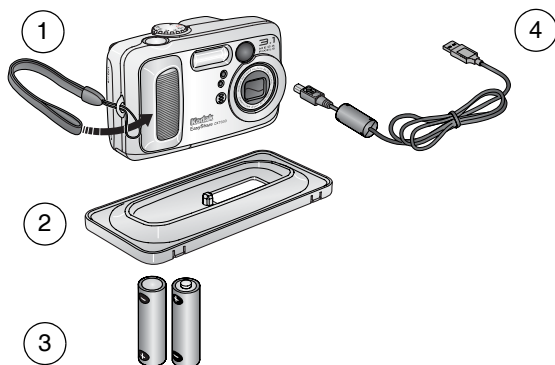

- 1 Camera with wrist strap 3 2 AA non-rechargeable starter batteries
2 Custom dock insert (for EasyShare camera dock or printer dock) 4 USB cable


Not shown: User's guide (may be provided on a CD), Start Here! guide, Kodak EasyShare software CD. Contents may change without notice.

Installing the software first


IMPORTANT: *Install the software from the Kodak EasyShare software CD before connecting the camera (or dock) to the computer. Otherwise, the software may install incorrectly. See the Start Here! guide or [Installing the software, page 30](#).*

Inserting the batteries


Two AA non-rechargeable starter batteries are included with your camera. For information on replacing batteries and extending battery life, see [page 3](#).

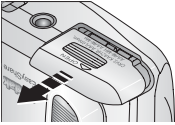


- 1 Turn the Mode dial to Off.
- 2 On the bottom of the camera, slide the battery door and lift to open.

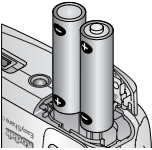

- 3 Insert the AA batteries as shown.
- 4 Close the battery door.

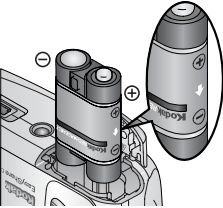

If you purchased an optional Kodak EasyShare Ni-MH rechargeable battery pack (also included with the Kodak EasyShare camera dock or printer dock), insert it as shown.

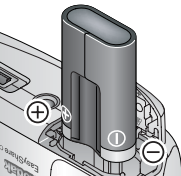


If you purchased an optional Kodak CRV3 lithium battery (non-rechargeable), insert it as shown.

See [Kodak battery replacement types/battery life](#) for the other types of batteries you can use in your camera.

Important battery information

Kodak battery replacement types/battery life

Use the following types of batteries. Actual battery life may vary based on usage.

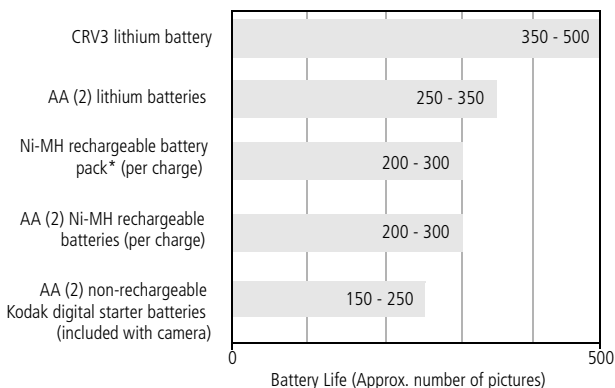

* Included with the Kodak EasyShare camera dock and printer dock

We do not recommend or support alkaline batteries. For acceptable battery life, and to make sure your camera operates dependably, use the replacement batteries listed above.

Extending battery life

- Limit the following activities that quickly deplete battery power:
 - Reviewing your pictures on the camera screen (see [page 23](#))
 - Using the camera screen as a viewfinder (see [page 10](#))
 - Excessive use of the flash
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before inserting batteries in the camera.
- Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

Visit www.kodak.com/go/cx7330accessories for:

Kodak EasyShare camera dock—powers your camera, transfers pictures to your computer, and charges the included Kodak EasyShare Ni-MH rechargeable battery pack.

Kodak EasyShare printer dock—powers your camera, makes 4 x 6 in. (10 x 15 cm) prints with or without a computer, transfers pictures, and charges the included Kodak EasyShare Ni-MH rechargeable battery pack.

Kodak 3-volt AC adapter—powers your camera.

IMPORTANT: *Do not use the AC adapter included with the Kodak EasyShare camera dock or EasyShare printer dock to power your camera.*


Battery safety and handling

- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- For rechargeable battery disposal information, see the Rechargeable Battery Recycling Corporation Web site at www.rbcc.com.

For more information on batteries, see

www.kodak.com/global/en/service/batteries/batteryUsage.jhtml

Turning the camera on and off

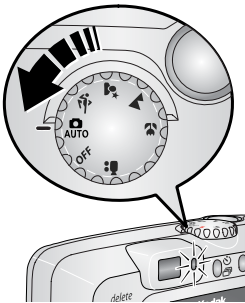

- Turn the Mode dial from Off to any other position.
The Ready light blinks green while the camera performs a self-check, then stays on when the camera is ready.
- To turn off the camera, turn the Mode dial to Off.
The camera completes operations that are in process.

Changing the display

If you want to	Then do this
Turn the camera screen on or off.	Press the OK button.
Change the camera screen setting so that it is on whenever the camera is on.	See Liveview, page 20 .
Show/Hide the status icons when the camera screen is off.	Press ▲.



Setting the date and time

Setting the date & time, first time

The *Date and Time have been reset* message appears the first time you turn on the camera or if the batteries are removed for an extended time.

- 1 SET DATE & TIME is highlighted. Press the OK button.
(Select Cancel to set the date and time at a later time.)
- 2 Go to step 4 below, [Setting the date & time, anytime](#).

Setting the date & time, anytime

- 1 Turn on the camera. Press the Menu button.
- 2 Press ▲/▼ to highlight Setup Menu , then press the OK button.
- 3 Press ▲/▼ to highlight Date & Time , then press the OK button.
- 4 Press ▲/▼ to adjust the date and time. Press ◀/▶ to advance to the next setting.
- 5 When finished, press the OK button.
- 6 Press the Menu button to exit the menu.


NOTE: Depending on your computer operating system, Kodak EasyShare software may let your computer update the camera clock when you connect the camera. See the EasyShare software Help for details.

Checking camera and picture status


The icons that appear on the camera screen indicate the active camera and picture settings. If **i** is displayed in the status area, press the Flash/Status button to display additional settings.

Capture mode screen

Only the active camera settings are displayed:

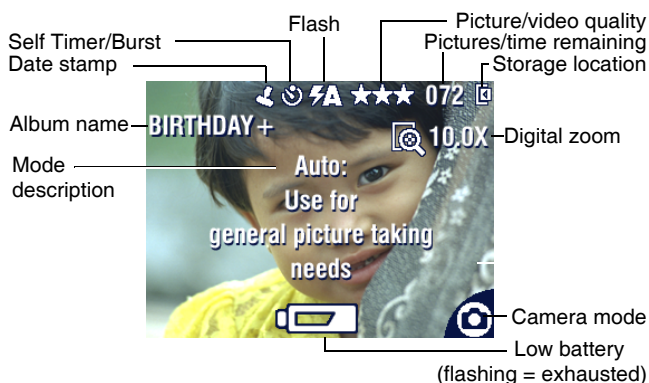


Review screen

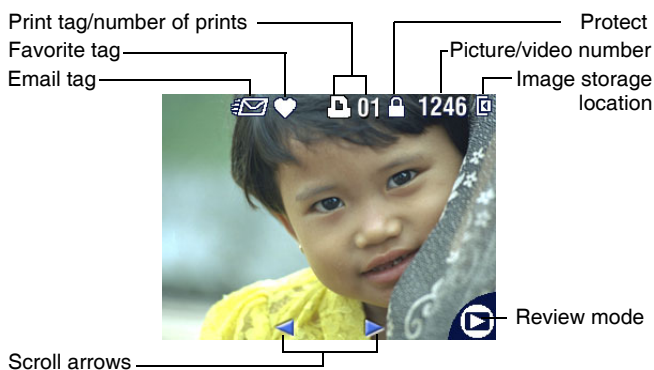

Flash/Status screen

Press the Flash/Status button. The current camera status icons are displayed in the bottom half of the Flash screen.

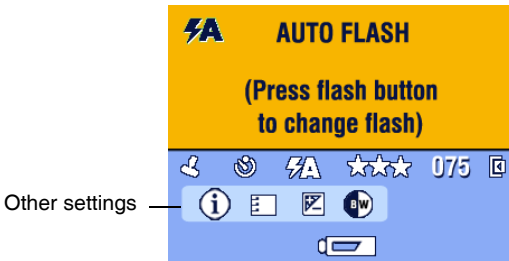

Storing pictures on an SD/MMC card


Your camera has 16 MB of internal memory. You can purchase optional SD/MMC cards for removable, reusable storage for your pictures and videos.



CAUTION:

The card can only be inserted one way; forcing it may damage the camera or card.

Do not insert or remove a card when the green ready light is blinking; doing so may damage your pictures, card, or camera.

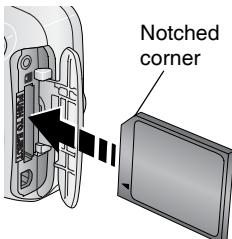

To insert an SD/MMC card:

- 1 Turn off the camera. Open the card door.
- 2 Orient the card as shown on the camera body.
- 3 Push the card into the slot to seat the connector. Close the door.
- 4 To remove the card, turn off the camera. Push the card in, then release it. When the card is partially ejected, pull it out.

NOTE: When using a card for the first time, we suggest you format it before you take pictures. (See [page 21](#).)

See [page 47](#) for storage capacities. Purchase SD/MMC cards at a dealer of Kodak products or www.kodak.com/go/cx7330accessories.


2 Taking pictures and videos

Taking a picture

- 1 Turn the Mode dial to the mode you want to use. See [page 9](#) for mode descriptions.

The camera screen displays the mode name and description. To interrupt the description, press any button.


- 2 Use the viewfinder or camera screen to frame your subject. (Press the OK button to turn on the camera screen. See [page 10](#).)

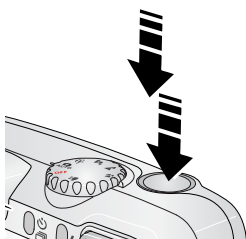

- 3 Press the Shutter button **halfway and hold** to set the exposure and focus.
- 4 When the ready light turns green, continue pressing the Shutter button **completely down** to take the picture.







When the ready light blinks green, the picture is being saved; you can still take pictures. If the ready light is red, wait until it turns green.

Taking a video

- 1 Turn the Mode dial to Video .
- 2 Use the viewfinder or camera screen to frame your subject.
- 3 Press the Shutter button completely down and release. To stop recording, press and release the Shutter button again.

NOTE: If you prefer, press the Shutter button completely down and hold it for more than 2 seconds to begin recording. To stop recording, release the Shutter button.

Camera modes

Use this mode	For
 Auto	General picture-taking. Automatically sets exposure, focus, and flash.
 Sport	Subjects that are in motion. Shutter speed is fast.
 Night	Night scenes or low-light conditions. Place the camera on a flat, steady surface or use a tripod. Due to slow shutter speeds, advise people to stay still for a few seconds after flash fires.
 Landscape	Distant subjects. Flash does not fire unless you turn it on. Auto-focus framing marks (page 11) are not available in Landscape.
 Close-up	Close subjects 5.1-27.6 in. (13-70 cm) from the lens in Wide Angle; 8.7-27.6 in.(22-70 cm) in Telephoto. Use available light instead of flash if possible. Use the camera screen to frame the subject.
 Video	Capture video with sound. See Taking a video, page 8 .

Using the camera screen as a viewfinder

IMPORTANT: *The Liveview feature quickly depletes battery power; use it sparingly.*



- 1 Turn the Mode dial to any Still position.
- 2 Press the OK button to turn on the camera screen.
- 3 Frame your subject in the camera screen.
For more about auto-focus framing marks, see [page 11](#).
- 4 Press the Shutter button **halfway and hold** to set the exposure and focus. When the framing marks change from blue to red, press **the rest of the way down** to take the picture.
- 5 To turn off the camera screen, press the OK button.

To make the camera screen turn on whenever the camera is on, see [Liveview, page 20](#).

Using the auto-focus framing marks







When using the camera screen as a viewfinder, framing marks indicate where the camera is focusing. For the best possible pictures, the camera attempts to focus on foreground subjects, even if the subjects are not centered in the scene.

NOTE: This procedure does not apply to videos.

1 Press the OK button to turn on the camera screen.

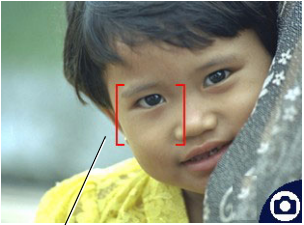2 Press the Shutter button **halfway and hold**.

When the framing marks turn red, focus is accomplished.

While the shutter button is pressed halfway:	
 <p>Framing marks</p>	 Center focus
	 Center wide focus
	 Side focus
	 Center and side focus
	 Left and right focus


3 Press the Shutter button **the rest of the way down** to take the picture.


4 If the camera is not focusing on the desired subject (or if the framing marks disappear and the Ready light blinks red), release your finger, recompose the scene, and go to Step 2.

NOTE: Framing marks appear only when the camera screen is on.
Framing marks do not appear in Landscape mode.

Reviewing the picture or video just taken

After you take a picture or video, the camera screen displays a Quickview for approximately 5 seconds. While the picture or video is displayed, you can:

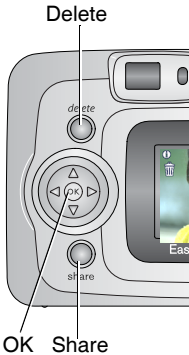


- **Review:** If you take no action, the picture/video is saved.
- **Play (video):** Press the OK button to play the video. (If the camera is connected to a television, press $\blacktriangle/\blacktriangledown$ to adjust the volume. See [page 28](#).)
- **Share:** Press the Share button to tag a picture/video for email or as a favorite, or to tag a picture for print. (See [page 33](#).)
- **Delete:** Press the Delete button while the picture/video and  are displayed.

NOTE: Only the final picture of a burst series (see [page 17](#)) is displayed during Quickview. If you select Delete, all pictures in the burst series are deleted. To delete selectively, do so in Review (see [page 24](#)).

Using optical zoom

Use optical zoom to get up to 3X closer to your subject. Optical zoom is effective when the lens is no closer than 23.6 in. (60 cm) to the subject or 5.1 in. (13 cm) in Close-up mode. You can change optical zoom before (but not during) video recording.

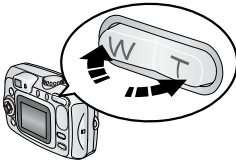

- 1 Use the viewfinder or camera screen to frame your subject.
 - 2 Press Telephoto (T) to zoom in. Press Wide Angle (W) to zoom out.
- 3 Press the Shutter button **halfway and hold** to set the exposure and focus, then press **the rest of the way down** to take the picture. (When taking videos, press and release the Shutter button.)

Using digital zoom

Use digital zoom in any Still mode to get an additional 3.3X magnification beyond optical zoom. Combined zoom settings are from 3.3X to 10X in 0.3 increments. You must turn on the camera screen to activate digital zoom.

- 1 If the camera screen is off, press the OK button to turn it on.
- 2 Press the Telephoto (T) button to the optical zoom limit (3X). Release the button, then press it again.

The camera screen displays the zoomed image, the zoom value, and the digital zoom icon.

- 3 Press the Shutter button **halfway and hold** to set the exposure and focus, then press **the rest of the way down** to take the picture.

NOTE: You cannot use digital zoom for video recording.


IMPORTANT: *You may notice a decrease in printed image quality when using digital zoom.*


Using the flash





Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows. You can change the flash setting in any Still mode; the default flash setting is restored when you exit the mode or turn off the camera.

	Flash Range
Wide Angle	2-11.8 ft (0.6-3.6 m)
Telephoto	2-6.9 ft (0.6-2.1 m)

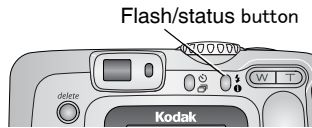Turning on the flash








Press the  button to scroll through the flash options. The active flash icon is displayed in the camera screen status area.



Flash Mode	Flash Fires
 Auto	When the lighting conditions require it.
 Off	Never
 Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is "backlit" (when the sun is behind the subject). In low light, hold the camera steady, or use a tripod.
 Red-eye	Once, so the subject's eyes become accustomed to the flash, then fires again when the picture is taken. (If the lighting conditions require flash but do not require Red-eye reduction, the flash may fire only once.)

Flash settings in each mode

 
For the best possible pictures, flash settings are preset for each capture mode.

Icon	Capture mode	Default flash setting	Available flash settings (press the Flash button to change)	To return to the default flash setting:
	Auto	Auto*	Auto, Flash Off, Fill Flash, Red-eye	Exit the mode or turn off the camera.
	Sport	Auto		
	Night	Auto*		
	Landscape	Off		
	Close-up	Off		
	Video	Off	None	Flash cannot be turned on.
	Burst	Off		

* When you change to Red-eye in these modes, it remains until you change it.

Putting yourself in the picture

The Self Timer creates a 10-second delay between the time you press the Shutter button and the time the picture is taken.

- 1 Place the camera on a flat surface or tripod.
- 2 In any Still mode, press the Self Timer button .

The Self Timer icon  appears in the status area.





- 3 Compose the scene. Then press the Shutter button **halfway and hold** to set the exposure and focus, then press **the rest of the way down**. Move so that you are in the scene.

The Self Timer light blinks slowly for 8 seconds (then quickly for 2 seconds) before the picture is taken. The Self Timer turns off after you take the picture or if you change modes.

To cancel the Self Timer before the picture is taken, press the Self Timer button. (The Self Timer setting remains active.)

To turn off the Self Timer, press the Self Timer button twice.


Putting yourself in the video

- 1 Place the camera on a flat surface or tripod.
- 2 Turn the Mode dial to Video , then press the Self Timer button .
- 3 Press / to choose a video length, then press the OK button.
- 4 Compose the scene, then press the Shutter button completely down. Move so that you are in the scene.

Taking a burst series of pictures

Burst lets you to take up to 3 pictures in quick succession (approximately 3 frames per second). Burst is ideal for capturing sporting events or objects in motion. Flash and Self Timer are disabled when you use Burst.

Turn on burst

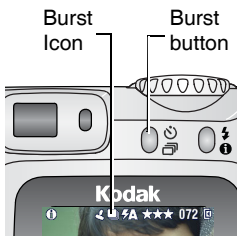

In any Still mode, press the Self Timer/Burst button **twice**.

The Burst icon  appears in the status area.

NOTE: The setting remains until you change it or turn off the camera.

Take the burst pictures

- 1 Press the Shutter button **halfway and hold** to set the auto-focus and exposure for all the pictures in the sequence.
- 2 Press the Shutter button **the rest of the way down and hold it** to take the pictures.




The camera takes up to 3 pictures in quick succession. It stops taking pictures when you release the Shutter button, when 3 pictures are taken, or when there is no more storage space.






Exposure, focus, white balance, and orientation are set for the first picture and applied to all pictures.

Changing picture-taking settings

You can change settings to get the best results from your camera:


- 1 Press the Menu button. (Some settings are unavailable in some modes.)
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight the setting you wish to change, then press the OK button.
- 3 Choose an option, then press the OK button.
- 4 Press the Menu button to exit.







Setting	Icon	Options
<p>Image Storage Choose a storage location for pictures and videos. <i>This setting remains until you change it.</i></p>		<p>Auto (default)—the camera uses the card if one is in the camera. If not, the camera uses internal memory.</p> <p>Internal Memory—the camera always uses internal memory, even if a card is installed.</p>
<p>Exposure Compensation (Still mode) Choose how much light enters the camera. <i>This setting remains until you turn the Mode dial or turn off the camera.</i></p>		<p>If pictures are too light, decrease the value. If pictures are too dark, increase the value. Unavailable in Video mode.</p>
<p>Picture Quality Choose a picture resolution. <i>This setting remains until you change it.</i></p>		<p>Best ★★★—3.1 M pixels; for printing up to 11 x 14 in. (28 x 36 cm).</p> <p>Best (3:2) ★★★—2.8 M pixels; ideal for printing 4 x 6 in. (10 x 15 cm) prints on the Kodak EasyShare printer dock and other printing solutions. Also for printing up to 11 x 14 in. (28 x 36 cm).</p> <p>Better ★★—2.1 M pixels; for printing up to 8 x 10 in. (20 x 25 cm).</p> <p>Good ★—1.1 M pixels; for emailing, Internet, screen display, or for conserving space.</p>






Setting	Icon	Options
<p>Color Mode Choose color tones. <i>This setting remains until you turn the Mode dial or turn off the camera.</i></p>		<p>Color (default)—for color pictures. Black & White—for black-and-white pictures. Sepia—for pictures with a reddish-brown, antique look. NOTE: EasyShare software also lets you change a color picture to black-and-white or sepia. Unavailable in Video mode.</p>
<p>Set Album Choose Album names.</p>		<p>On or Off. Pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names. See page 22.</p>
<p>Date Stamp Imprint the date on pictures.</p>		<p>Choose a date option, or turn off the feature. (Default is off.)</p>
<p>Orientation Sensor Orient pictures so that they are displayed with the correct side up.</p>		<p>On (default) Off</p>
<p>Setup Menu Choose additional settings.</p>		<p>See Customizing your camera.</p>

Customizing your camera

Use Setup to customize your camera settings.

- 1 In any mode, press the Menu button.
- 2 Press ▲/▼ to highlight Setup Menu , then press the OK button.
- 3 Press ▲/▼ to highlight the setting you wish to change, then press the OK button.
- 4 Choose an option, then press the OK button.
- 5 Press the Menu button to exit.

Setting	Icon	Options
Return to previous menu.		
Default Print Quantity Choose the default quantity.		
Quickview Briefly display a picture after it is taken.		On Off (default)
Liveview Change Liveview default to on or off. (For more information, see page 10 .)		On Off (default)
Advanced Digital Zoom Choose how digital zoom turns on.		Continuous —digital zoom turns on after the Telephoto button is pressed to the optical zoom limit and held. Pause (default) —digital zoom turns on after the Telephoto button is pressed to the optical zoom limit, released, then pressed again. None —disables digital zoom.
Date & Time		See page 5 .

Setting	Icon	Options
Video Out Choose the regional setting that lets you connect the camera to a television or other external device.		NTSC (default) —used in North America and Japan; most common format. PAL —used in Europe and China.
Language		Choose a language.
Format  CAUTION: Formatting deletes all pictures and videos, including those that are protected. Removing a card during formatting may damage the card.		Memory Card —deletes everything on the card; formats the card. Cancel (default) —exits without making a change. Internal Memory —deletes everything in internal memory including email addresses, and album names; formats the internal memory.
About View camera information.		


Pre-tagging for album names

Use the Set Album (Still or Video) feature to pre-select album names before you take pictures or videos. Then, all the pictures or videos you take are tagged with those album names.

First—on your computer

Use Kodak EasyShare software (V 3.0 or higher, see [page 30](#)) to create album names on your computer. Then copy up to 32 album names to the album name list the next time you connect the camera to the computer. See Kodak EasyShare software Help for details.

Second—on your camera

- 1 In any mode, press the Menu button.
- 2 Press ▲/▼ to highlight Set Album , then press the OK button.
- 3 Press ▲/▼ to highlight an album name, then press the OK button. Repeat to select more than one album name.

Selected albums are noted with a check mark.

- 4 To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.
- 5 Highlight Exit, then press the OK button.

Your selections are saved. If you turn on the camera screen, your album selection is displayed on the screen. A plus (+) after the album name means more than one album is selected.

- 6 Press the Menu button to exit the menu.

Third—transfer to your computer

When you transfer the tagged pictures or videos to your computer, Kodak EasyShare software opens and categorizes your pictures in the appropriate album. See the Kodak EasyShare software Help for details.

3

Reviewing pictures and videos

Press the Review button to view and work with your pictures and videos. To save battery power, use the optional Kodak EasyShare camera or printer dock, or Kodak 3-volt AC adapter. (See www.kodak.com/go/cx7330accessories.)

Viewing single pictures and videos

- 1 Press the Review button.
- 2 Press ◀/▶ to scroll backward or forward through pictures and videos. (For fast scrolling, press and hold ◀/▶.)
- 3 Press the Review button to exit Review.

NOTE: Pictures taken at the Best (3:2) quality setting are displayed at a 3:2 aspect ratio with a black bar at the top of the screen.

Viewing multiple pictures and videos

- 1 Press the Review button.
- 2 Press ▼.

NOTE: You can also press the Menu button, highlight , then press the OK button.

Thumbnails of pictures and videos are displayed.

To display the previous or next row of thumbnails, press ▲/▼.

To scroll through the thumbnails one at a time, press ◀/▶.

To display a single view of the selected picture, press the OK button.

Playing a video

- 1 Press the Review button.
- 2 Press ◀/▶ to locate a video. (In Multi-up view, highlight a video, then press the OK button. When a video is highlighted in Multi-up view, the video duration is displayed at the top of the camera screen.)
- 3 To play or pause a video, press the OK button. (If the camera is connected to a television, press ▲/▼ to adjust the volume. See [page 28](#).)

To adjust the volume, press ▲/▼.

To rewind the video, press ◀ during playback.

To replay the video, press the OK button.

To go to the previous or next picture or video, press ◀/▶.

Deleting pictures and videos













- 1 Press the Review button.
- 2 Press ◀/▶ to locate a picture or video (or highlight one in multiple view), then press the Delete button.
- 3 Press ▲/▼ to highlight an option, then press the OK button:
 - PICTURE or VIDEO**—deletes the displayed picture or video.
 - EXIT**—exits the Delete screen.
 - ALL**—deletes all pictures and videos from your current storage location.

To delete more pictures and videos, go to Step 2.


 
 
 
NOTE: You cannot delete protected pictures and videos this way. Remove protection before deleting (see [page 26](#)).

Changing optional review settings

In Review mode, press the Menu button to access optional review settings.

	Magnify picture (page 25)		Slide Show (page 27)
	Play video (page 24)		Copy (page 29)
	Share (page 32)		Video Date Display (Display Date/Time at the start of video playback.)
	Protect (page 26)		Multi-up (page 23)
	Image Storage (page 18)		Picture/Video Information (page 29)
	Album (page 26)		Setup Menu (page 19)

Magnifying pictures




- 1 Press the Review button, then locate a picture.
- 2 To magnify at 2X, press the OK button. To magnify at 4X, press the OK button again. To see different parts of the picture, press / /. To redisplay the picture at the 1X (original) size, press the OK button again.


To exit Magnify, press the Menu button.

To exit Review mode, press the Review button.

NOTE: You can also press the Menu button, highlight , then press the OK button.

Protecting pictures and videos from deletion

- 1 Press the Review button, then locate the picture or video.
- 2 Press the Menu button.
- 3 Press / to highlight Protect , then press the OK button.

The picture or video is protected and cannot be deleted. The Protect icon  appears with the protected picture or video.

- 4 To remove protection, press the OK button again.
- 5 Press the Menu button to exit the menu.



CAUTION:

Formatting internal memory or an SD/MMC card deletes all (including protected) pictures, videos. (Formatting internal memory also deletes email addresses and album names. To restore them, see EasyShare software Help.)


Tagging pictures/videos for albums

Use the Album feature in Review mode to tag the pictures and videos in your camera with album names.

First—on your computer

Use Kodak EasyShare software (V 3.0 or higher) to create album names on your computer, then copy up to 32 album names to the camera's internal memory. See Kodak EasyShare software Help for details.

Second—on your camera

- 1 Press the Review button, then locate the picture or video.
- 2 Press the Menu button.
- 3 Press ▲/▼ to highlight Album , then press the OK button.
- 4 Press ▲/▼ to highlight an album folder, then press the OK button.

To add other pictures to the same album, press ◀/▶ to scroll through the pictures. When the picture you want is displayed, press the OK button.

To add the pictures to more than one album, repeat step 4 for each album.

The album name appears with the picture. A plus (+) after the album name means the picture was added to more than one album.

To remove a selection, highlight an album name and press the OK button. To remove all album selections, select Clear All.


Third—transfer to your computer

When you transfer the tagged pictures and videos to your computer, the Kodak EasyShare software opens and categorizes your pictures and videos in the appropriate album folder. See Kodak EasyShare software Help for details.

Running a slide show

Use the Slide Show to display your pictures and videos on the camera screen. To run a slide show on a television or on any external device, see [page 28](#). To save battery power, use an optional Kodak 3V AC adapter. (Visit www.kodak.com/go/cx7330accessories.)

Starting the slide show

- 1 Press the Review button, then press the Menu button.
- 2 Press ▲/▼ to highlight Slide Show , then press the OK button.
- 3 Press ▲/▼ to highlight Begin Show, then press the OK button.

Each picture and video is displayed once, in the order in which you took them.

To interrupt the Slide Show, press the OK button.

Changing the slide show display interval

The default interval setting displays each picture for 5 seconds. You can increase the display interval up to 60 seconds.

- 1 On the Slide Show menu, press **▲/▼** to highlight Interval, then press the OK button.
- 2 Select a display interval.
To scroll through the seconds quickly, press and hold **▲/▼**.
- 3 Press the OK button.

The interval setting remains until you change it.

Running a continuous slide show loop

When you turn on Loop, the slide show is continuously repeated.

- 1 On the Slide Show menu, press **▲/▼** to highlight Loop, then press the OK button.
- 2 Press **▲/▼** to highlight On, then press the OK button.

The slide show repeats until you press the OK button or until battery power is exhausted.

Displaying pictures and videos on a television

You can use an optional audio/video cable to display pictures and videos on a television, computer monitor, or any device equipped with a video input. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)

NOTE: Ensure that the Video Out setting (NTSC or PAL) is correct (see [page 21](#)). The slide show stops if you connect or disconnect the cable while the slide show is running.

- 1 Connect the optional audio/video cable from the camera video-out port to the television video-in port (yellow) and audio-in port (white). See your television user's guide for details.
- 2 Review pictures and videos on the television.


Copying pictures and videos

You can copy pictures and videos from a card to internal memory or from internal memory to a card.

Before you copy, make sure that:

- A card is inserted in the camera.
- The camera's picture storage location is set to the location **from** which you are copying. See [Image Storage, page 18](#).


Copy pictures or videos:

- 1 Press the Review button, then locate the picture or video.
- 2 Press the Menu button.
- 3 Press $\blacktriangle/\blacktriangledown$ to highlight Copy , then press the OK button.
- 4 Press $\blacktriangle/\blacktriangledown$ to highlight an option:
 - PICTURE or VIDEO**—copies the current picture or video.
 - EXIT**—returns to the Review menu.
 - ALL**—copies all pictures and videos from your selected storage location to the other location.
- 5 Press the OK button.

NOTE:

- Pictures and videos are copied, not moved. To remove pictures and videos from the original location after they are copied, delete them (see [page 24](#)).
- Tags that you applied for print, email, and favorites are not copied. Protection settings are not copied. To apply protection to a picture or video, see [page 26](#).

Viewing picture/video information

- 1 Press the Review button, then press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Picture/Video Info , then press the OK button.
- 3 To view information on the next or previous picture or video, press $\blacktriangle/\blacktriangledown$. Press the Menu button to exit the menu.

4

Installing the software

Minimum system requirements

Windows OS-based computers

- Windows 98, 98SE, ME, 2000 SP1, or XP OS
- Internet Explorer 5.01 or higher
- 233 MHz processor or greater
- 64 MB RAM (128 MB RAM for Windows XP OS)
- 200 MB hard disk space available
- CD-ROM drive
- Available USB port
- Color monitor, 800 x 600 pixels (16-bit or 24-bit recommended)

Macintosh computers

- Power Mac G3, G4, G5, G4 Cube, iMac; PowerBook G3, G4; or iBook computers
- Mac OS X version 10.2.3, 10.3
- Safari 1.0 or higher
- 128 MB RAM
- 200 MB hard disk space available
- CD-ROM drive
- Available USB port
- Color monitor, 1024 x 768 pixels (thousands or millions of colors recommended)

NOTE: Mac OS 8.6 and 9.x do not support the Share button functions. Mac OS X version 10.2.x or 10.3 is recommended for full functionality. To download EasyShare software for Mac OS 8.6 and 9.x, visit www.kodak.com/go/cx7330downloads.

Install the software



CAUTION:

Install Kodak EasyShare software before connecting the camera or optional dock to the computer. Failure to do so may cause the software to install incorrectly.

- 1 Close all software applications that are open on your computer (including anti-virus software).
- 2 Place the Kodak EasyShare software CD into the CD-ROM drive.
- 3 Install the software:

Windows OS-based computer—if the install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.

Mac OS X—double-click the CD icon on the desktop, then click the Install icon.

- 4 Follow the on-screen instructions to install the software.

Windows OS-based computer—select Complete to automatically install the most commonly used applications. Select Custom to choose the applications you wish to install.

Mac OS X—follow the on-screen instructions.

NOTE: When prompted, take a few minutes to electronically register your camera and software.

This lets you receive information regarding software updates and registers some of the products included with the camera. You must be connected to your Internet service provider to register electronically. To register later, see www.kodak.com/go/register.

- 5 Restart the computer. If you turned off anti-virus software, turn it back on. See the anti-virus software manual for details.


For information on the software applications included on the Kodak EasyShare software CD, click the Help button in the Kodak EasyShare software.




5

Sharing pictures and videos

Press the Share button to “tag” your pictures and videos.

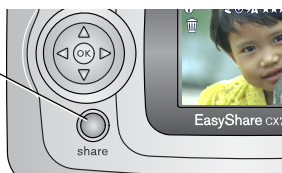When they are transferred to your computer, you can share them by:



	Pictures	Videos
 Print (page 33)	✓	
 Email (page 34)	✓	✓
 Favorites (page 35)	✓	✓


NOTE: Tags remain until removed. If a tagged picture/video is copied, the tag is **not** copied. In a burst series, only the last picture is tagged during Quickview.

When can I tag my pictures and videos?

Press the Share button to tag pictures/videos:

- Any time (The most recent picture/video taken is displayed.)
- Just after you take a picture/video, during Quickview (see [page 12](#)).
- After pressing the Review button (see [page 23](#)).

Tagging pictures for printing

- 1 Press the Share button. Press ◀/▶ to locate a picture.
- 2 Press ▲/▼ to highlight Print , then press the OK button.*
- 3 Press ▲/▼ to select the number of copies (0-99). Zero removes the tag for that picture.

The Print icon  appears in the status area.

- 4 **Optional:** You can apply a print quantity to other pictures. Press ◀/▶ to locate a picture. Keep the print quantity as is, or press ▲/▼ to change it. Repeat this step until the desired print quantity is applied to the pictures.
- 5 Press the OK button. Then press the Share button to exit the menu.

* To tag all pictures in the storage location, highlight Print All, press the OK button, then indicate the number of copies as described above. Print All is not available in Quickview.

To remove the print tagging for all pictures in the storage location, highlight Cancel Prints, then press the OK button. Cancel Prints is not available in Quickview.

Printing tagged pictures

When you transfer the tagged pictures to your computer, the Kodak EasyShare software print screen opens. See Kodak EasyShare software Help for details.

For more information on printing from your computer, printer dock, or card, see [page 37](#).




NOTE: For the best 4 x 6 in. (10 x 15 cm) prints, set the camera to the Best (3:2) print quality setting. See [page 18](#).

Tagging pictures and videos for emailing

First—on your computer

Use Kodak EasyShare software to create an email address book on your computer. Then, copy up to 32 email addresses to the camera's internal memory. See Kodak EasyShare software Help for details.


Second—tag pictures/videos on your camera

- 1 Press the Share button. Press ◀/▶ to locate a picture/video.
- 2 Press ▲/▼ to highlight Email , then press the OK button.
The Email icon  appears in the status area.
- 3 Press ▲/▼ to highlight an email address, then press the OK button.
To tag other pictures/videos with the same address, press ◀/▶ to scroll through them. When the picture you want is displayed, press OK.
To send the pictures/videos to more than one address, repeat step 3 for each address.
Selected addresses are checked.
- 4 To remove a selection, highlight a checked address and press the OK button. To remove all email selections, highlight Clear All.
- 5 Press ▲/▼ to highlight Exit, then press the OK button.
The email icon  appears in the status area.
- 6 Press the Share button to exit the menu.

Third—transfer and email

When you transfer the tagged pictures/videos to your computer, the email screen opens and lets you send them to the addresses you specified. See Kodak EasyShare software Help for details.

Tagging pictures and videos as favorites

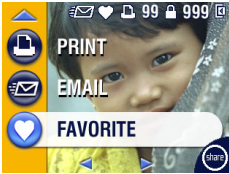

- 1 Press the Share button. Press ◀/▶ to locate a picture/video.
- 2 Press ▲/▼ to highlight Favorite ♥, then press the OK button.
The Favorite icon ♥ appears in the status area.
- 3 To remove the tag, press the OK button again.
- 4 Press the Share button to exit the menu.

Using favorites on your computer

When you transfer Favorite pictures and videos to your computer, you can use Kodak EasyShare software to retrieve, organize, and label them by subject, date, event, or any category you choose.

See Kodak EasyShare software Help for details.


6 Transferring and printing pictures




CAUTION:

Install Kodak EasyShare software *before* connecting the camera or optional dock to the computer. Failure to do so may cause the software to install incorrectly.

Transferring pictures with the USB cable

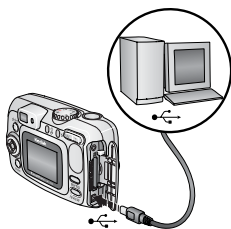

- 1 Turn off the camera.
- 2 Plug the labeled  end of the USB cable into the labeled USB port on your computer. See your computer user's guide for details.
- 3 Plug the other end of the USB cable into the labeled USB port on the camera.
- 4 Turn on the camera.

Kodak EasyShare software opens on your computer. The software prompts you through the transfer process.

NOTE: Visit www.kodak.com/go/howto for an online tutorial on connecting.

You can also use a Kodak multi-card reader or Kodak SD multimedia card reader-writer to transfer your pictures.

Also available for transferring

You can also use these Kodak products to transfer your pictures and videos.

- Kodak EasyShare camera dock, Kodak EasyShare printer dock
- Kodak multi-card reader, Kodak SD multimedia card reader-writer

Purchase these and other accessories at a dealer of Kodak products or www.kodak.com/go/cx7330accessories.

Printing pictures from your computer

For details on printing pictures from your computer, click the Help button in the Kodak EasyShare software.

Ordering prints online

Kodak EasyShare print service (provided by Ofoto www.ofoto.com) is one of the many online print services offered in the Kodak EasyShare software. You can easily:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Order high-quality prints, photo greeting cards, frames, and albums—and have them delivered to your door.

Printing from an optional SD/MMC card

- Automatically print tagged pictures when you insert your card into a printer with an SD/MMC slot. See your printer user's guide for details.
- Make prints at an SD/MMC-capable Kodak picture maker. (Contact a location prior to visiting. See www.kodak.com/go/picturemaker.)
- Take the card to your local photo retailer for professional printing.

Printing without a computer

Dock your camera to the Kodak EasyShare printer dock and print directly—with or without a computer. Purchase this and other accessories at a dealer of Kodak products or www.kodak.com/go/cx7330accessories.

7

Troubleshooting

When you have questions about your camera, start here. Additional technical information is available in the ReadMe file located on the Kodak EasyShare software CD. For updates to Troubleshooting information, see www.kodak.com/go/cx7330support.

Camera problems

If...	Try one or more of the following
The camera does not turn on	<ul style="list-style-type: none"> ■ Remove, then reinsert the batteries. ■ Insert new or charged batteries.
The camera does not turn off and the lens does not retract	<ul style="list-style-type: none"> ■ Place the camera on a Kodak EasyShare camera or printer dock (sold separately), then try again. ■ Connect the camera to a Kodak 3-volt AC adapter (sold separately), then try again.
Camera buttons and controls do not function	See page 2 for more information.
The camera screen does not turn on	<ul style="list-style-type: none"> ■ In any capture mode, press the OK button. ■ Turn the camera off, then on again. <p>To change the camera screen setting so that it is on whenever the camera is on, see Liveview, page 20.</p>
In Review, a blue or black screen is displayed instead of a picture	<ul style="list-style-type: none"> ■ Transfer the picture to the computer. ■ Transfer <i>all</i> pictures to the computer. <p>See page 36.</p>
The pictures remaining number does not decrease after taking a picture	<ul style="list-style-type: none"> ■ Continue taking pictures. The camera is operating normally. <p>(The camera estimates the number of pictures remaining after each picture is taken, based on picture quality and content.)</p>

If...	Try one or more of the following
You cannot take a picture	<ul style="list-style-type: none"> ■ Turn the camera off, then on again. ■ Depress shutter button all the way (page 8). ■ Insert new or charged batteries (page 2). ■ Wait until the ready light is green before attempting to take another picture. ■ Transfer pictures to the computer (page 36), delete pictures from the camera (page 24), switch image storage locations (page 18), or insert a card with available memory (page 7).
Picture orientation is not accurate	<ul style="list-style-type: none"> ■ Set the Orientation Sensor (page 19).
Flash does not fire	<ul style="list-style-type: none"> ■ Check flash setting, and change as needed (page 14).
Battery life is short	<ul style="list-style-type: none"> ■ Wipe the contacts with a clean, dry cloth (page 3) before inserting batteries in the camera. ■ Insert new or charged batteries (page 2).

Computer/connectivity problems

If...	Try one or more of the following
The computer does not communicate with the camera	<ul style="list-style-type: none"> ■ Turn on the camera. ■ Insert new or charged batteries (page 2). ■ Make sure USB cable is securely connected on camera (or dock) and computer port (page 36). ■ Make sure the EasyShare software is installed (page 30).
Slide Show does not run on an external video device	<ul style="list-style-type: none"> ■ Adjust the camera Video Out setting (NTSC or PAL, page 21). ■ Make sure the external device settings are correct (see the device's user's guide).

Picture quality problems

If...	Try one or more of the following
The picture is too dark or underexposed	<ul style="list-style-type: none"> ■ Use Fill flash (page 14) or change your position so light is not behind the subject. ■ Move so that the distance between you and the subject is within the effective flash range (see page 14). ■ To automatically set exposure and focus, press the Shutter button halfway and hold. When the ready light glows green, press the Shutter button the rest of the way down to take the picture. ■ Increase Exposure Compensation (see page 18).
The picture is too light	<ul style="list-style-type: none"> ■ Turn flash off (page 14). ■ Move so that the distance between you and the subject is within the effective flash range (see page 14). ■ To automatically set exposure and focus, press the Shutter button halfway and hold. When the ready light glows green, press the Shutter button the rest of the way down to take the picture. ■ Decrease Exposure Compensation (see page 18).
The picture is not clear	<ul style="list-style-type: none"> ■ To automatically set exposure and focus, press the Shutter button halfway and hold. When the ready light glows green, press the Shutter button the rest of the way down to take the picture. ■ Clean the lens (page 46). ■ Make sure camera is not in Close-up mode if you are more than 27.6 in (70 cm) from your subject. ■ Place the camera on a flat, steady surface or use a tripod.

Camera ready light status

Status	Cause
Ready light glows steady green.	Camera is ready to take a picture or video. Shutter button is pressed halfway down. Focus and exposure are set.
Ready light blinks green.	Picture is being processed and saved to the camera.
Ready light blinks orange.	Flash is not charged. Wait. Resume picture taking when the light stops blinking and turns green.
Ready light glows steady red.	Camera's internal memory or card is full. Transfer pictures to the computer (page 36), delete pictures from the camera (page 24), switch image storage locations (page 18), or insert a card with available memory (page 7).
	Camera processing memory is full. Wait. Resume picture taking when the light turns green.
	Card is read-only. Change storage location to internal memory (page 18), or use a different card.
	Memory card speed is slow. Card cannot be used to take videos. Change storage location to internal memory (page 18). Use this card to take pictures only.
Ready light blinks red and camera turns off.	Batteries are low or exhausted. Replace or recharge the batteries (page 2).

Still having problems?

Visit www.kodak.com/go/cx7330support, or see [Chapter 8, Getting help](#).

8

Getting help

Helpful links

Help with your camera	www.kodak.com/go/cx7330support
Help with Windows operating system and working with digital pictures	www.kodak.com/go/pcbasics
Download the latest camera software and firmware	www.kodak.com/go/cx7330downloads
Optimize your printer for truer, more vibrant colors	www.kodak.com/go/onetouch
Get support for cameras, software, accessories, more	www.kodak.com/go/support
Purchase camera accessories	www.kodak.com/go/cx7330accessories
Register your camera	www.kodak.com/go/register
View online tutorials	www.kodak.com/go/howto

Software help

Click the Help button in the Kodak EasyShare software.

Telephone customer support

If you have questions concerning the operation of the software or camera, you may speak with a customer support representative.

Before you call

Have the camera, camera dock, or printer dock connected to your computer. Be at your computer, and have the following information available:

- Computer model
- Operating system
- Processor type and speed (MHz)
- Amount of memory (MB)
- Amount of free hard disk space
- Camera serial number
- Version of Kodak EasyShare software
- Exact error message you received

Australia	1800 147 701	Netherlands	020 346 9372
Austria	0179 567 357	New Zealand	0800 440 786
Belgium	02 713 14 45	Norway	23 16 21 33
Brazil	0800 150000	Philippines	1 800 1 888 9600
Canada	1 800 465 6325	Portugal	021 415 4125
China	800 820 6027	Singapore	800 6363 036
Denmark	3 848 71 30	Spain	91 749 76 53
Ireland	01 407 3054	Sweden	08 587 704 21
Finland	0800 1 17056	Switzerland	01 838 53 51
France	01 55 1740 77	Taiwan	0800 096 868
Germany	069 5007 0035	Thailand	001 800 631 0017
Greece	00800 441 25605	UK	0870 243 0270
Hong Kong	800 901 514	United States	1 800 235 6325
India	91 22 617 5823	Outside the United States	585 726 7260
Italy	02 696 33452	International Toll Line	+44 131 458 6714
Japan	03 5644 5050	International Toll Fax	+44 131 458 6962
Korea	00798 631 0024		

For the most up-to-date listings, visit:

<http://www.kodak.com/US/en/digital/contacts/DAllInternationalContacts.shtml>


9

Appendix

Camera specifications

For more specifications, visit www.kodak.com/go/cx7330support.

Kodak EasyShare CX7330 zoom digital camera	
CCD	1/2.7 in. CCD; 4:3 aspect ratio; RGB Bayer CFA; 3.3 M pixels (effective)
Output image size (image quality mode)	Best: 2032 x 1524 (3.1 M) pixels Best (3:2): 2032 x 1354 (2.8 M) pixels Better: 1656 x 1242 (2.1 M) pixels Good: 1200 x 900 (1.1 M) pixels
Display	
Color display	1.6 in. (4 cm) color hybrid LCD, 312 x 230 (72 K) pixels
Viewfinder	Real-image, optical viewfinder field-of-view: 85% (@ wide, tele)
Preview	Frame rate: 24 fps
Lens	
Taking lens	3X optical zoom lens, 37-111 mm; f/2.7-f/4.6 (35 mm film camera equivalent)
Focus system	Auto focusing, TTL-AF. Working range: 23.6 in. (60 cm) - infinity @ standard 5.1-27.6 in. (13-70 cm) @ wide/close-up 8.7-27.6 in. (22-70 cm) @ tele/close-up
Digital zoom	1-3.3X with 0.3 step Not supported for movie capture
Lens barrier	Yes
Exposure	
Exposure metering	Multi-pattern TTL-AE
Exposure range	AE range: EV 5.0 to 15.3 (f/2.73, ISO 200-f/5.17, 1/1400 sec., ISO 100) @ wide Full range: EV 1.0 to 16.7 (f/2.8, 16 sec., -f/8, 1/1700 sec.) @ wide

Kodak EasyShare CX7330 zoom digital camera	
Exposure mode	Programmed AE mode: Auto, Sports, Night Shot, Landscape, Macro Exposure Compensation: +2.0EV with 0.5EV step
Shutter speed	2-aperture shutter, 1/2 - 1/1400 sec.
ISO speed	Auto, 100-200
Flash	
Electronic flash	Working range @ ISO 140: 2 - 11.8 ft (0.6 - 3.6 m) @ Wide 2 - 6.9 ft (0.6 - 2.1 m) @ Tele
Flash modes	Auto, Fill, Red-eye, Off
Capture	
Capture modes	Auto, Sport, Night, Landscape, Close-up, Video, Burst
Burst mode	Maximum 3 pictures, 3.0 fps
Still image buffer	16 MB internal memory
Video capture	Image size: QVGA (320 x 240) Frame rate: 15 fps
Image file format	Still: EXIF 2.2 (JPEG compression), file organization DCF Video: QuickTime; CODEC H.263 (video), G.711 (audio)
Image storage	Optional MMC or SD Card  (The SD logo is a trademark of the SD Card Association.)
Internal storage capacity	16 MB internal memory
Review	
Quickview	Yes
Video output	NTSC or PAL
Power	
Kodak Max digital camera batteries 2-AA; 2-AA lithium; 2-AA Ni-MH; CRV3; Ni-MH rechargeable battery pack; 3V DC adapter, optional	
Communication with computer	
USB 2.0 (PIMA 15740 protocol), via USB cable, EasyShare camera dock, or printer dock	
Languages	English, French, German, Spanish, Italian, Brazilian, Portuguese, Korean, Chinese, Japanese

Kodak EasyShare CX7330 zoom digital camera	
Other features	
Self timer	10 seconds
White balance	Auto
Auto sleep mode	8 minutes
Color modes	Color, black & white, sepia
Date stamp	None, YYYYMMDD, MMDDYYYY, DDMMYYYY
Tripod mount	1/4 in. (6.35 mm)
Size	4 in. (103 mm) x 1.5 in. (38 mm) x 2.6 in. (65 mm) @ power off
Weight	6.2 oz (175 g) without battery or card

Tips, safety, maintenance

- Follow basic safety precautions outlined in the “Important Safety Instructions” booklet packed with your camera.
- If you suspect water has gotten inside the camera, turn off the camera and remove the batteries and card. Allow all components to air-dry for at least 24 hours before using the camera again.
- Blow gently on the lens or camera screen to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements are available in some countries. Contact a dealer of Kodak products for more information.
- For rechargeable battery disposal information, visit the Rechargeable Battery Recycling Corporation Web site at www.rbr.com.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or Kodak at www.kodak.com/go/cx7330support.

Storage capacities

File sizes vary. You may be able to store more or fewer pictures and videos.

Picture storage capacity

	Number of pictures			
	Best	Best (3:2)	Better	Good
16 MB internal memory	13	15	20	45
16 MB SD/MMC	16	18	24	43
32 MB SD/MMC	32	36	48	87
64 MB SD/MMC	65	73	97	175
128 MB SD/MMC	131	147	194	350
256 MB SD/MMC	262	294	388	700

Video storage capacity

	Minutes/seconds of video
16 MB internal memory	53 sec.
16 MB SD/MMC	1 min.
32 MB SD/MMC	2 min. 15 sec.
64 MB SD/MMC	4 min. 30 sec.
128 MB SD/MMC	9 min.
256 MB SD/MMC	18 min.

Power-saving features

If no action for	The camera	To turn it back on
1 minute	Screen turns off.	Press the OK button.
8 minutes	Enters auto power off.	Press a button or insert/remove card.
3 hours	Turns off.	Turn Mode dial Off, then back on.

Regulatory compliance

FCC compliance and advisory



Kodak EasyShare CX7330 zoom digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Class B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). See www.kodak.com/go/cx7330downloads.

Numerics

4-way controller, ii

A

A/V out, iii, 28

AA battery, inserting, 2

about picture, video, 29

about this camera, 21

AC adapter, 4

accessories, 36

AC adapter, 4

battery, 3

buying, 42

camera dock, 4

printer dock, 4, 37

SD/MMC card, 7

album, 19

albums, tagging pictures for, 22, 26

alkaline batteries, warning, 2

auto, 9

flash, 14

focus framing marks, 11

power-down, 47

B

batteries

expected life, 3

extending life, 3

inserting, 2

safety and handling, 4

types, 3

battery door location, iii

burst, ii, 17

button

delete, ii, 12

flash/status, 14

menu, ii

OK, 5

on/off, ii

review, ii, 23

self timer/burst, 17

share, ii, 32

shutter, i

zoom, ii, 13

C

cable

audio/video, 28

USB, 1, 36

camera dock, 4

camera dock connector on
camera, iii

camera screen

reviewing pictures, 23

reviewing videos, 23

using as viewfinder, 10

Canadian compliance, 48

caring for your camera, 46

clock, setting, 5

close-up, 9

color mode, 19

computer

connecting camera, 36

transfer to, 36

connector for camera dock, iii

contents, camera box, 1

copy pictures

card to memory, 29

memory to card, 29

to computer via USB cable, 36

CRV3 battery

expected life, 3

inserting, 2

customer support, 42

customizing camera settings, 20

D

date & time, 20

date setting, 5

date stamp, 19, 20

DC-in, ii

delete button, ii

deleting

during quickview, 12

- from internal memory, 24
- from SD/MMC card, 24
- protecting pictures, videos, 26

digital zoom, using, 13

displaying slide show, 27

disposal, recycling, 46

dock

- camera, 4
- printer, 4, 37

downloading pictures, 36

E

EasyShare software, 30

emailing pictures, videos, 34

exposure compensation, 18

external video device

- viewing pictures, videos, 28

F

favorites, tagging, 35

FCC compliance, 48

firmware, upgrading, 49

flash

- settings, 14
- unit, i

focus framing marks, 11

format, 21

G

guidelines, battery, 3

H

help

- camera, 38
- software, 42
- support, 42
- web links, 42

I

icons, mode dial, 9

image storage, 18

information

- about pictures, videos, 29

inserting

- batteries, 2
- SD/MMC card, 7

installing

- SD/MMC card, 7
- software, 31

internal memory

- storage capacity, 47

K

Kodak digital camera batteries, 2

Kodak EasyShare software

- getting help, 42
- installing, 31
- upgrading, 49

Kodak web sites, 42

L

landscape, 9

language, 21

LCD (liquid crystal display). See camera screen

lens, i

light

- ready, ii
- self timer, 16
- sensor, i

lights

- status, ready light, 41

lithium batteries, expected life, 3

liveview, 20

- camera screen as viewfinder, 10

M

Macintosh

- installing software on, 31

magnify picture, 25

maintenance, camera, 46

memory
 inserting card, 7
 storage capacities, 47

menu
 button, ii
menu button, ii
microphone, i
mode dial, ii, 9

modes
 auto, 9
 close-up, 9
 landscape, 9
 night, 9

N

night, 9
Ni-MH rechargeable battery
 expected life, 3

O

OK button, 5
online prints, ordering, 37
optical zoom, 13
orientation sensor, 19
overview
 camera, ii
 camera modes, 9

P

package contents, camera, 1
picture quality, 18
pictures
 checking settings, 6, 7
 copying, 29
 deleting, 24
 emailing tagged, 34
 magnifying, 25
 printing, 37
 printing tagged, 33
 protecting, 26
 quality problems, 40
 reviewing, 23

storage capacity, 47
tagging, 22, 26
taking, modes, 9
transfer via USB cable, 36

power
 auto off, 47
 camera, 4
 switch, ii
printer dock, 4, 37
printing
 from a card, 37
 optimizing printer, 42
 order online, 37
 pictures, 37
 tagged pictures, 37
 without computer, 37

product overview, ii
protecting pictures, videos, 26

Q

quickview
 using, 12

R

ReadMe file, 38
ready light, ii, 41
recycling, disposal, 46
red-eye, flash, 14
regulatory information, 48
review button, ii, 23
reviewing pictures
 as you take them, 12
 camera screen, 23
 deleting, 24
 magnifying, 25
 protecting, 26
 slide show, 27
reviewing videos
 camera screen, 23
 deleting, 24
 protecting, 26
 slide show, 27

running slide show, 27

S

safety, 46

SD/MMC card

inserting, 7

printing from, 37

slot location, iii

storage capacities, 47

SD/MMC card, inserting, 7

self timer

button, ii

light, i

with pictures, 16

with videos, 16

sensor, light, i

service and support

telephone numbers, 42

setting

album, 19

color mode, 19

date & time, 20

date and time, 5

date stamp, 19, 20

exposure compensation, 18

flash, 14

image storage, 18

language, 21

liveview, 20

orientation sensor, 19

picture quality, 18

picture taking mode, 9

self timer, 16

video out, 21

setup mode, using, 20

share button, ii, 32

shutoff, auto, 47

shutter

self timer delay, 16

shutter, problems, 39

sleep mode, 47

Slide Show

problems, 39

slide show

continuous loop, 28

running, 27

software

getting help, 42

installing, 31

upgrading, 49

specifications

camera, 44

storage capacity, 47

support, technical, 42

T

tagging

favorites, 35

for email, 34

for print, 33

when to tag, 32

tagging pictures

for albums, 22, 26

telephone support, 42

telephoto button, ii

television, slide show, 28

time, setting, 5

timer, shutter delay, 16

tips

battery guidelines, 3

camera maintenance, 46

ReadMe file, 38

safety, 46

transfer, via USB cable, 36

trash can, deleting, 12

troubleshooting

camera, 38

computer/connectivity
problems, 39

picture quality, 40

turning camera on and off, 4

U

- upgrading software, firmware, 49
- URLs, Kodak web sites, 42
- USB (universal serial bus)
 - connection location, iii
 - transferring pictures, 36

V

- video out, 21
- videos
 - checking settings, 6, 7
 - copying, 29
 - deleting, 24
 - emailing tagged, 34
 - protecting, 26
 - reviewing, 23
 - storage capacities, 47
 - transfer to computer, 36
 - viewing, 23
- viewfinder, i, ii
 - using camera screen, 10
- viewing picture
 - after taking, 12, 23
 - magnified, 25
- viewing picture, video
 - information, 29

W

- wide angle button, ii
- Windows computers
 - installing software, 31
- wrist strap post, i

Z

- zoom
 - button, ii
 - digital, 13
 - optical, 13

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>