 


3-in-1 SMARTSPORTS!

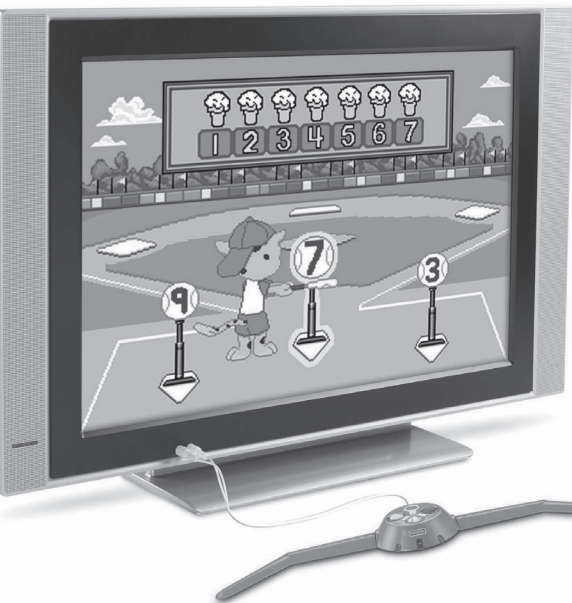

PLUG IT. PLAY IT. LEARN IT!

Choose your sport – baseball, tennis or golf – and get ready to head for the Hall of Fame! Along the way there's so much learning to be enjoyed through interactive games play with fun friends. And kids will have a blast swinging away in active play, giving brain power a boost right along with physical movement. Let's play!



Tennis



Golf



Baseball

CONSUMER INFORMATION

NOTICE ABOUT EPILEPSY AND SEIZURES PLEASE READ THIS NOTICE BEFORE YOU OR YOUR CHILD USE ANY VIDEO GAME.

A very small portion of the population has a condition, which may cause a momentary loss of consciousness when viewing certain kinds of flashing lights or patterns that are commonly present in our daily environment. This condition may cause seizures while watching some kinds of television pictures or playing certain video games. Players who have not had any previous seizures may nonetheless have an undetected epileptic condition.

If you or anyone in your family has experienced symptoms linked to an epileptic condition (e.g. a seizure or loss of awareness), consult your physician before playing video games. We recommend that parents observe their children while they play video games. If you or your child experience any of the following symptoms such as dizziness, altered vision, eye or muscle twitching, involuntary movements, loss of awareness, disorientation or convulsions, DISCONTINUE USE IMMEDIATELY and consult your physician.

Additionally, please follow these precautions whenever playing a video game:

- Do not sit or stand too close to the television screen. Play as far back from the screen as possible.
- Do not play if you are tired or need sleep.
- Always play in a well lit room.
- Be sure to take a 10-15 minute break every hour while playing.

Notes

- Please keep this owner's manual for future reference, as it contains important information.
- Requires six "AA" (LR6) **alkaline** batteries (not included) for operation.
- Adult assembly is required to install batteries, setup and connect to a TV.
- Tool required for battery installation: Phillips screwdriver (not included).
- This product is intended for indoor use only and by one person at a time.
- This product is **not** designed for use with **real balls**. **Do not** hit real balls with this product.

Care

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not use bleach. Do not use harsh or abrasive cleaners. Do not immerse.
- Periodically check this product for wear and damage. Do not use if any parts are damaged.
- This product has no consumer service-able parts. Do not take this product apart.



 
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Visit us on line at
www.service.fisher-price.com


Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

BATTERY INSTALLATION

We recommend using **alkaline** batteries for longer battery life.

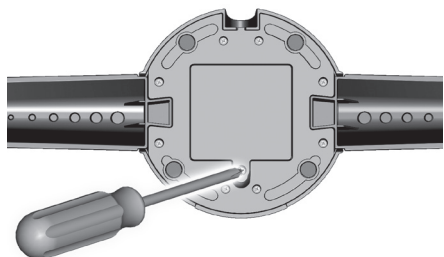

Base

 
- Locate the battery compartment door under the base.
- Loosen the screw in the battery compartment door and remove the door.
- Insert four “AA” (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the base begins to operate erratically, you may need to reset the electronics. Press the power button to turn power off and then press again to turn power back on.
- If you see a low battery symbol on your TV screen , it's time for an adult to change the batteries in the base.



Grip Controller

- Locate the battery compartment door on the back of the grip controller.
- Loosen the screw in the battery compartment door and remove the door.
- Insert two “AA” (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If the controller begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.
- When function is erratic or stops, it's time for an adult to change the batteries.


BATTERY SAFETY INFORMATION



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

 
SET-UP



- Turn the base over.
- Fit the base feet into the grooves on the base.

Hint: Each foot is designed to fit one way. If it does not seem to fit, try the other foot.

 GETTING STARTED

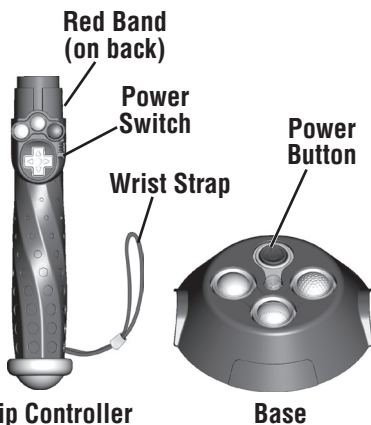


Grip Controller

Base

- Be sure to turn on the power on both the base and the controller! Slide the power switch on the controller to ON ● and press the power button on the base.
- **Always** wear the wrist strap when using the controller.
- **Always** stay three steps away from the TV during play.
- Do not cover the red band on the back of the controller with your hand.
- To change to a different sport, simply remove and replace the sports attachment (tennis racket, baseball bat or golf club) on the grip controller.

 CONNECTING TO YOUR TV

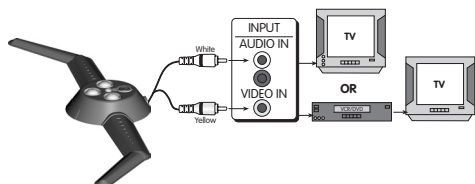

IMPORTANT! Your TV, VCR or DVD player must have audio and video input jacks. Input jacks may be on the back of your TV, VCR or DVD player.

- Place the base in front of your TV. The base should be three feet away from the TV.
- Locate the plug-and-play cord on the base.
- Plug the audio-video pins into the matching colored input jacks on your TV, VCR or DVD player (Yellow for Video In, White for Audio In).

Hint: The plug-and-play cord is designed to easily disconnect if it is pulled. Simply connect the matching connectors located in the middle of the cord.

 


- Turn your TV, VCR or DVD player power ON.
- Press the power button on the base to turn it ON.
- To find the picture on your TV screen, set your TV's, VCR's or DVD player's mode selector to INPUT or VIDEO IN.
- Slide the power switch on the controller ON ●.
- The controller works best when you are standing in the range between the base feet.

Hint: Bright sunlight or incandescent light may affect the range between the base and the controller. Try dimming the light in the room.


- The base will time out after five minutes of inactivity. Press the power button to turn power OFF and then press again to turn back ON. The controller will time out after two minutes of inactivity. Slide the power switch OFF ○ and then back ON ●.

CUSTOMIZE YOUR CHARACTER

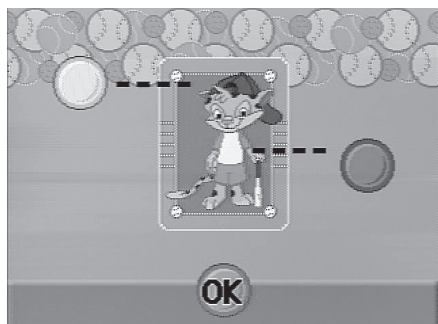

- You can customize your character using the grip controller (without any of the sports attachments).
- Press a colored button on the controller to choose a character to customize.
- Press the yellow and blue buttons on the controller to change the color of the character's clothes.
- Then, press the green button on the controller to confirm your choices.

 
TENNIS



Release Button

- Snap the tennis racket onto the end of the grip controller.
- The Power Serve activity automatically appears on the TV screen and the tennis ball lights on the base.

 Hint: To remove the tennis racket, first press the release button on the back of the controller and then pull the racket off.

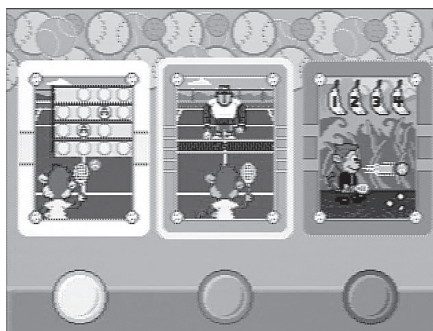

- Press any colored button on the controller to go to the tennis menu. Press a colored button again to choose a game: Tennis Match, Power Serve or Tennis Adventure.



 
POWER SERVE



- Swing the racket. Try to hit as many tennis balls as you can! Then, count how many you hit!
- Warm-up with the ball machine, and then move to the challenge round with another player!



TENNIS MATCH

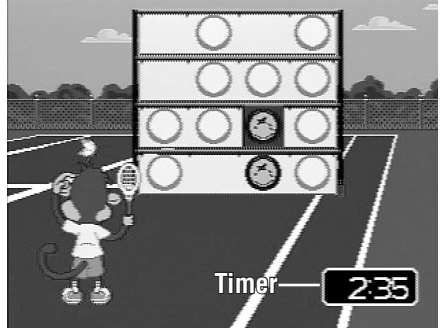

- Use the arrow keys on the controller to choose a circle card on TV screen.
- Then, swing the racket to hit the card with a tennis ball.
- Look to see what you found, then repeat to find the match.
- Find all the matches to clear the board. Look at your time. Can you beat it next time?



TENNIS ADVENTURE




- Use the arrow keys on the controller to move through the jungle.
- Swing the racket to clear the way. Be careful of rolling boulders! Swing the racket to keep them from rolling over you.
- Find bananas and collect them along the way. Simply walk into them!

Level 1 – Count the bananas by ones.

Level 2 – Count the bananas backwards.

Level 3 – Count the bananas by twos.

 
BASEBALL



Release Button

- Snap the baseball bat onto the end of the grip controller.
- The Dunk Tank activity automatically appears on the TV screen and the baseball lights on the base.

 
Hint: To remove the baseball bat, first press the release button on the back of the controller and then pull the bat off.

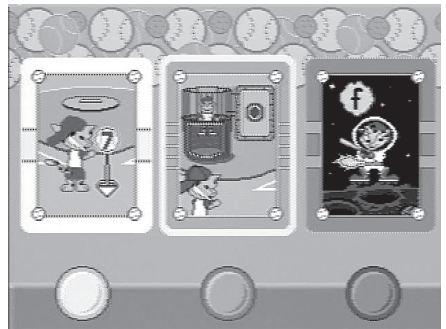

- Press a colored button on the controller to go to the baseball menu. Press a colored button again to choose a game: T-Ball, Dunk Tank or Space Spelling.



 
DUNK TANK

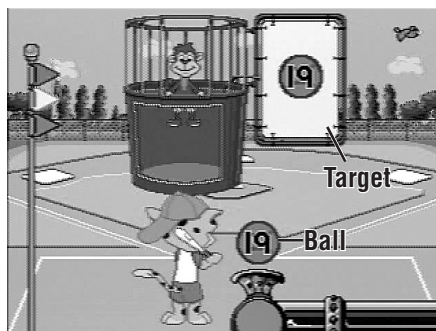

- Listen to and look at the number on the target for the ball you need to swing at.
- When the correct ball pops out of the chute, swing the bat to hit the ball.
- Hit the target and dunk the monkey in the tank!




 T-BALL

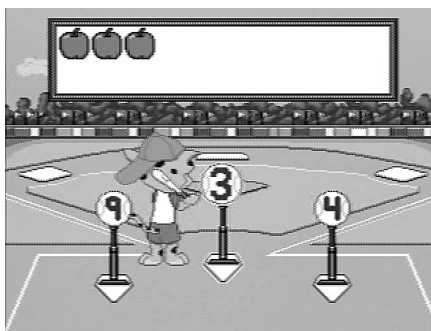


Level 1

 - Count the objects at the top of the TV screen.
- Then, use the arrow keys on the controller to find the correct number on the tee below.
- Swing the bat to hit the ball off the tee.

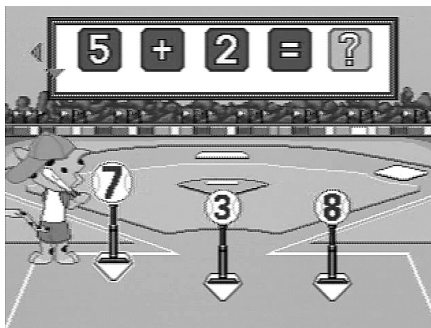

Level 2

 - Listen to and look at the addition problem at the top of the TV screen.
- Then, use the arrow keys on the controller to find the correct number on the tee below.
- Swing the bat to hit the ball off the tee.

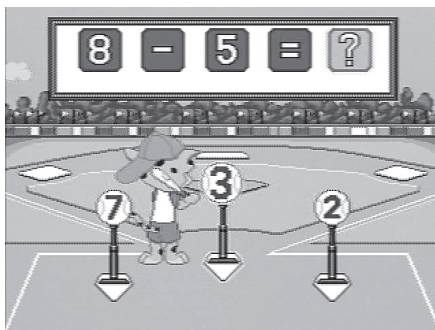

Level 3

- Listen to and look at the subtraction problem at the top of the TV screen.
- Then, use the arrow keys on the controller to find the correct number on the tee below.
- Swing the bat to hit the ball off the tee.

 


SPACE SPELLING



- Look at the word on the lower left of the TV screen.
- Use the arrow keys on the controller to move your character left or right on the TV screen.
- Swing the bat to hit baseballs at the letters to spell the word.
- Don't hit the wrong object or you will lose a life.
- Each level gets harder with more objects to avoid.
- Check your score at the end of every level.


GOLF

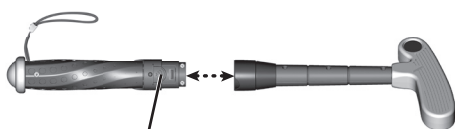

Release Button

- Snap the golf club onto the end of the grip controller.
- The Mini Golf activity automatically appears on the screen and the golf ball lights on the base.

 
Hint: To remove the golf club, press the release button on the back of the controller and pull the attachment off.

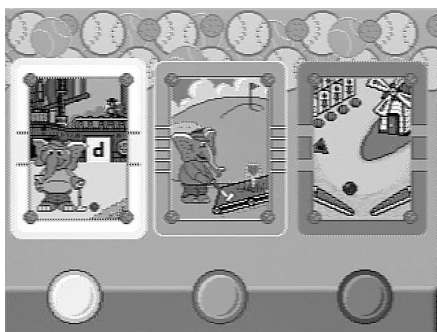

- Press a colored button on the controller to go to the golf menu. Press a colored button again to choose a game from the golf menu: Mini Golf, Driving Range or Pingolf.



 MINI GOLF

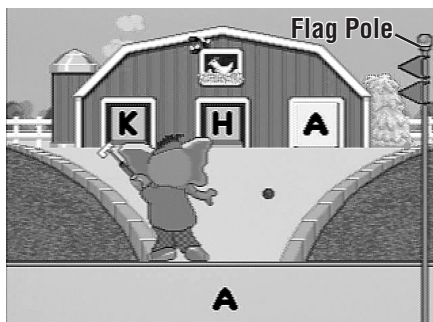


Level 1

- Look at the letter on the bottom of the TV screen.
- Use the arrow keys on the controller to choose a letter on the barn.
- Swing the golf club to hit the golf ball and select the letter.
- Earn a flag for every right answer. Fill the flag pole and advance to the next level.




 DRIVING RANGE

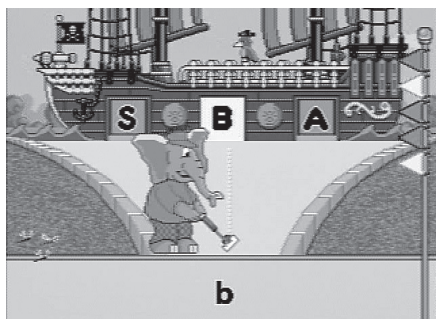


Level 2

 - Look at the letter on the bottom of the TV screen.
- Use the arrow keys on the controller to choose the matching upper case letter (if the letter on the bottom of the screen is lower case) or the matching lower case letter (if the letter on the bottom of the screen is upper case).
- Swing the golf club to hit the letter.

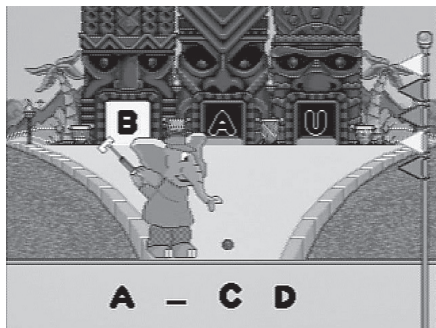


Level 3

 - Look at the letter sequence on the bottom of the TV screen.
- Use the arrow keys on the controller to choose the letter that completes the sequence.
- Swing the golf club to hit the letter.

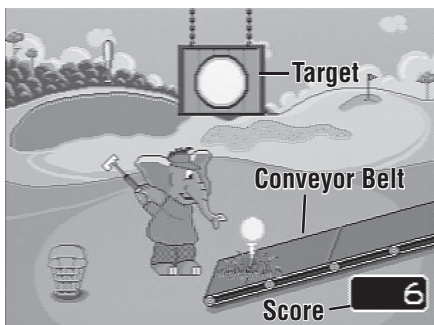

Level 1

 - Look at the color on the target.
- Watch for the matching colored golf ball on the conveyor belt. Swing the golf club to hit the golf ball.
- Look at your score!

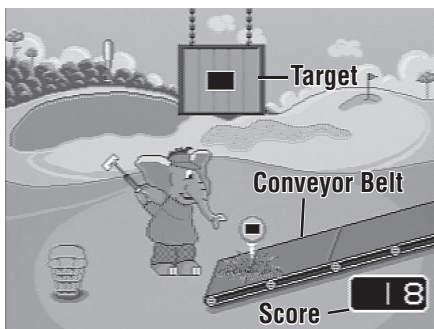


Level 2

- Look at the shape on the target.
- Watch for the matching shape on the golf ball on the conveyor belt. Swing the golf club to hit the golf ball.
- Look at your score!



PINGOLF

 Letters

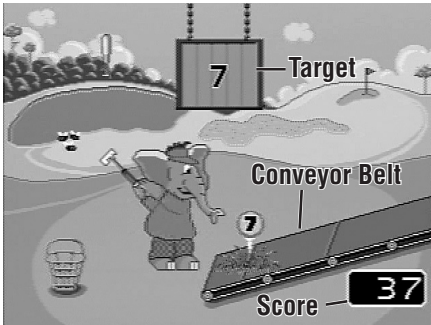

Level 3


- Look at the number on the target.
- Watch for the matching number on the golf ball on the conveyor belt. Swing the golf club to hit the golf ball.
- Look at your score!



Levers

- Swing the golf club to release your ball.
- Swing the golf club each time you need to move the levers and keep the ball in play.
- If you lose a ball, swing the golf club to release the next one. You have five balls in each game!
- Try to earn all the letters in the alphabet by knocking down the castle guards and treasure chests. Once those are down, earn additional letters by entering the castle or lagoon!

TROUBLESHOOTING GUIDE

PROBLEM	CAUSE	SOLUTION
No image on the TV	TV or VCR/DVD is not set to proper input	Press the channel down button on the VCR/DVD or TV and check for an INPUT channel below channel 2.
		Use the menu system on your TV or VCR/DVD to find INPUT or SOURCE. Change to INPUT or SOURCE.
		Refer to your TV's or VCR/DVD's instruction manual.
	Batteries in the base are weak or dead	Replace all batteries in the base with four, new "AA" (LR6) alkaline batteries.
	Base battery compartment door is loose	Fully tighten the screw in the battery compartment door.
No image on the TV	Plug-and-play cord is disconnected	Make sure both ends of the plug-and-play cords are fully connected to the base and your TV or VCR/DVD.
	No wireless connection (between the base and the controller)	Controller power is not on. Slide the power switch on the controller ON ●. Base/controller have automatically shut off. Slide the power switch on the controller OFF and then back ON ●. Press the power switch on the base to turn power OFF and press again to turn power back ON.
Low battery symbol  appears on TV screen	Batteries in the base are weak	Replace the batteries in the base with four, new "AA" (LR6) alkaline batteries.
Response on TV from controller is intermittent	Interference from another infrared device (ie.: remote control)	Do not use the controller in the same room when using this toy.
Image is stretched or distorted on a wide screen TV	Wide screen TV aspect ratio set incorrectly	For best picture, do not use a 16:9 aspect ratio (stretched) wide screen setting. This product is designed for a regular screen TV with a 4:3 aspect ratio (display setting). When viewed on a wide screen TV, you will see black bars on the sides of the image. For more information on changing the aspect ratio, refer to your TV owner's manual.

CONSUMER INFORMATION

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2009 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA

P5959pr-0920

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>