 



OPERATION MANUAL

Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.

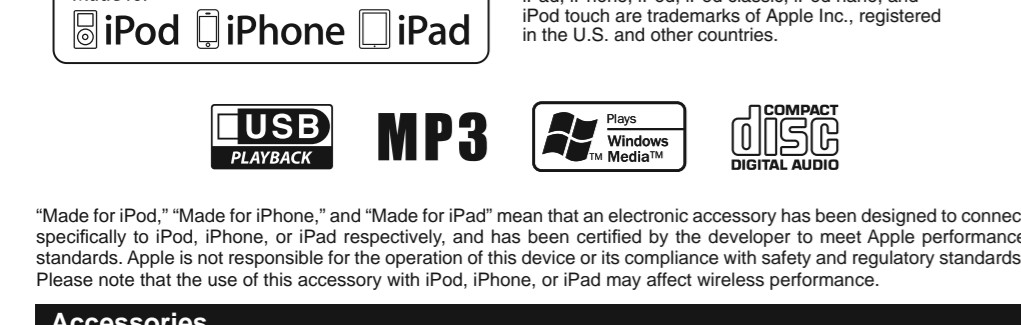

Phone not included.

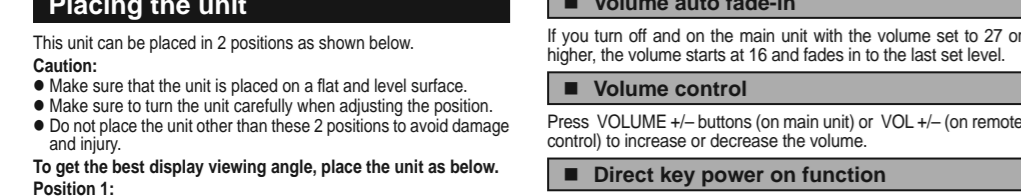

Accessories: The following accessories are included. AC power cord x1, Remote control x1, Stand for iPod/iPad, Dock spacer x1, Carrying strap x1.

Placing the unit: This unit can be placed in 2 positions as shown below. Position 1: On the shelf/table. Position 2: On the floor/ground.

Volume auto fade-in: If you turn on and/or the main unit with the volume set to 27 or higher, the volume starts at 1 and fades in to the last set level.

Volume control: Press VOLUME +/- buttons (on main unit) or VOL +/- (on remote control) to increase or decrease the volume.

Direct key power on function: When you press any of the following buttons, the unit turns on. iPod/iPad, CD, MP3, USB, etc. on the main unit or the remote control.

Auto power off function: The main unit will enter the standby mode when iPod, iPod, iPhone, guitar or microphone is not connected after 15 minutes of inactivity during play.

Auto resume function: The auto resume function will resume the last function and playback should then be a power failure or the AC power and becomes disconnected.

Equalizer: When the EQ(BASS) button is pressed, the current mode setting will be displayed. To change to a different mode, press the EQ(BASS) button repeatedly until the desired sound mode appears.

To turn the power on: Press the POWER ON/STAND-BY button to turn the power on. After use: Press the POWER ON/STAND-BY button to enter the power standby mode.

Display and Subwoofer light up control: The display and subwoofer light can be changed. Main unit: Press DEMO/DIMMER button for more than 3 seconds.

Advanced CD or MP3/WMA disc playback: Random play: The tracks on the disc can be played in random order. Repeat play: Press the REPEAT button on the remote control.




MP3/WMA folder mode (only for MP3/WMA files): Procedure to playback MP3/WMA disc with folder mode: Press the CD button, and load an MP3/WMA disc.

Listening to USB mass storage device/MP3 player: To remove USB memory device: Press the DEMO/DIMMER button to stop playback.

Listening to the iPod, iPhone or iPad: iPod/iPhone/iPad playback (Dock only): Insert the connector to the iPod, iPhone or iPad.

Listening to a CD or MP3/WMA disc: Direct track search: Press the NUMERIC buttons, the desired tracks on the current disc can be played.

Controls and indicators

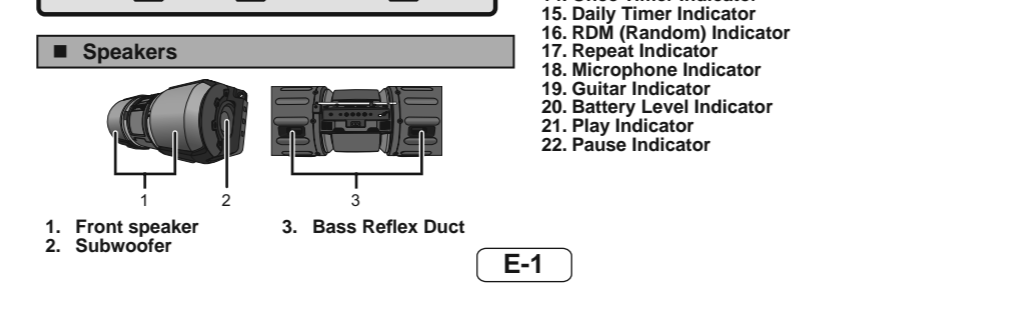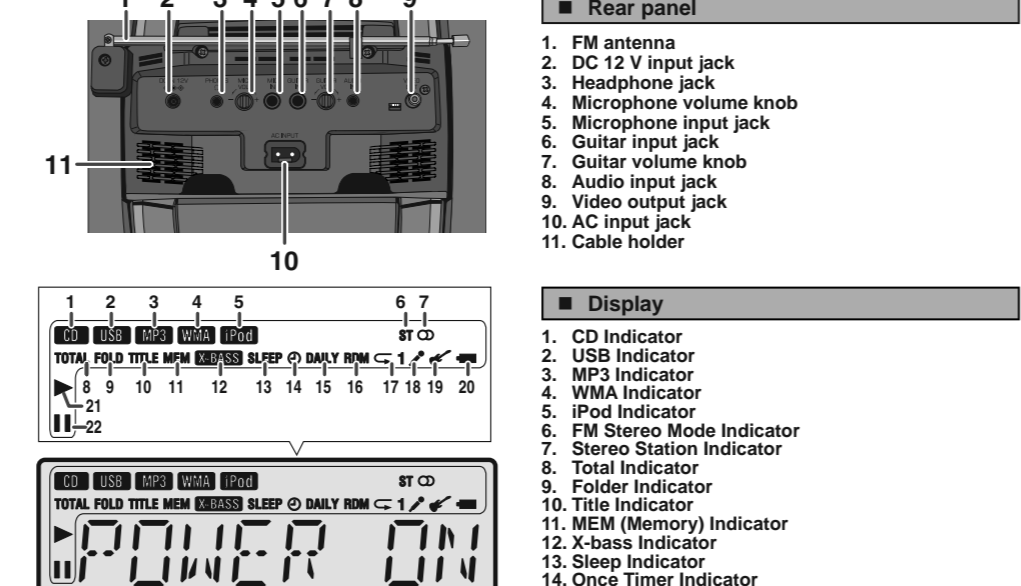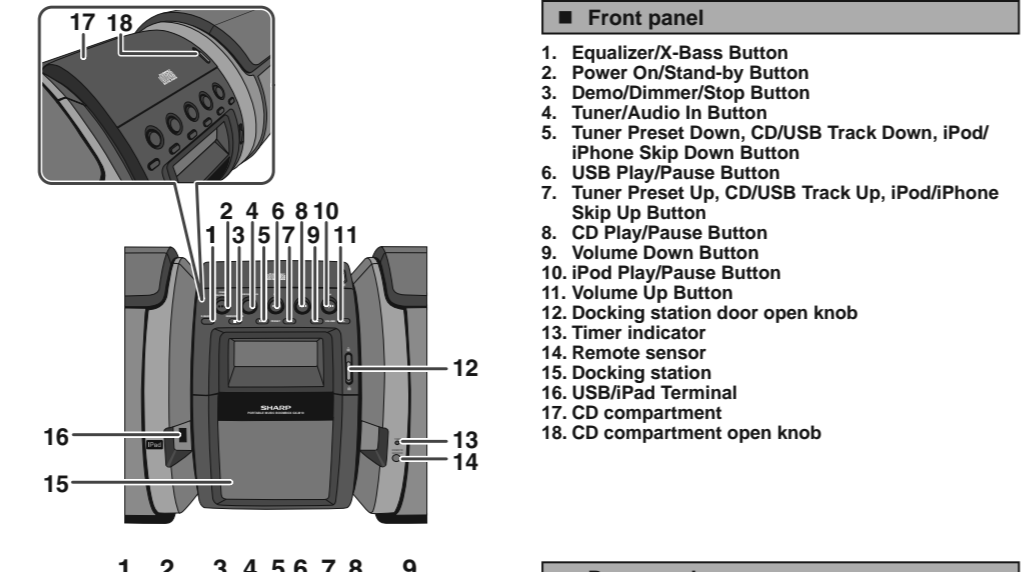

Speakers: 1. Front speaker, 2. Subwoofer, 3. Bass Reflex Duct.

Listening to the iPod, iPhone or iPad: Made for: iPod touch (4th generation), iPod nano (2nd generation), iPod touch (3rd generation), iPod nano (3rd generation), iPod touch (1st generation), iPod nano (1st generation), iPod classic, iPod nano (4th generation), iPod nano (3rd generation), iPod nano (2nd generation), iPod nano (1st generation).

iPod, iPhone or iPad playback (USB only): Press the POWER ON/STAND-BY button to turn the power on. Press the USB button on the remote control or the main unit.

iPod and iPhone connection (Dock only): Insert the connector to the iPod, iPhone or iPad. Place the iPad on the stand for iPad.

Listening to USB mass storage device/MP3 player: To remove USB memory device: Press the DEMO/DIMMER button to stop playback.

Listening to the iPod, iPhone or iPad (continued): iPod/iPhone/iPad playback (Dock only): Press the POWER ON/STAND-BY button to turn the power on.

Listening to a CD or MP3/WMA disc (continued): Disc playback: Press the POWER ON/STAND-BY button to turn the power on.

Listening to the radio: Memorizing a station: You can store 40 FM stations in memory and recall them at the push of a button.

Specifications: Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

Troubleshooting chart: Many problems can be resolved by the owner without calling a service technician. If something is wrong with this product, check the following before calling your authorized SHARP dealer or service center.

Timer and sleep operation (Remote Control only) (continued): Cancelling the timer setting: Press the POWER ON/STAND-BY button to turn the power on.

Setting the clock (Remote control only): Using the once timer and daily timer in combination: For example, use the once timer to listen to a radio program, and use the daily timer to wake up.

 


Specifications (continued): Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

Troubleshooting chart (continued): USB: Device cannot be detected. Playback does not start. Wrong time display.

Specifications: Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

Specifications: Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

Controls and indicators

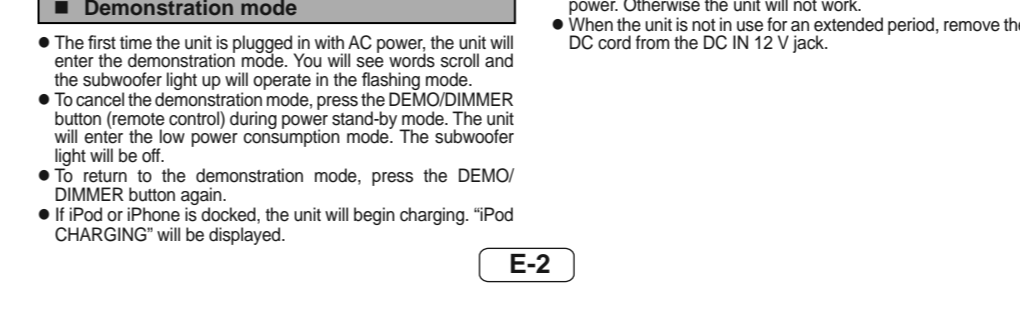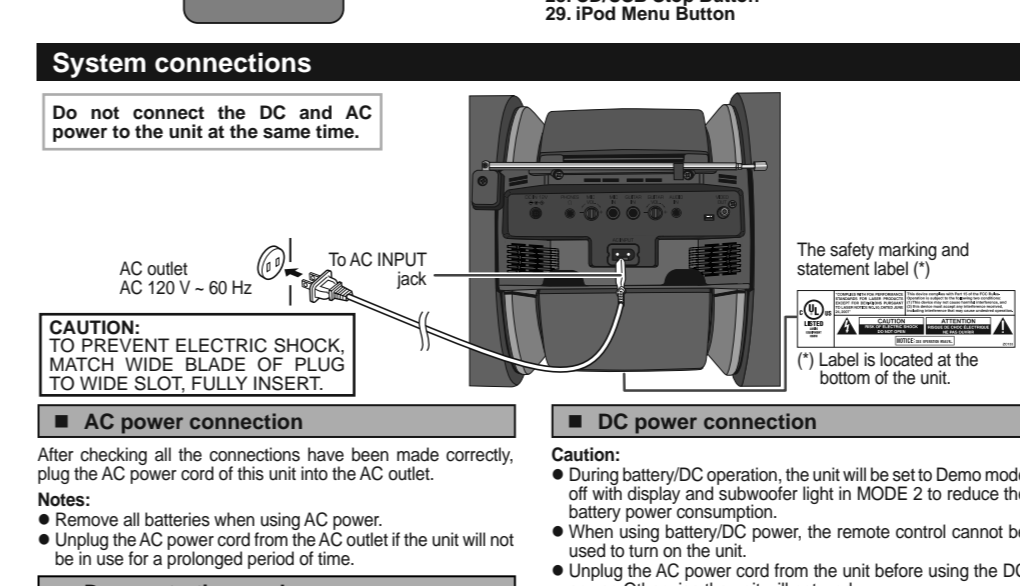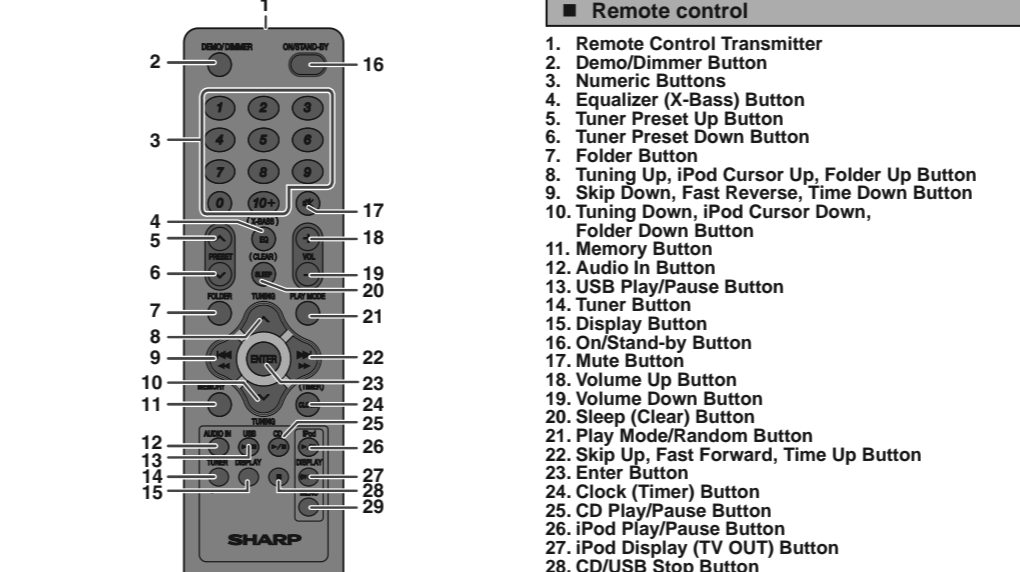

Speakers: 1. Front speaker, 2. Subwoofer, 3. Bass Reflex Duct.

Listening to the iPod, iPhone or iPad: iPod/iPhone/iPad playback (Dock only): Insert the connector to the iPod, iPhone or iPad.

iPod and iPhone connection (Dock only): Insert the connector to the iPod, iPhone or iPad. Place the iPad on the stand for iPad.

Listening to USB mass storage device/MP3 player: To remove USB memory device: Press the DEMO/DIMMER button to stop playback.

Listening to the iPod, iPhone or iPad (continued): iPod/iPhone/iPad playback (Dock only): Press the POWER ON/STAND-BY button to turn the power on.

Listening to a CD or MP3/WMA disc (continued): Disc playback: Press the POWER ON/STAND-BY button to turn the power on.

Listening to the radio: Memorizing a station: You can store 40 FM stations in memory and recall them at the push of a button.

Specifications: Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

Troubleshooting chart: Many problems can be resolved by the owner without calling a service technician. If something is wrong with this product, check the following before calling your authorized SHARP dealer or service center.

Timer and sleep operation (Remote Control only) (continued): Cancelling the timer setting: Press the POWER ON/STAND-BY button to turn the power on.

Setting the clock (Remote control only): Using the once timer and daily timer in combination: For example, use the once timer to listen to a radio program, and use the daily timer to wake up.

Specifications (continued): Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).


 

Troubleshooting chart (continued): USB: Device cannot be detected. Playback does not start. Wrong time display.

Specifications: Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

Specifications: Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

Specifications: Power source: AC 120 V ~ 60 Hz. Power consumption: AC Power on: 30 W. Dimensions: 16.8 x 11.6 x 11.6 cm (6.6 x 4.6 x 4.6 in).

System connections (continued)

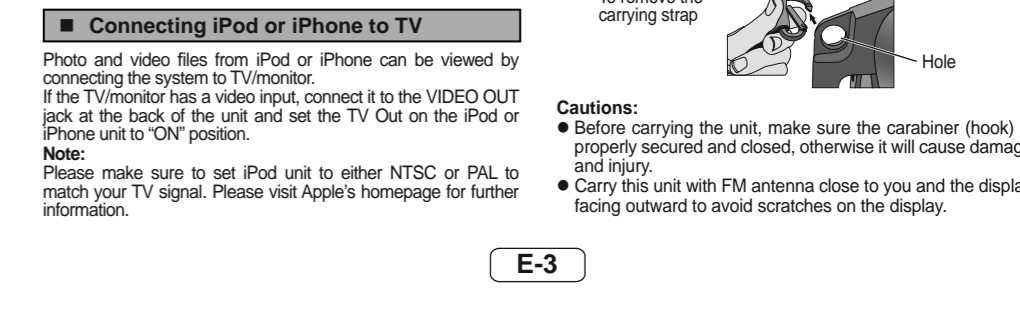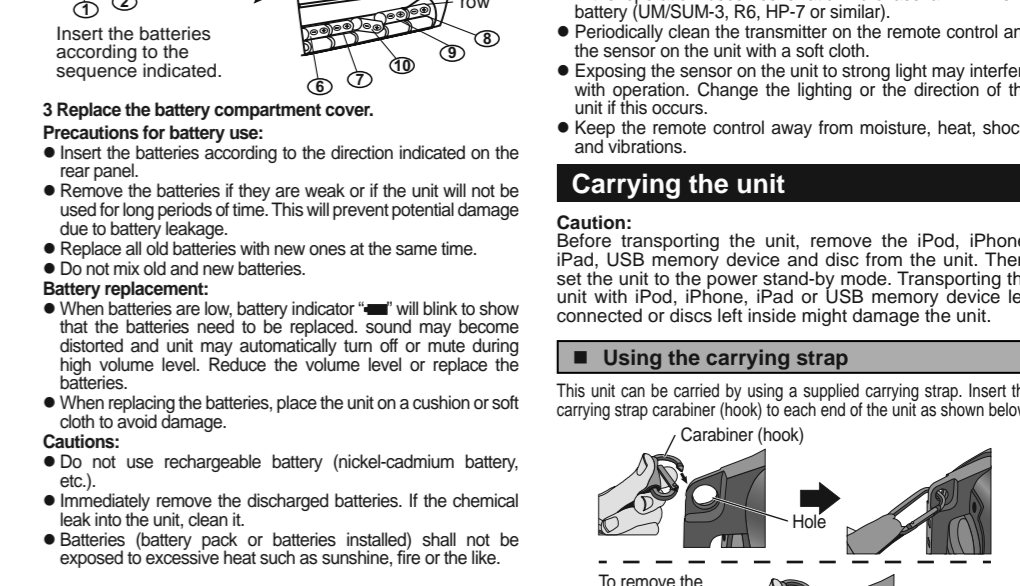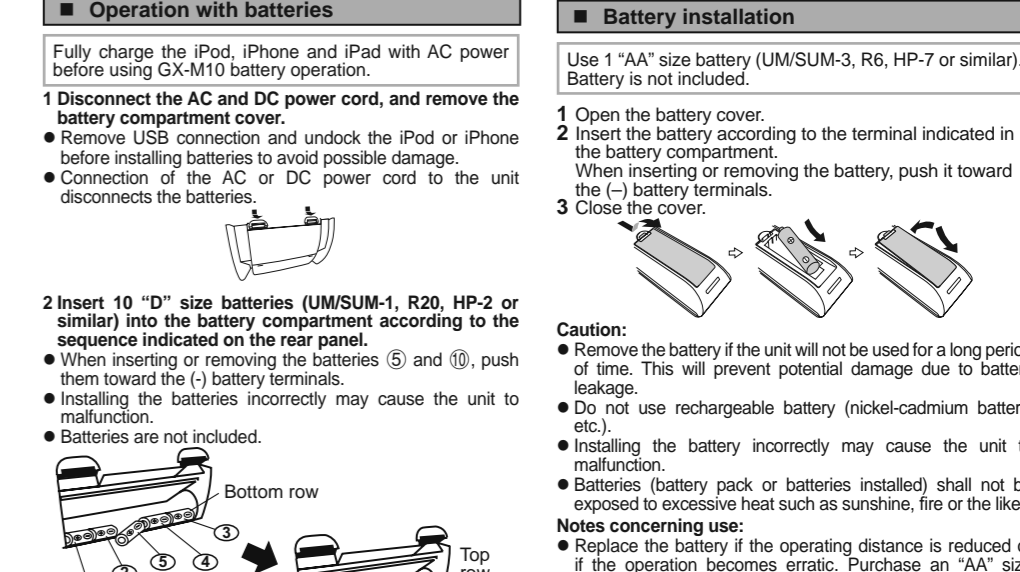

Phone not included.



Accessories: The following accessories are included. AC power cord x1, Remote control x1, Stand for iPod/iPad, Dock spacer x1, Carrying strap x1.

Placing the unit: This unit can be placed in 2 positions as shown below. Position 1: On the shelf/table. Position 2: On the floor/ground.

Volume auto fade-in: If you turn on and/or the main unit with the volume set to 27 or higher, the volume starts at 1 and fades in to the last set level.

Volume control: Press VOLUME +/- buttons (on main unit) or VOL +/- (on remote control) to increase or decrease the volume.

Direct key power on function: When you press any of the following buttons, the unit turns on. iPod/iPad, CD, MP3, USB, etc. on the main unit or the remote control.

Auto power off function: The main unit will enter the standby mode when iPod, iPod, iPhone, guitar or microphone is not connected after 15 minutes of inactivity during play.

Auto resume function: The auto resume function will resume the last function and playback should then be a power failure or the AC power and becomes disconnected.

Equalizer: When the EQ(BASS) button is pressed, the current mode setting will be displayed. To change to a different mode, press the EQ(BASS) button repeatedly until the desired sound mode appears.

To turn the power on: Press the POWER ON/STAND-BY button to turn the power on. After use: Press the POWER ON/STAND-BY button to enter the power standby mode.

Display and Subwoofer light up control: The display and subwoofer light can be changed. Main unit: Press DEMO/DIMMER button for more than 3 seconds.

Advanced CD or MP3/WMA disc playback: Random play: The tracks on the disc can be played in random order. Repeat play: Press the REPEAT button on the remote control.

MP3/WMA folder mode (only for MP3/WMA files): Procedure to playback MP3/WMA disc with folder mode: Press the CD button, and load an MP3/WMA disc.

Listening to USB mass storage device/MP3 player: To remove USB memory device: Press the DEMO/DIMMER button to stop playback.

Listening to the iPod, iPhone or iPad: iPod/iPhone/iPad playback (Dock only): Insert the connector to the iPod, iPhone or iPad.

Listening to a CD or MP3/WMA disc (continued): Disc playback: Press the POWER ON/STAND-BY button to turn the power on.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>