


SHARP

MODEL :

KZ-4S01SS

**TOASTER
INSTRUCTION MANUAL**

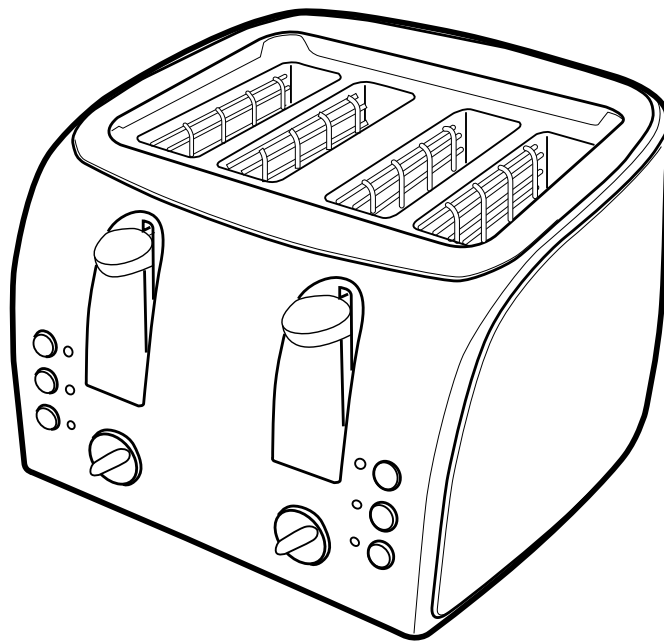

Please read these instruction carefully before operating the appliance.


IMPORTANT SAFEGUARD

When using electrical appliances basic safety precautions should always be followed including the following:


Carefully read all instructions before operating the appliance.

1. Make sure that your mains voltage corresponds to the voltage stated on the rating label of the toaster.
2. Do not touch hot surface. Use handles or knobs only.
3. To protect against electrical shock, do not immerse the toaster or the power cord and plug in water or any other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. **WARNING:** Only allow children to use the appliance without supervision when adequate instructions have been given so that the child is able to use the appliance in a safe way and understands the hazards of improper use.
5. Unplug the unit before cleaning, and when not in use.
6. Do not operate any appliance with a damaged cord or plug, or if the unit appears to be faulty. If its main cord is damaged, it must be repaired by a qualified person.
7. To prevent damage, do not let the cord hang over edge of table or counter, or touch hot surface.
8. Do not place on or near a heat source such as gas or electric cook-top or oven.
9. Do not use the appliance for other than its intended use.
10. Oversized food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock. **WARNING:** Extra care should be taken when removing toasted items less than 100mm.
11. Bread may burn, therefore this toaster must not be used near or below curtains and other combustible materials, use must be supervised at all times.
12. Do not use other accessories or attachments on this appliance.
13. Do not attempt to dislodge food when toaster is in operation, always unplug the toaster and wait until it cools before removing the food.
14. Take care when removing food from the toaster, the surfaces may still be hot and could cause a burn.
15. This appliance has been incorporated with a grounded plug. Please ensure the power outlet in your house is correctly earthed.
16. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
17. Keep the appliance and its cord out of reach of children.
18. Do not use the appliance outdoors.
19. This appliance is intended for household use.

Product introduction

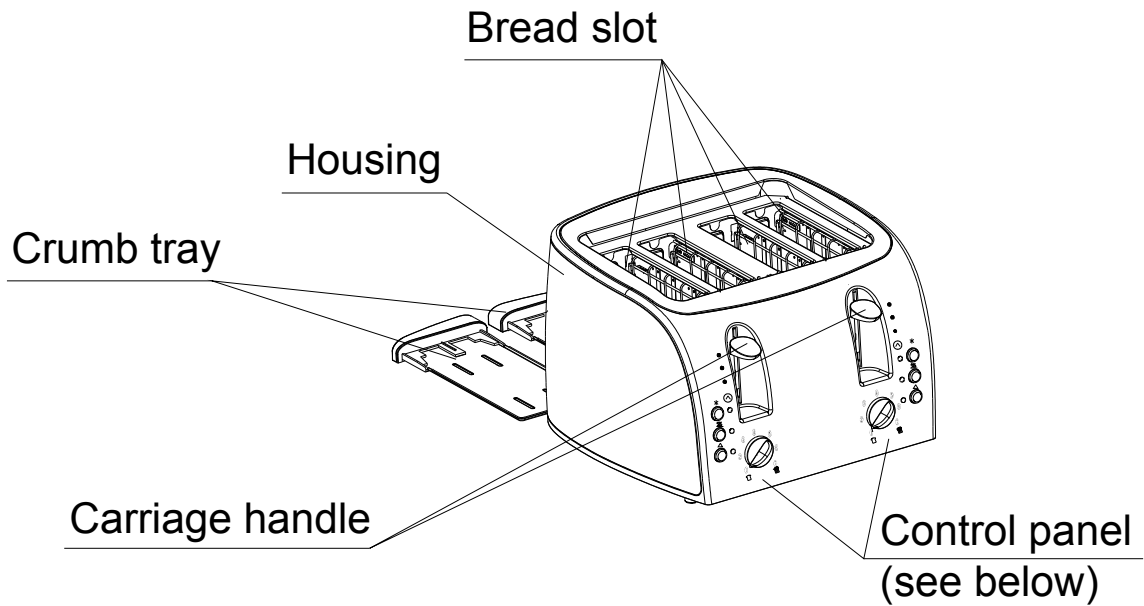

Control panel:

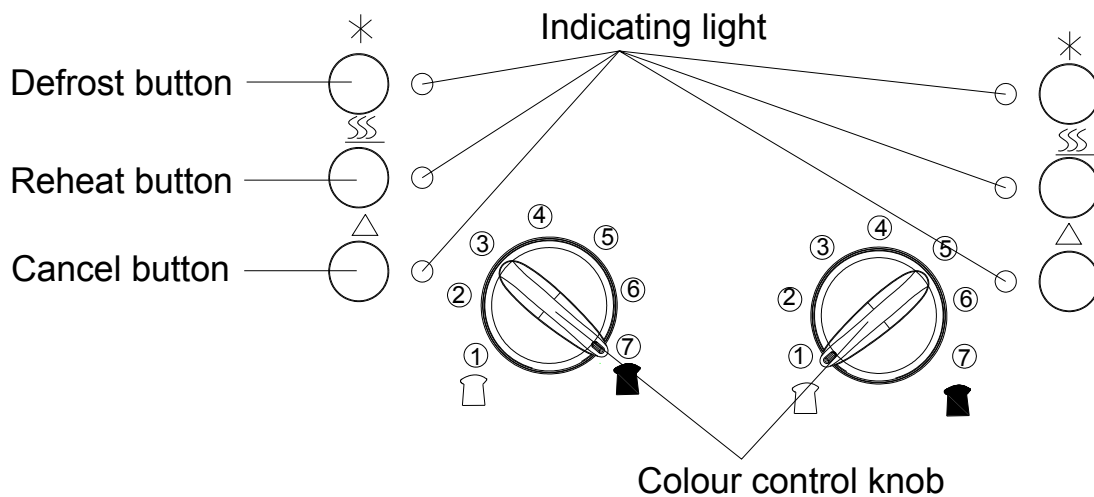

Operation:

NOTE : When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct ODOUR on initial use. This is normal and not detrimental to the performance of the toaster.

1. Remove all protective wrapping attached to toaster.
2. Place up to 4 items into the bread slots. Ensure that the items for toasting are not too thick or too large for the toasting slots. Each side of the toaster can be operated independently, with independent settings ie bread on one side & crumpets on the other.

Note: Make sure the crumb tray is completely positioned in place before using.

3. Insert the power cord into the power outlet.

4. Set the desired browning setting. There are 7-settings , the lowest is set to light and the highest is set to dark.
Note: a) Toast colour for one slice is darker than that for 2 slices at the same level.
b) If toasting continuously, the toast colour will tend to be darker with continuous use on the same setting.
5. Press carriage handle down until it is positioned in place, the lamp beside **Cancel button** will be illuminated, and toast process will commence.
Note: a) Toasting process can be terminated at any time by pressing the **Cancel button**.
b) The carriage handle can only be latched when the appliance connects to the power supply.
6. You may press the **Cancel button** to cancel the operation at any time or when desired toast colour is achieved.
7. Once the bread has been toasted to the selected preset browning, the carriage handle will automatically spring up.
8. Reheated toasted bread, press the **Reheat button** and the lamp beside it will illuminate. In this mode toasting time is fixed, and the carriage handle will automatically spring up at the end of the reheating process.
9. Toasting frozen bread, set colour control knob to your desired colour, press carriage handle down, press **Defrost button** and the lamp beside it will be illuminated, in this mode it will be toasted to your desired colour.

Caution:

1. If toaster starts to smoke, Press **Cancel button** to stop toasting immediately.
2. Remove all protective wrapping prior to placing in toaster.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first, Be sure not to damage the internal mechanism or heating elements when removing bread.
5. Ensure that the bread is the correct size for the toaster and does not protrude above the bread slots. If bread is too thick or the incorrect size it will jam the bread carriage.

Cleaning and maintenance:

1. Disconnect from AC outlet before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.

Environment friendly disposal



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to an
appropriate waste disposal centre.

SHARP

REPLACEMENT WARRANTY

Consumer Electronic Products

Congratulations on Your Purchase!

This Sharp product is warranted against faults in material and manufacture for the period as stated in the table below.

Should you need to make a claim against this warranty please take your product back to the place of purchase.

This warranty does not extend to defects or injuries caused by or resulting from causes not attributable to faulty parts or the manufacture of the product, including but not limited to, defect or injury caused by or resulting from misuse, abuse, neglect, lack of maintenance, accidental damage, improper voltage, liquid spillage, vermin infestation, software, or any alterations made to the product which are not authorised by Sharp.

Please retain your sales documentation, as this should be produced to validate a warranty claim. This warranty is in addition to and in no way limits, varies or excludes any implied rights and remedies under any relevant legislation in the country of sale.

Australian customers: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The criteria of a major failure is defined in the Australian Consumer Law. Should you require any assistance with a major failure please contact Sharp Customer Care.

WARRANTY PERIOD

Microwave Oven	12 months
Small Home Appliances	12 months

SHARP
SHARP CORPORATION OF
AUSTRALIA PTY. LIMITED
A/BV 40 003 039 405
1 Huntingwood Drive
Huntingwood NSW 2148

SHARP CORPORATION OF
NEW ZEALAND LIMITED
59 Hugo Johnston Drive
Penrose, Auckland

SPform 040 (DECEMBER 2012)

IMPORTANT NOTICE: This warranty applies only to products sold in Australia & New Zealand

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>