

**THE
SHARPER
IMAGE®**

Hot Gel + Lather Shaving System

CA900 Instructions

Read and save these instructions.



Table of Contents

Important Safety Instructions	3
General Instructions	6
Variable Temperature Control.....	6
Parts Diagram.....	7
Steps for Successful Hot Gel & Hot Lather Shaving.....	8
Using Lather.....	12
Using Gel.....	12
Removing the Shaving Can.....	13
Troubleshooting Guide	14
Warning.....	15
Keep Away From Water.....	15

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DANGER — To reduce the risk of electric shock:

- Do not reach for the Hot Gel+Lather Shaving System if it has fallen into the water. Unplug it immediately.
- Do not use while bathing or in the shower.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or any other liquid.
- Always unplug the unit from electrical outlet immediately after using it.
- Before cleaning, unplug the appliance.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way. Do not attempt to defeat this safety feature. An authorized service representative should perform servicing. The appliance has no user-serviceable parts.
- The Hot Gel+Lather Shaving System should never be left unattended when the plug is in and the power is on.
- This appliance should not be used by, on or near children or the physically challenged.
- Use the appliance only for its intended purpose as described in this instruction manual.
- Do not use attachments not recommended by the manufacturer.
- Do not pull or twist cord, or wrap cord around appliance.

IMPORTANT SAFETY INSTRUCTIONS

- Never operate the appliance if it has a damaged plug or cord, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return appliance to a service center for examination and repair.
- Never drop or insert objects into openings.
- Do not use outdoors. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- Use only on a level surface.
- Before attaching to shaving cream/gel cans, unplug the appliance.
- Keep cord away from heated surfaces.
- Never use a tool to remove anything from the dispenser.
- To disconnect, turn all controls to OFF, then remove plug from outlet.
- For household use only.
- Ensure gel nozzle is used for gel and lather nozzle is used for lather.

SAVE THESE INSTRUCTIONS

General Instructions

Variable Temperature Control

This unit is equipped with a variable temperature-control dial. Adjust it until the gel or lather is heated to a comfortable temperature.

Note: At the same temperature control position, the gel temperature will be higher than the lather temperature.

Parts Diagram



Steps for Successful Hot Gel & Hot Lather Shaving

IMPORTANT NOTES

- Oversize lather cans may not fit into the protective base.
 - The Control Cap works without the protective base.
 - **Caution:** Do not block the dispenser nozzle with your hand, as hot steam may be emitted during use or when a can gel or lather is low. Replace can when it's running low. Hold hand to the side and under, not in front of the dispenser.
1. Attach the desired gel or lather nozzle (included) and rotate into place. **Caution:** Always use the correct nozzle for gel or lather.
 2. Ensure the **ADJUSTMENT** switch is in the lather position. (See Figure 1.)

Steps for Successful Hot Gel & Hot Lather Shaving

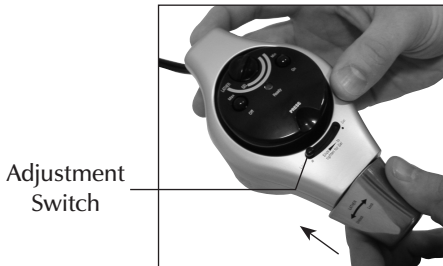 


Figure1

3. To remove the plastic cap from a gel or lather can, use the Cap Removal Tool located in the base of the unit. (See Figure 2.)

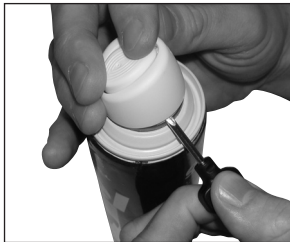 


Figure 2

Steps for Successful Hot Gel & Hot Lather Shaving

4. Turn the dispenser over and depress the **LOCKING TAB**.
5. Carefully align the gel or lather valve with the center seal of the dispenser.
6. Gently insert the can valve into the seal and release the **LOCKING TAB**. (See Figure 3.)

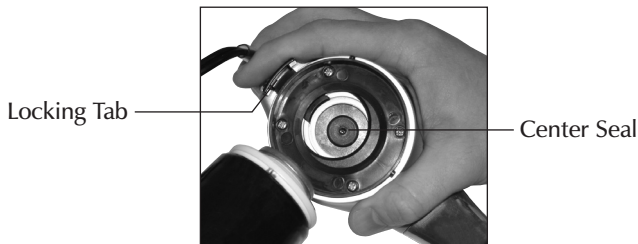 


Figure 3

7. Press firmly until the can locks into place.

Note: If the can valve is not properly inserted into the center seal, gel will leak out of the unit.

Steps for Successful Hot Gel & Hot Lather Shaving

8. To use the dispenser with gel, depress the black **CONTROL CAP** firmly and slide the **ADJUSTMENT** switch to the outermost **GEL** position. (See Figure 4.)

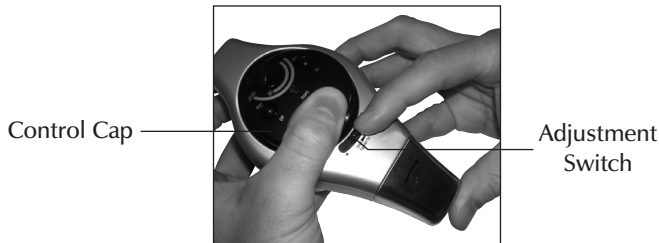 


Figure 4

9. To use the dispenser with lather, slide the **ADJUSTMENT** switch to the **LATHER** position.
10. Insert attached dispenser and can into protective base and rotate clockwise to lock. Plug into wall outlet. Press **POWER** button.
11. When finished shaving, switch the unit off by pressing the **POWER** button. When not in use, ensure the unit is unplugged.

Using Lather

1. Ensure lather can is inserted correctly into the dispenser. (See Figure 3.) Also ensure the lather nozzle is attached to the dispenser.
2. Press the **POWER ON** button on the top of the dispenser.
3. After a few minutes, the red indicator illuminates. The unit is now ready to dispense hot lather. Hold your hand under the dispenser nozzle. With the other hand, press the **CONTROL CAP** until the proper amount of heated lather is dispensed.

Using Gel

1. Ensure the gel nozzle is attached to the dispenser as shown in Figure 1.
2. Press down on the top of the dispenser. Simultaneously slide the **ADJUSTMENT** switch until the top locks in place. Gel is released into the machine to be heated.
3. To switch on, press the **POWER ON** button on the top of the cap.

Using Gel

4. After a few minutes, the red indicator illuminates.
5. To release heated gel into the palm of your hand, press the **GEL RELEASE** button located on the dispenser nozzle.

Removing the Shaving Can

When a gel or lather can is empty, or when traveling, it is necessary to remove the Hot Gel+Lather Shaving System from the can.

1. Ensure the unit is unplugged from the outlet.
2. Holding the can with one hand, turn the **CAP** on the unit counterclockwise. Press the **LOCKING TAB** with the other hand and disconnect the dispenser from the top of the can.
3. Clean the unit with a damp cloth.

DO NOT IMMERSE THE UNIT IN WATER!

Troubleshooting Guide

Problem: Gel is too runny.

Solution: Adjust **TEMPERATURE CONTROL DIAL** to a lower setting.

Problem: Unit fails to heat.

Solution: Ensure the unit is plugged in and turned on. Top red light illuminates and blinks. After one to 3 minutes, the red light stops blinking and the unit is ready to dispense hot gel/lather.

Problem: Unit does not dispense gel.

Solution: Unit is not properly mounted to the gel can. Remove unit from the can and reattach, ensuring a secure fit on top of the can. Or ensure the lather can is using the lather nozzle and perfectly locked.

Problem: The gel/lather is too hot or too much steam is emitted.

Solution: Adjust **TEMPERATURE CONTROL DIAL** to lower setting, or replace can if it has a low amount of gel/lather.

WARNING

KEEP AWAY FROM WATER



IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off?

If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES.

A Public Service Ad from the Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

Warranty

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image warrants this product against defects in materials and workmanship. When repair is not practical, The Sharper Image will have the option to replace the defective product with one that is the same or has similar functionality.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@web.sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

© 2006, 2007 Sharper Image Corporation

Sharper Image Corporation
350 The Embarcadero, Sixth Floor
San Francisco, CA 94105-1218

Shop online: **www.sharperimage.com**

Actual product may differ slightly from the product described herein.

V3 03/07

IB-7341

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>