

# ***Panasonic Broadcast***

## ***AG-DVC20*** ***Menu Information***

## Menu

### Menu list

Menu figures and illustrations are provided for easy-to-understand explanations, and so they are different from the actual menu indications.

#### ■ [TAPE RECORDING MENU]



- 1) [BASIC]
  - [SCENE MODE] -23-
  - [REC SPEED] -19-
  - [BLANK SEARCH] -19-
  - [WIND CUT] -22-
  - [CLOCK SET] -15-

- 2) [ADVANCE]
  - [EIS] -23-
  - [CINEMA] -23-
  - [D.ZOOM] -20-
  - [ZOOM MIC] -20-
  - [MIC LEVEL] -20-
  - [DATE/TIME] -32-
  - [INITIAL SET] -32-

- 3) [SETUP]
  - [FADE COLOR] -22-
  - [AUDIO REC] -32-
  - [REC LAMP] -32-
  - [DISPLAY] -32-
  - [REMOTE] -17-
  - [BEEP SOUND] -32-
  - [LCD SET] -15-
  - [EVF SET] -15-
  - [POWER SAVE] -32-

- 4) [LANGUAGE] -14-

#### ■ [TAPE PLAYBACK MENU]



- 1) [BASIC]
  - [DATE/TIME] -32-

- 2) [ADVANCE]
  - [BLANK SEARCH] -19-
  - [REC SPEED] -19-
  - [REC STDBY] -29-
  - [REC DATA] -32-
  - [REPEAT PLAY] -26-
  - [MIC LEVEL] -20-

- 3) [SETUP]
  - [12bit AUDIO] -30-
  - [AUDIO OUT] -32-
  - [DISPLAY] -32-
  - [REMOTE] -17-
  - [LCD SET] -15-
  - [EVF SET] -15-
  - [POWER SAVE] -32-

- 4) [LANGUAGE] -14-

## Menus related to taking pictures

### ■ [DATE/TIME]

This switches between date and time indications.

- The camera-recorder automatically records the date and time of picture taking on the tape.
- You can also show or change the date/time indication by repeatedly pressing the [DATE/TIME] button on the remote control.

### ■ [AUDIO REC]

Switches the audio (PCM audio) recording systems.

[12bit]: Records audio in "12 bit 32 kHz 4 tracks".

(The original audio signals can be kept after the other audio signals are dubbed.)

[16bit]: Records audio in "16 bit 48 kHz 2 tracks". Audio can be recorded in higher quality.

(If audio signals are dubbed, then the original audio signals will be erased.)

### ■ [REC LAMP]

Set to [ON] and this turns the recording lamp on during recording, which indicates that recording is underway. Set to [OFF] and this does not turn on the lamp even when recording is underway.

### ■ [DISPLAY]

Set to [ON] and the display mode can be switched to all functions. Set to [OFF] and it can be switched to minimum display.

### ■ [BEEP SOUND]

Set to [ON] and confirmation/alarm beeps are issued as follows.

1 Beep

- When you start recording
- When you turn on the power

2 Beeps

- When you pause recording

2 Beeps for 4 times

- When a cassette with its erasure prevention tab set to [SAVE] is inserted, condensation occurs, and at other times. Check the sentence displayed on the screen.

### ■ [POWER SAVE]

[OFF]: When about 5 minutes passed without any operation, the standby mode automatically will be set. In the standby mode, [■■] blinks and it takes time more than usual to start recording after you press the recording start/stop button.

[5 MINUTES]: When about 5 minutes passes without any operation, the camera-recorder automatically turns off to protect the tape or to prevent the battery from running down. When you use the camera-recorder, turn it on again.

- In the following cases, the power may not turn off even when set [POWER SAVE] >> [5 MINUTES].
  - When connecting to the AC outlet (When using the AC adapter)
  - When connecting the DV cable to other equipment

## Menus related to playback

### ■ [REC DATA]

Set to [ON] and the settings (shutter speed, iris/gain values, and white balance settings (-2+), etc.) used during the recordings are displayed during playback.

- When the [AUTO/MANUAL/FOCUS] switch is set to [AUTO], the indication [AUTO] will appear.
- When there is no data, [---] appears on the display.
- If the camera-recorder data of the camera-recorder are played back on other equipment, the settings information is sometimes not displayed normally.

### ■ [AUDIO OUT]

This switches the sound to be played back.

[STEREO]: Stereo sound (main sound and sub sound)

[L]: Left channel sound (main sound)

[R]: Right channel sound (sub sound)

## Other menus

### ■ [INITIAL SET]

When there is a menu that cannot be selected depending on a combination of functions, set to [YES] for changing the menu settings back to the initial shipping condition.

(Language setting cannot be back to the initial shipping condition.)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>