 


### Automatic Synchronization

**Important Note:** If you are having problems with your keyboard or mouse communicating with the receiver, follow the steps below to reestablish communication between your wireless devices. The reset buttons are located on the top of your receiver (Step 1), the bottom of your mouse (Step 2), and the top, left-hand corner of the underside of your keyboard (Step 4).



 
#### For your wireless mouse and/or keyboard:

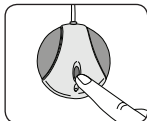


**Step 1:** Press the "Connect" button on the receiver.



**Step 2:** Press the "Reset" button on the bottom of the mouse. The amber LED on the receiver will flash during the synchronization process. When the blinking stops, proceed to Step 3.

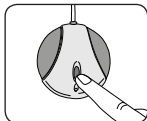

 **Step 3:** Press the "Connect" button on the receiver.

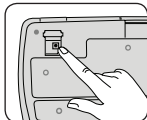

**Step 4:** Press the "Connection" button on the top, left-hand corner of the underside of your keyboard. The amber LED on the receiver will flash during the synchronization process. When the blinking stops, the synchronization procedure is complete. Your keyboard and mouse should now be fully functional.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>