

You can usually assemble this structure alone. However, with first time set-up or with windy conditions, you will need help.

Component List:

1 Screen/Body w/ Hub 1 Tent Bag 1 Pole Bag
4 Tent Poles 3 Awning Poles 1 Stake Bag W/ Stakes & Guy lines

1. Unpack the tent bag, pole bag and separate all of the components. Unroll and unfold the fabric into a rough rectangle with the Eureka! label up.
2. Assemble all of the shock-corded poles. Check and make sure that each section is fully seated into the next.
3. Locate the spider hub fitting, in its bag, attached to the center of the roof. See fig.1& 2.

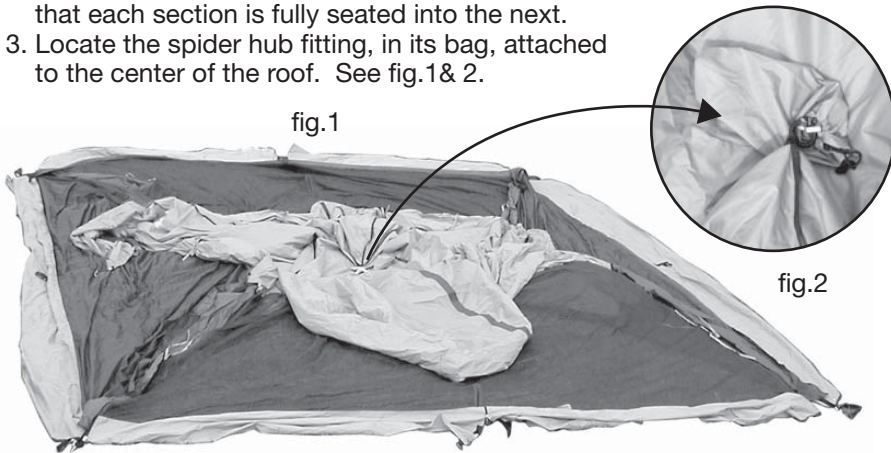


fig.1

fig.2

4. One end of each frame pole has a larger diameter. Slide this end onto one of the arms of the hub. Make sure that it seats securely. Improper fit can cause the hub to break. Slide another pole onto the opposite arm. See fig.3.

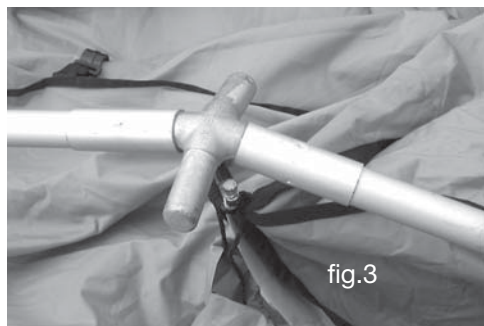


fig.3



fig.4

5. Check and make sure the hub and fabric are aligned. Then, insert the proper corner ring & pin into the bottom pole section. See fig.4.

6. Raise and center the arch over the fabric and attach the remaining two poles to erect a free standing unit. See fig. 5.



fig.5

7. Attach the four center clips to the poles. See fig.6.

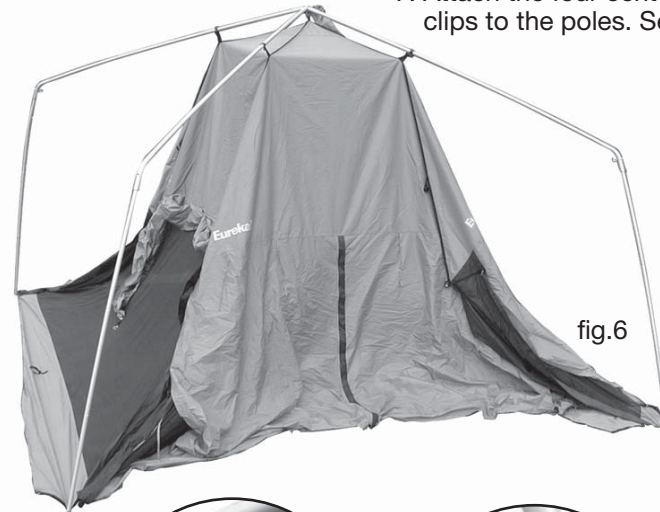


fig.6



fig.7

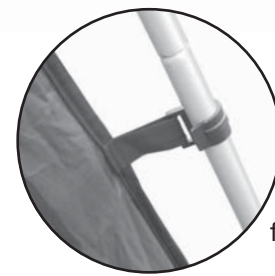


fig.8

8. Attach the bungee cords to the corner hooks. Then attach all remaining clips. See fig.7 & 8.

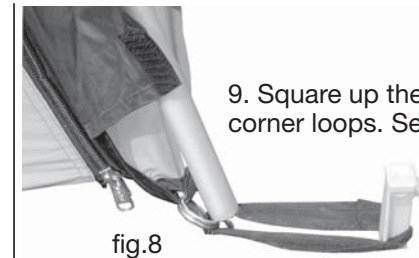


fig.8

9. Square up the tent and stake down all four corner loops. See fig.8.



fig.9

10. Tuck the ground skirts under the walls and into the tent. Your Northern Breeze is ready. See fig.9.



fig.10

11. The Northern Breeze features an awning over each door. Untie one of the awnings and assemble the three awning poles. The tall pole fits in the center grommet with the two shorter poles at the sides. Drive three stakes, each one pole length out from the tent, and attach a cord/slider to the awning loop at each pole and to its stake. Adjust the slider for proper tension. See fig.10.

The Northern Breeze also features an **optional floor**. Lay out the floor inside the tent and attach the tabs to the snaps on the skirt. See fig.11

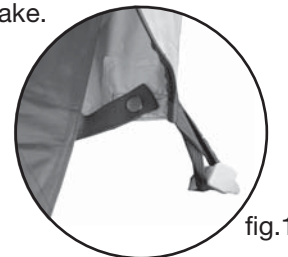


fig.11

LIMITED WARRANTY FOR THE NORTHERN BREEZE:

Eureka!'s Northern Breeze shelter is warranted to the original purchaser that it is free from major defects in materials or workmanship for the life of the product, except as qualified below. We are not responsible for normal wear and tear or for damages caused by shipping, accidents, misuse, alterations, or improper installations. Additionally, although we manufacture Eureka! products with quality fabrics, we are not responsible for the negative effects of climate, pollution, acts of God, and long or semi-permanent installations. Because these shelters are temporary structures, it is necessary that any Eureka! shelter be installed and maintained according to the manufacturer's instructions.

What Eureka! Will Do:

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product, at our option, without charge.

How to Obtain Warranty Service:

Return the product, freight prepaid, to the Eureka! Dealer from whom it was purchased; or, contact Eureka's Customer Satisfaction Department for return authorization: toll free 1-800-572-8822

Collect shipments or shipments without return authorization cannot be accepted. The product registration card packaged with our product need not be returned for the warranty to be effective and for you to receive warranty service.

THERE ARE NO OTHER EXPRESS WARRANTIES BEYOND THE TERMS OF THIS LIMITED WARRANTY. IN NO EVENT SHALL EUREKA! BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

How State Law Relates To This Warranty:

This warranty gives you specific legal rights, and you may have other rights that vary from state to state.

CAUTION:

Good judgment and common sense must be used for each installation and take down. Since weather is unpredictable, it is the responsibility of the individual installing the shelter to determine the proper time and method to install, secure and dismantle the shelter. Eureka! shelter products are manufactured for use as temporary protection from sun and light rain. Evacuate the shelter in threatening or severe weather.

WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS SHELTER FABRIC.

This shelter meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.

GUYLINES:

Should winds or storms arise, do not count on staking alone to keep your shelter secure. It's important to put in the extra time to guying out. Correctly done, it can save your shelter during exceptional weather. Attach parachute cord [not provided] to the corner hooks and stake it to the ground three or four feet from the edge of the shelter.

ULTRAVIOLET LIGHT:

Ultraviolet light damage to the shelter fabric is caused by excessive exposure to sunlight. While our fabrics are UV resistant, any synthetic fabric is susceptible to UV degradation. UV damage will cause nylon and polyester to become brittle and tear easily. UV damage can be minimized by erecting shelters on sites with low exposure to direct sunlight.

CLEANING:

- Clean the shelter by setting it up and wiping it down with a mild soap (liquid hand soap) and lukewarm water solution. Rinse thoroughly and dry completely. Never use detergent, washing machines or dryers because they can damage the tent's protective coating and seams. After cleaning, be sure the shelter is completely dry, especially the heavier, double-stitched areas such as the seams, before storing or mold and mildew are likely to grow.
- Clean the poles with a cloth and lubricate them with silicone spray. This is especially necessary after oceanside camping trips to remove salt spray so the poles don't corrode or stay gritty.

ALTERATIONS OR MODIFICATIONS:

DO NOT misuse, modify or alter this product in any way from its condition at the time of sale. Alteration, modification or any use of this product contrary to the accompanying written instructions shall void the warranty. Moreover, any misuse, alteration or modification of the product shall absolve Johnson Outdoors Inc. of any liability for property damages or injuries sustained as a result of such misuse, modification or alteration.



LEAVE NO TRACE

Seven General Principles

1. PLAN AHEAD AND PREPARE
2. TRAVEL & CAMP ON DURABLE SURFACES
3. DISPOSE OF WASTE PROPERLY
4. LEAVE WHAT YOU FIND
5. MINIMIZE CAMPFIRE IMPACTS
6. RESPECT WILDLIFE
7. BE COURTEOUS OF OTHER VISITORS

To learn more...

WWW.LNT.ORG

REV C 11.07

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>