

Dear customer,

Please read these operating instructions carefully and pay particular attention to the safety notes indicated in the first pages. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.



The warning triangle and/or the key words (Warning!, Caution!) emphasize information that is particularly important for your safety or correct functioning of the appliance.



This symbol guides you, step by step, in the operation of the appliance.



The information marked with this symbol provides additional instructions and practical tips on the use of the appliance.



Tips and information about economical and ecological use of the machine are marked with the clover symbol.

Should any problems arise, this booklet provides instructions on how to solve them by yourself; see section "Something not working?".

If this information is not sufficient, please contact our nearest Service centre (address and telephone numbers are indicated on the enclosed leaflet).

Printed on recycled paper.
People who think ecologically, act accordingly..

Contents

Safety instructions.....	4-6
General instructions	6
Discarding	7
Tips for environmental protection	8-9
Structure of the appliance.....	10-16
Front view	10
Rear view	10
Control panel.....	11-16
Brief operating instructions.....	16
Drying.....	17-19
Before the first drying cycle	17
Sort out the laundry.....	17
Open the door	17
Load the laundry.....	17
Switch the machine on, Select the drying programme/time.....	18
Start the machine.....	18
Remove or add laundry	18
End of drying cycle.....	19
Switch the tumble dryer off	19
Clean the filters.....	19
Adjusting the level of conductivity.....	20
Programme charts	21
Hints & tips on drying	22
Care symbols	22
Cleaning and care	23-24
External cleaning.....	23
Cleaning the door	23
Cleaning the filters.....	23-24
Cleaning the drum	24
Cleaning the panel and the controls	24
Something not working?	25-26
Technical specifications	27
Electrical connection	27
Unpacking	28
Special accessory.....	28
Kit washing/drying column	28
Door reversal.....	28
Service	29



Safety instructions

It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.

The safety of AEG appliances complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes. You **MUST** read them carefully before installing or using the appliance.

General safety

- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Force Centre or your AEG dealer. Always insist on genuine AEG spare parts.
- Before starting the appliance check that the rated voltage and the type of current indicated on the rating plate correspond to those which exist where the dryer is installed. The type of fuse is also indicated on the rating plate.
- Never start the appliance if the electrical supply cable is damaged or the control panel or worktop are so damaged that inner components can be reached.
- Risk of fire: items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Unplug the appliance before carrying out any cleaning or maintenance operations.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Do not lean on the open door, the appliance could turn over.
- Never spray the machine with a jet of water. Danger of electric shock!
- If the drying programme is interrupted in order to remove the laundry: the laundry and the drum could be very hot.

Child safety

- Children are often not aware of how dangerous electrical appliances can be. When the machine is working, they should be carefully supervised and not be allowed to play with the appliance - there is a risk that they could become trapped inside.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children's reach.
- Make sure that children or pets do not climb into the drum.

Positioning and connection

- Follow the separate instructions for positioning and connection.
- Check that the appliance has not been damaged during transport. Never connect a damaged appliance! If this is the case, contact your dealer.
- The dryer must not be installed in a room where the temperature can fall below zero or is higher than + 35°C.
- The dryer must be levelled.
- The dryer must not be positioned on a thick pile carpet as this would prevent air from circulating freely through the ventilation slots.
- If the appliance is installed near a gas, coal or electric heater, an insulating non-inflammable panel must be inserted between the dryer and the heater (size: 85x57.5 cm).
- The plug of the dryer must always be accessible.
- The dryer's exhaust must not be fed into a cooker hood, or a chimney or flue pipe designed to carry the exhaust from a fuel burning appliance.
- Ensure the room is well ventilated.
- A permanent connection to the mains power supply can only be carried out by a qualified electrician.

Proper use

- For safety reasons, the appliance must not be modified.
- This appliance is designed for domestic use only. If the dryer is used for any other purposes or is not used correctly, the manufacturer accepts no responsibility for any possible damage that might occur.
- Dry only items that have been washed with water. Never dry items that have been in contact with inflammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). These are of a volatile nature and could cause an explosion or a fire.
- Items containing rubber foam or materials similar to rubber foam must not be dried in the appliance. Fire danger!

General instructions

- Starched fabrics leave traces of starch in the drum, therefore they should not be dried in the appliance.
- If the load to be dried exceeds the maximum weight indicated, creasing may occur. For particularly delicate fabrics, the maximum load should not exceed 1.5 kg.
- For your information: 70 per cent of fabric wear is caused by wearing the garments, 20 percent by washing and only 10 percent by drying them in a tumble dryer. In your appliance, fluff accumulates in the filter. Only 0.03g fluff per Kilo will be lost by your laundry when being machine dried.



Discarding

Packaging materials

Dispose of your tumble dryer's packaging materials correctly. All materials are environmentally friendly and can be disposed of without any danger.

The plastic parts can be reused:

- The external plastic cover and the bags inside are made of polyethylene (>PE<).
- The padding is made of CFC free polystyrene foam (>PS<=>).


Cartons are made of recycled paper and should be disposed of in paper collection containers.

Appliance



Warning! When the appliance is disposed of, pull the plug out of the socket, cut off the electrical supply cable and destroy the plug with the remaining cable. Disable the door catch in order to prevent children from becoming trapped inside while playing.

Use an authorised disposal site for your old appliance.

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Tips for environmental protection

- During washing, try not to use fabric softeners!
If the laundry is machine dried, it will remain soft even without using fabric softeners.
- Shake out your laundry!
Shake out the laundry before putting it into the dryer in order to reduce the drying time and creasing.
- Spin the laundry properly before drying it!
As a general rule, the more the laundry is spun, the more economically your dryer works.
In the following table, indications on consumption are provided, according to the spin speed. The data refers to 6 kg of laundry that have to be store dried.

Spinning:			Drying cycle:	
Revolutions per minute	Residual dampness		Time required in minutes	Energy requirement kWh
	in litres	in %		
800	4,2	70	110	4,0
1200	3,2	53	80	3,2
1400	3,0	50	75	3,0
1800	2,5	42	65	2,4

- Please observe the full load specifications!
The machine works more economically if it is fully loaded, as indicated in the programme charts.
- Select the correct drying programme!
Select the drying programme suited to the type and quantity of laundry, so that your dryer will work more economically. Some consumption values:

Type of laundry	Desired degree of dryness	Load in kg	Duration in minutes	Energy consumption in kWh
Cotton ¹	KASTDROOG/A RANGER	6	110	4,0
Cotton ¹	STRIJKDROOG/A REPASSER	6	100	3,6
Mixed fabrics ²	KASTDROOG/A RANGER	3	55	1,75


1) previously spun at 800 rpm

2) previously spun at 650 rpm.


- The "LAGE TEMP/DELICAT" function: can only be used for loads up to 3 kg!
- Clean the fluff filter after each drying cycle!

Structure of the appliance


Front view

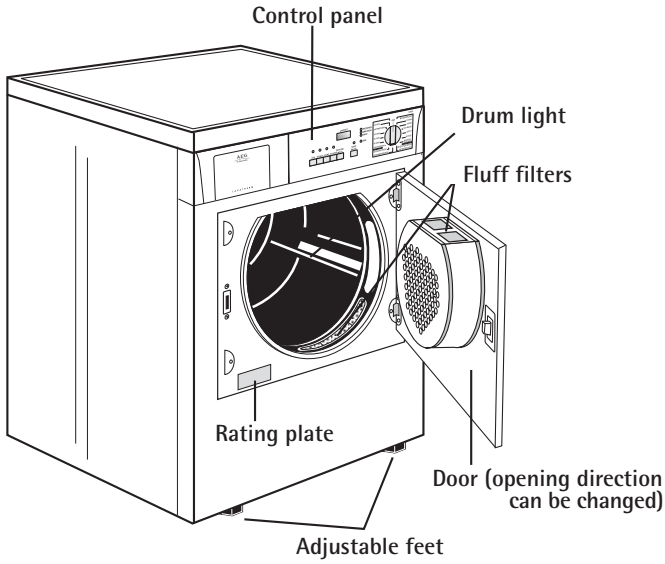

Rear view

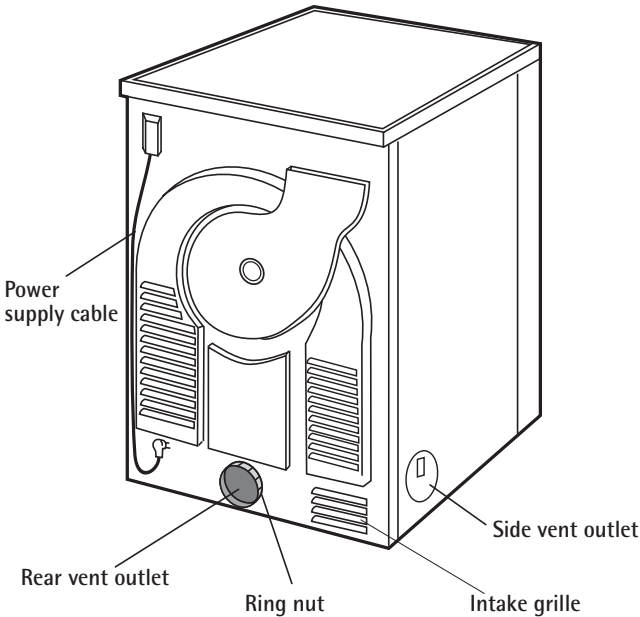

Control panel

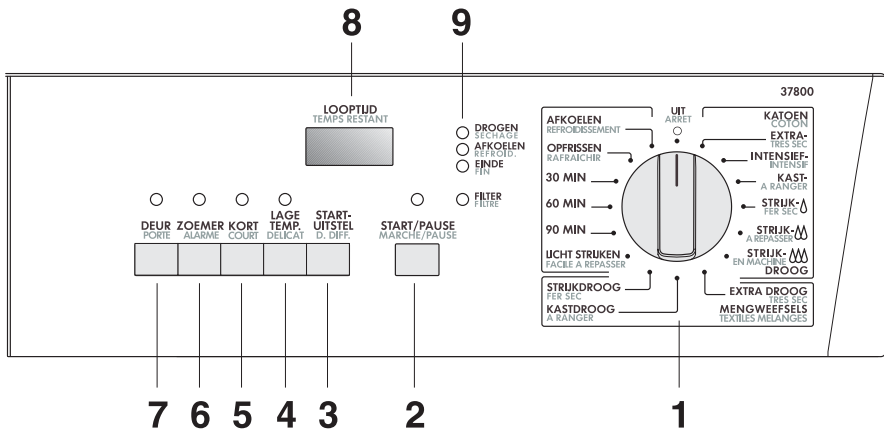

1 Programme/Time Selector Dial

Allows you to select electronically controlled or time controlled drying.

Turn the dial to the required programme or time.

Electronically controlled drying (automatic)

The appliance runs these programmes with the help of probes which detect the degree of dampness of the laundry.

Simply select the programme according to the type of laundry and degree of drying required.

Time controlled drying

This can be used to finish off drying if necessary. Select the 90 or 60 minute programme for cottons or the 30 minute programme for synthetics.

To cancel a programme which is running, turn the programme selector dial to "UIT/ARRET".

At the end of drying, turn the selector dial to "UIT/ARRET" to switch the machine off before removing the laundry.

2 START/PAUSE-MARCHÉ/PAUSE button

Press this button to start the dryer after having selected the programme and the options.

The relevant light will stop flashing. If you have chosen a "STARTUIT-STEL/D.DIFF." delayed start, the machine will begin the countdown.

If the door of the appliance or the small door at the bottom is opened while the programme is running, this button must be pressed again after closing the door in order to restart the programme from the point at which it was interrupted.

This button must also be depressed after a power failure.

In both cases the light of the "START/PAUSE-MARCHE/PAUSE" button flashes to remind you that the start button needs to be pressed again.

3 "STARTUITSTEL/D.DIFF." button

This button allows you to delay the starting of the programme by 12 hours max.

This option must be selected after having selected the programme and before pressing "START/PAUSE-MARCHE/PAUSE" to start the programme.

Every time the button is pressed, the time is increased by 30 minutes, until the display shows a delay of "2 hours". After this, the delay is displayed hour by hour.

The minutes or hours of delay that have been selected are displayed for 2 seconds, then the display shows the duration of the previously selected programme.

The countdown begins after you have pressed the "START/PAUSE-MARCHE/PAUSE" button.

To cancel the delay time press the "START/PAUSE-MARCHE/PAUSE" button and after press the "STARTUITSTEL/D.DIFF." button until the display indicates 0h. Then press the "START/PAUSE-MARCHE/PAUSE" button again.

When the delay is cancelled, the display shows 0h and after the duration of the programme.

During the delayed start, it is not possible to change the programme or the delay time that have been selected. To do this, you must first switch off the machine by setting the programme selector dial to "UIT/ARRET". Select the new programme, the options and the delayed start, then press the "START/PAUSE-MARCHE/PAUSE" button.

During the delayed start, to cancel or change functions that have been selected, simply set the appliance to PAUSE. Once you perform the desired operation, press once again the "START/PAUSE-MARCHE/PAUSE" button.

If you wish to add more laundry while the machine is performing the countdown, simply open the door. When you close the door, press the "START/PAUSE-MARCHE/PAUSE" button again to cause the countdown to be resumed.

4 "LAGE TEMP/DELICAT" button

Pressing this button allows drying to be performed at a lower temperature, for delicate items.

The corresponding pilot light comes on.

This option can also be used for time controlled drying.

This option **cannot** be selected with "KORT/COURT".

5 "KORT/COURT" button

By depressing this button the drying time is reduced in the following cotton programmes:

- EXTRADROOG/TRES SEC
- INTENSIEFDROOG/INTENSIF
- KASTDROOG/A RANGER

The corresponding pilot light comes on.

This option cannot be selected with "LAGE TEMP/DELICAT" function.

6 "ZOEMER/ALARME" button

A buzzer sounds

- when selecting the programme
- when depressing the buttons
- when an incorrect option selection is made
- when the programme selector dial is turned to another position during the programme or when you depress an option button during the cycle
- at the end of the programme and during the anticrease phase
- if the machine is not working correctly

By depressing the button the acoustic signal is switched on.

7 "DEUR/PORTE" button

Press this button to open the door. The light above the button will light up.

Opening the door by means of this button is possible only if the tumble dryer is on (programme selector dial set to a programme or drying time).

If you open the door during a programme, in order to restart the programme you must press the "START/PAUSE-MARCHE/PAUSE" button again after having closed the door.


8 Display "LOOPTIJD/TEMPS RESTANT"

The display shows the following information:

- duration of selected programme
- delayed start
- end of programme
- incorrect option selection
- alarm code

Duration of selected programme

After you have selected the programme, its duration (in hours and minutes) appears on the display. It is calculated automatically on the basis of the maximum load accepted for each type of fabric and of the required degree of drying.

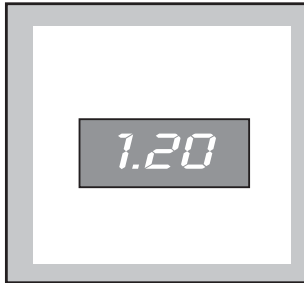


When the programme starts, the remaining time is displayed every 5 minutes.

Delayed start


If you have selected a delay time by means of the relevant button, the display shows it for 2 seconds; then it shows the duration of the previously selected programme.

The countdown is displayed every 30 minutes until it displays "90 minutes" and then hour by hour.

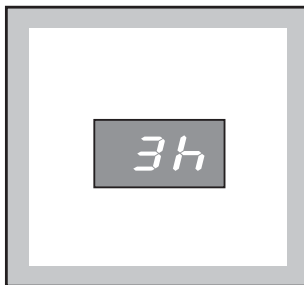


End of programme

A **flashing zero** indicates the end of the programme and it is displayed after the "antcreasing" phase.

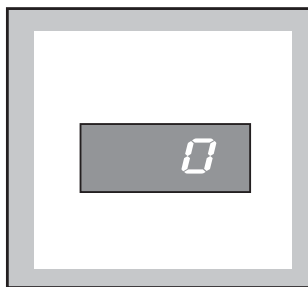

Incorrect option selection

If you select an option that is not compatible with the programme you have selected, the display shows **Err** (error)

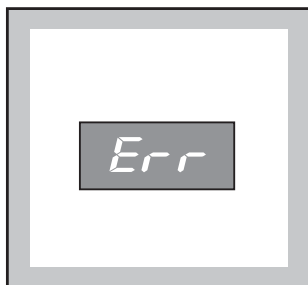

This code will reappear during the execution of the programme if you press one of the option buttons or turn the programme selector.

Alarm code

In the case of a functional problem, the display shows an alarm code (e.g. **E21**).



9 INDICATOR LIGHTS

These lights indicate the following functions:

- **"DROGEN/SECHAGE"** light.
This light indicates that the appliance is in the drying phase.
- **"AFKOELEN/REFROID."** light.
This light indicates that the appliance is in the cooling phase. At the end of drying, there is a 10 minute cooling phase to cool the laundry.
- **"EINDE/FIN"** light.
This light is on at the end of the cooling phase, during the anti-creasing phase and at the end of the programme.
- **"FILTER/FILTRE"** light.
This light illuminates at the end of the programme to remind you that the filters must be cleaned.

Brief operating instructions

- Spin the laundry as much as possible.
- Sort out the laundry.
- Put the laundry into the tumble dryer.
- Switch the machine on by selecting the drying programme/time.
- If necessary, press the **"ZOEMER/ALARME"** and/or **"KORT/COURT"** and/or **"LAGE TEMP/DELICAT"** (This option **cannot** be selected with **"KORT/COURT"** function) and/or **"STARTUITSTEL/D.DIFF."** button.
- Press the **"START/PAUSE-MARCHE/PAUSE"** for about 2 seconds to start the dryer.

When the programme is in progress, the door can be opened in order to remove laundry or to add other items.

At the end of the programme:

- Switch off the tumble dryer.
- Remove the laundry.
- Clean the fluff filters.

Drying

i Before the first drying cycle


Before using your tumble dryer for the first time, we recommend to place a few damp cloths inside the appliance and dry for 30 minutes. There may be dust inside a brand new tumble dryer.

Sort out the laundry

- To prevent bundling of laundry: close zips, button up pillow cases and duvet covers; tie any strings, such as apron strings.
- Empty pockets.
- Remove any metal parts (paper clips, safety pins, etc.).
- Turn garments made of double layer fabrics inside out (e. g. turn anoraks with cotton lining inside out), so that they will dry better.
- Shake out the laundry.

Open the door

- Open the door by presing on the left side as per picture

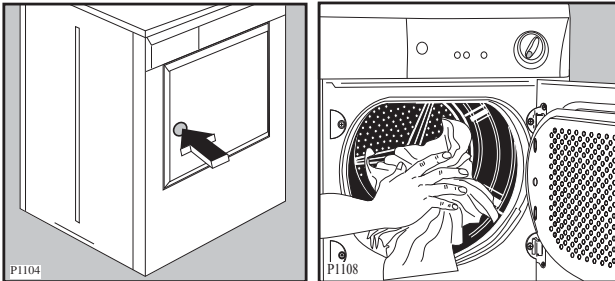


Load the laundry

Warning! When closing the door, do not trap any garments! The fabrics could get damaged. Please check the laundry does not get caught between the door and filter.

- Put the prepared and shaken out laundry into the dryer.

Switch the machine on - select the drying programme/time

- Select the drying programme or time. The lights "DROGEN/SECHAGE", "AFKOELEN/REFROID." and "EINDE/FIN" come on. The light of the "START/PAUSE-MARCHE/PAUSE" button flashes and the display shows the duration of the programme.

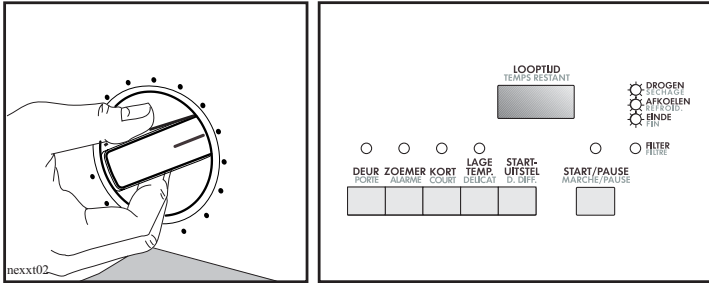

If required, press the "LAGE TEMP/DELICAT" button and/or the "ZOEEMER/ALARME" button or the "KORT/COURT" button. Select the "STARTUITSTEL/D.DIFF." if required. The selected delay appears on the display for 2 seconds, then the duration of the selected programme is displayed.

Start the machine

Press the "START/PAUSE-MARCHE/PAUSE" button: the corresponding light stops flashing and drying starts. Only the "DROGEN/SECHAGE" light stays lit. If you have selected the "STARTUITSTEL/D.DIFF.", the machine begins its countdown.

The drum turns alternately in both directions during drying.

All drying programmes end with a 10 minute cooling phase (light "AFKOELEN/REFROID." is on).

The "EINDE/FIN" and "FILTER/FILTRE" lights illuminate. The display shows a static zero and the buzzer sounds to indicate the end of the cycle.

You may remove the laundry after this phase.

Remove or add laundry

It is possible to interrupt the drying cycle at any time in order to remove or add laundry.



Open the door.



Caution! Laundry and drum can be hot.



Remove or add laundry.



Close the door and press "START/PAUSE-MARCHE/PAUSE" button to continue the drying cycle.

End of drying cycle

If the laundry is not removed at the end of the cycle, the dryer performs an anti-creasing phase (duration: 30 minutes maximum).

If you do not remove the laundry, the dryer will stop automatically at the end of the anti-creasing phase.

The "EINDE/FIN" and "FILTER/FILTRE" lights remain lit and the buzzer sounds for 2 minutes.

The light of the "START/PAUSE-MARCHE/PAUSE" button goes off and a flashing zero appears on the display.

Switch the tumble dryer off

Turn the programme selector dial to "UIT/ARRET"; all the lights go out. The appliance is switched off.



Remove the laundry.

If you open and then close the door before turning the programme selector dial to "UIT/ARRET", all the lights corresponding to the phases making up the performed programme come on and the display shows the duration of the programme.

Important!

If the drying programme has to be stopped before it reaches the end, we recommend that you turn the programme selector dial to position "AFKOELEN/REFROID." and wait until the end of this phase before removing the laundry. This will avoid a build-up of heat inside the appliance. To do this first turn the dial to "UIT/ARRET" and then to "AFKOELEN/REFROID." and depress "START/PAUSE-MARCHE/PAUSE" button.

Clean the filters

To ensure free circulation of air during the drying cycle, the fluff filters must be cleaned after each drying cycle, before removing the laundry.

Adjusting the level of conductivity

Water contains, a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values.


Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual humidity of the laundry at the end of the cycle.

Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water by using the following procedure.

Procedure:

Turn the programme selector dial to switch on the appliance

In selection mode press simultaneously the **buttons 3 and 6** until «CO» appears on the digits.

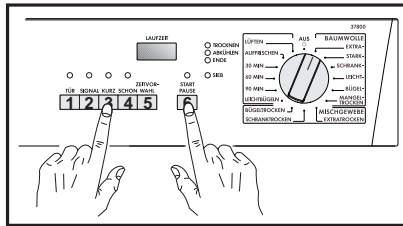

Adjusting the level of conductivity:

Press the **button 5** sequentially: the level of conductivity is indicated by the lighting of the horizontal hyphens.

DISPLAY	Conductivity degree	Approximative value $\mu\text{S}/\text{cm}$ (25°C)
CO-	Low	< 300
CO=	Medium	300 - 600
CO≡	High	> 600

Normally, the appliance is factory-set to the highest level; however, certain models may be configured differently.

Memorizing the new setting:

Simultaneously press down the **buttons 3 and 6** until the previous drying cycle time appears again on the display and the buzzer sounds.

Programme Chart

Automatic drying (electronic programmes)

Type of laundry	Programme	Max-load ⁽¹⁾
COTTON	EXTRADROOG/TRES SEC	6 kg
	INTENSIEFDROOG/INTENSIF	6 kg
	KASTDROOG/A RANGER	6 kg (*)
	STRIJKDROOG/FER SEC	6 kg
	STRIJKDROOG/A REPASSER	6 kg (*)
	STRIJKDROOG/EN MACHINE	6 kg
SYNTHETICS	EXTRADROOG/TRES SEC	3 kg
	KASTDROOG/A RANGER	3 kg (*)
	STRIJKDROOG/A REPASSER	3 kg
Jackets, shirts, chemises.	LICHT STRIJKEN/ FACILE A REPASSER	1 kg
Jackets, trousers, dresses, skirts.	OPFRISSEN/RAFRAICHIR	1 - 4 garments

(*) According to CEI 1121 Standards.

- "OPFRISSEN/RAFRAICHIR" is designed to clean and freshen garments labeled "dry clean only" and "hand wash" at home, in your tumble dryer, using the special product available on the market.

Time controlled drying

Type of laundry	Drying time	Max-load ⁽¹⁾	Programme selector dial position
COTTON	90 min	6	90 MIN
COTTON	60 min	6	60 MIN
SYNTHETICS	30 min	3	30 MIN

(1) Never overfill the drum (do not load large quilts, for example).

Programm "AFKOELEN/REFROID."

This position on the programme selector dial can be used to freshen the laundry (e.g. to remove a persistent odour of moth-balls).

Load

It is often difficult to estimate the weight of items to be dried. We therefore recommend that you adopt the following guidelines:

- cotton, linen: drum full but not too tightly packed;
- synthetics: drum no more than half full;
- delicate fabrics: drum no more than one third full.

Hints & Tips on Drying

Care symbols

Before placing articles of laundry in your tumble dryer, check the care labels to ensure they are recommended for tumble drying.



Basically, this fabric can be tumble dried; however the manufacturer does not specify whether it can be dried with normal or low temperature.



Normal drying (normal temperature)



Gentle drying (low temperature)



Do not tumble dry

If none of these symbols is found:


Dry cottons, as well as mixed fabrics, at normal temperature. Press the "LAGE TEMP/DELICAT" button when delicate cottons have to be dried. It is advisable to take into consideration the care symbols on garment labels when buying them.

- Wool, eiderdowns

Do not dry any woollen items in the tumble dryer! They can felt!

Eiderdowns can be tumble dried only if the corresponding care symbol is present.

- Fabrics sensitive to high temperatures

Dry fabrics sensitive to high temperatures (such as acrylic or viscose) and items bearing the  care symbol using a synthetic drying programmes.

- Tricot garments, knitwear

Tricot garments and knitwear tend to shrink.

Do not overdry these items. High quality products are less likely to shrink.

- New coloured fabrics

Do not dry new coloured fabrics with light-coloured laundry. This could lead to discoloration!

Cleaning and care



Warning! You must disconnect the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

External cleaning



Use only soap and water and then dry thoroughly.


Important: do not use methylated spirit, diluents or similar products.

Cleaning the door



Clean periodically the interior part of the door to remove any fluff from the seals around the filter.

Regular cleaning ensures correct drying.


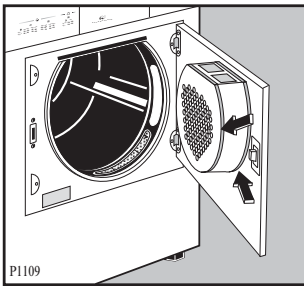


Cleaning the filters

Your dryer will only function well if the filters are clean.

The filters collect all the fluff which accumulates during drying and they must therefore be cleaned at the end of each programme, before removing the laundry, with a damp cloth.


The filter in the inner door must be removed for cleaning.

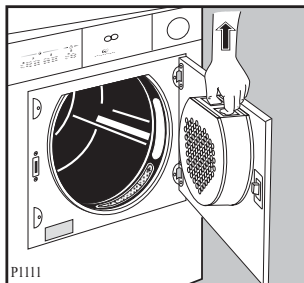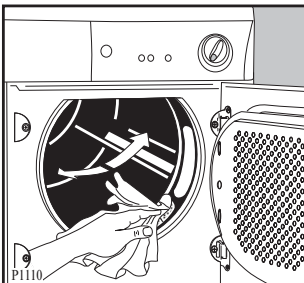

Do not be alarmed by the amount of fluff. It is not due to excessive wear caused by the dryer. All fabric loses fluff when drying but it

goes un-noticed in the air. In a tumble dryer it simply collects in the filter.

If necessary the filters can be cleaned under running water using a brush. In this case, remove the filter in the door opening as per picture (it can be positioned with the tongue facing to the left or to the right).

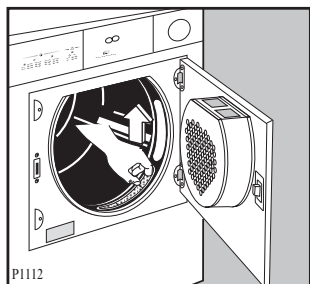

Cleaning the drum

Warning! Do not clean the stainless steel drum with abrasive detergent or steel wool.

- ☞ Wipe the inside of the drum and the drum paddles with a standard household detergent (e.g. vinegar solution).

Cleaning the panel and the controls

Warning! Do not use household furniture polish or abrasive detergents.

- ☞ Wipe the panel and the controls with a damp cloth only. Use only warm water.

Something not working?

If a problem occurs, you can try to solve it yourself following the instructions below. If you call out an engineer when one of the following problems occurs, or to repair a fault due to incorrect use, the call-out will be charged even if requested within the guarantee period.

Problem	Possible cause	Remedy
The drier is not working properly	Mains plug disconnected	Plug in mains plug
	The "START/PAUSE-MARCHE/PAUSE" button has not been depressed.	press "START/PAUSE-MARCHE/PAUSE" button
	No programme selected	Select programme
	Loading door open	Close loading door
	Fuse or residual current circuit breaker in fuse box (domestic installation) faulty	Check fuse or residual current circuit breaker. Faults can be eliminated by an electrical engineer
The drying results are not satisfactory	Wrong programme selected	Select another (time) programme for the next drying cycle
	Lint filter blocked	Clean lint filter
	Wrong filling quantity	Observe recommended filling quantity
	Laundry not sufficiently dried	Pre-dry laundry sufficiently
	Deposit on the drum inner surface or on the drum ribs	Clean drum inner surface and drum ribs

Problem	Possible cause	Remedy
The drying cycle exceptionally takes a long time	Vented air transport disrupted	Straighten N- air venting hose and/or clean air venting ducts
	Lint filter blocked	Clean lint filter
The loading door cannot be closed	Lint filter not installed and/or filter lid not locked in position	Install lint filter and/or lock filter lid in position
The drier ends the drying cycle automatically: "EINDE/FIN" indicator is illuminated shortly after programme start	Too little or too dry laundry loaded for selected programme	Select time programme or higher drying level (for instance EXTRADROOG/TRES SEC instead of KASTDROOG/A RANGER)
The drying cycle exceptionally takes a long time. 4,5 hours after starting the drying cycle: "EINDE/FIN" indicator is illuminated - drying cycle is aborted - programme run indicator flashes	"LAGE TEMP/DELICAT"- button depressed and filling quantity too large	Check programme selection: only use "LAGE TEMP/DELICAT" -button for laundry quantities up to 3 kg. Clean lint filter.
	Filling quantity too large	Reduce filling quantity
	Laundry too wet	Pre-dry laundry more thoroughly

If these operating instructions do not offer sufficient advice to eliminate a specific fault, please contact our customer service.

Technical specifications

Height x Width x Depth	85x60x57 cm
Depth with the door open	107 cm
Height adjustment	6 mm
Empty weight	ca. 32 kg
Load (according to the programme) (Different load sizes in some countries are due to different measuring methods)	max. 6 kg
Use	Domestic
Permissible ambient temperature	+5°C to +35°C



This appliance complies with the following EC directives:

- 73/23/EEC of 19/2/1973 "Low voltage directive"
- 89/336/EEC of 3/5/1989 "EMC directive" including modification directive 92/31/EEC.

Electrical connection

The manufacturer declines any liability should this safety measure not be observed.

Specifications concerning the power supply are indicated on the rating plate. The rated voltage and the type of current stated on the plate must correspond to those which exist where the dryer is installed. Also refer to the rating plate for the type of fuse required.

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance's rating plate. (See picture on page 10).

This machine is designed to operate on a 230 V, singlephase, 50 Hz supply. Check that your domestic electrical installation can take the maximum load required (2.6 kW), also taking into account any other appliances in use.

Cut off plug 16 A.


Warning! THIS APPLIANCE MUST BE EARTHED.

Unpacking



Slide out the polythene bag with the polystyrene stuffing before using the appliance. .

Pull off adhesive strips from inside machine on top of drum.

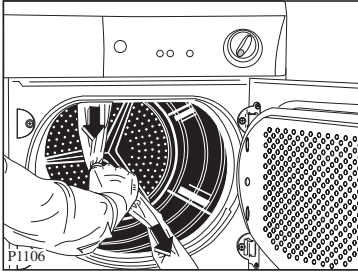

Special accessory


You can obtain the following special accessory through the AEG customer service organisation or from your dealer:

Kit Washing/drying column

With this kit you can combine your dryer with any LAVAMAT automatic washing machine to a washing and drying column. The appliances are stacked in space-economising manner in this arrangement, the washing machine at the bottom and the dryer at the top.

It should be possible to stack your new dryer on top of a front loading washing machine with cover's depth between 48 and 60 cm.

Read carefully the instructions supplied with the kit.

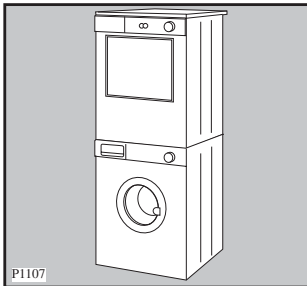

Door reversal

To make it easier to load or unload the laundry the door can be reversed.

This operation must be carried out by qualified personnel.

Please contact the nearest Service Force Centre. This is a chargeable option.

Service



In the chapter "Something not working?" some problems that can be solved by yourself are listed. Read this section in the event of problems. If you are not able to find a solution, contact the Service centre. It is close by and, if necessary, an engineer will soon be with you. (Addresses and telephone numbers are given on the enclosed form).

In all cases, set your speech before calling, in order to facilitate troubleshooting: the engineer will be able to decide whether a service visit is necessary.

Take note of the serial number (Ser. No.) and the product number (Prod. No.) indicated on the rating plate.

Prod. No.

Ser. No.

AEG		 IPX4
<small>Electrolux</small>		
Mod. xxxxxx	Type xxxxxxxx	
Prod.No. xxxxxxxxxx		
xxx-xxxV~xxHz xxxxW		 xx A
		Ser.No.

Try to specify, as precisely as possible:

- The symptoms of the fault.
- When the fault occurs.

When can a service visit be charged during the guarantee period?

- when it should have been possible to solve the problem by yourself, with the help of the troubleshooting chart (see section "Something not working?")
- when the engineer has to come out several times because he has not been given all the relevant information he needs and so, for example, has to fetch spare parts. Repeated trips can be avoided if you prepare your call to the Service centre as described above.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>