



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX Z6160. You'll find the answers to all your questions on the AEG-ELECTROLUX Z6160 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX Z6160
User guide AEG-ELECTROLUX Z6160
Operating instructions AEG-ELECTROLUX Z6160
Instructions for use AEG-ELECTROLUX Z6160
Instruction manual AEG-ELECTROLUX Z6160


Electrolux

SUPER_PRO

VACUUM CLEANER
MODEL: Z6160

USER GUIDE



 The Electrolux Group. The world's No.1 choice®

www.electrolux.com.au
www.electrolux.co.nz



[Your user manual](#)
[AEG-ELECTROLUX Z6160](#)

Manual abstract:

Hardfloor nozzle The special nozzle is for use on parquet, tiled and hard floor. Mini set 4 special nozzles and brushes plus a flexible mini hose for cleaning technical appliances and delicate parts. *Turbo nozzle* The turbo nozzle makes the care of carpets easier. The rotary motion of its brush gently loosens short-pile carpets where the dirt has been trodden in. It removes stubborn fluff and pet hairs. **7 Changing dustbag** Change dustbag S when display F is filled with colour (can be checked with the appliance operating at maximum suction and with the nozzle raised from the floor). A change may be necessary even if the bag does not appear to be full. Fine dust can block the pores and reduce the suction power of the appliance. Switch off the appliance and open the dust chamber lid by pulling release catch G. Remove dustbag S by pulling on the sealing tab.

Push new dustbag into the retainer until it clicks into place. Take care when closing the dust chamber lid that the dustbag is completely inside the dustchamber border. The dust chamber lid will not close unless a dustbag has been inserted. Please do not use force! S E54AB Standard S-bag, E202B Clinic S-bag, E203B Anti Odour S-bag, S-bag Long Performance **8 Changing the Filters** Change motor protection filter T if display F is still filled with colour after the dustbag has been changed or if the suction power is significantly reduced although the dustbag has little in it. Switch off the appliance and open the dust chamber lid by pulling release catch G.

Change motor protection filter T. Replace microfilter V if display C is filled with colour or after every fifth dustbag change or if the suction power is significantly reduced / Clean HEPA filter X if display C is illuminated: Switch off the appliance. Press filter grille button U and open filter grille W. Replace microfilter V / Rinse HEPA filter X under luke warm running water. Leave to dry thoroughly before reinserting.

Replace filter if necessary. ET-Nr. 900 195 149/1 T U C V ET-Nr. 900 195 150/9 X ET-Nr. 900 084 491/1 EF26A: O2 HEPA H12 washable filter **9 Carrying and storage** **10 Maintenance and cleaning** For maintenance or cleaning, switch off the appliance and unplug it from the mains. As required, wipe the housing and the dustbag chamber with a cloth and then dry. Do not use any scourers or any solvents. Occasionally vacuum the floor nozzle and the brushheads with the crevice nozzle. What to do, if .

it is difficult to push the nozzle: Reduce suction power (depending on the type of carpet). This will not conspicuously reduce the cleaning efficiency. *the motor thermal cut-out has tripped:* e. g. as the result of overloading the motor if the dust-bag is full or if an accessory is blocked. Switch off the appliance, unplug from the mains, and leave the motor to cool down. Check dustbag, suction tube and suction hose; remove any blockage. The appliance can be switched on again after approximately 30 minutes the fuse has blown: The fuse can be blown if other electric appliances with a high power consumption are used at the same time and on the same circuit as the vacuum cleaner. If this is the case, set the suction power regulator to the lowest setting before switching on and only select a higher suction level after switching on. *the cable does not retract fully:* The cable is caught up on the cable drum.

Pull the cable out again a little and press button A again the dust chamber lid will not close: Check that the dustbag has been inserted. If it has, check that the dustbag has clicked into position. *Protecting the environment Appliance packaging:* We recommend keeping the packaging for the duration of the guarantee so that the appliance can be transported safely. *Recycling the appliance at the end of its life:* The plastic components all carry a material identification marking so that, like the other materials, they can be recycled at the end of the life of the appliance. **11** 2190611-07 The Electrolux Group.

The worlds No..



[Your user manual](#)

[AEG-ELECTROLUX Z6160](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>