



ALTEC LANSING®



inMotion™

iM600

User's guide



The lightning flash with arrowhead, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN

Caution: To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CONNECTING THE POWER CORD (AC WALL OUTLET)

Snap plug into power supply and then insert the blades into the outlet.

RECHARGEABLE BATTERY

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Do not expose to excessive heat such as sunshine, fire, or the like.

The battery used in this product must be recycled or properly disposed of. Instructions for removing the battery can be found in the "Power" section. Please contact your local recycling center for proper handling of the battery.

Rated voltage: 3.7V Capacity: 2150mAh Type number: NTA2455

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water — This apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. The apparatus should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings. The apparatus must not be placed in a built-in installation, such as a closed bookcase or cabinet that may impede the flow of air through the ventilation openings. Ventilation should not be impeded by covering the openings with items such as newspapers, tablecloths, curtains, etc.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. No naked flame sources, such as lighted candles, should be placed on the apparatus.
10. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for the replacement of the obsolete outlet.
11. Protect the power cord from being walked on or pinched — particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
12. Do not install in an area which impedes the access to the power plug. Disconnecting the power plug is the only way to completely remove power to the product and must be readily accessible at all times.
13. Power source — Use only power supplies of the type specified in the operating instructions or as marked on the appliance. If a separate power supply is included with this apparatus, do not substitute with any other power supply — use only manufacturer-provided power supplies.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. For service, refer to qualified service personnel, return to the dealer, or call the Altec Lansing service line for assistance.
16. For products which incorporate batteries, please refer to local regulations for proper battery disposal.
17. Only use attachments/accessories specified by the manufacturer.
18. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



ALTEC LANSING ONE YEAR LIMITED WARRANTY (TWO-YEAR LIMITED WARRANTY IN THE EUROPEAN UNION AND ASIA)

What Does The Warranty Cover?: Altec Lansing warrants that its products shall be free from defects in materials or workmanship, with the exceptions stated below.

What Is The Period Of Coverage?: For units purchased in European Union or Asia, this warranty runs for two years from the date of purchase. For units not purchased in Europe or Asia, this warranty runs for one year from the date of purchase. The term of any warranties implied by law shall expire when your limited warranty expires. Some states and/or Member States in the European Union do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

What Does The Warranty Not Cover?: This warranty does not cover any defect, malfunction or failure that occurs as a result of: improper installation; misuse or failure to follow the product directions; abuse; or use with improper, unintended or faulty equipment. (For information on proper installation, operation and use consult the manual supplied with the product. If you require a replacement manual, you may download a manual from www.alteclansing.com.) Also, consequential and incidental damages are not recoverable under this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

What Will Altec Lansing Do To Correct The Problem?: Altec Lansing will, at its option, repair or replace any product that proves to be defective in material or workmanship. If your product is no longer being manufactured, or is out of stock, at its option, Altec Lansing may replace your product with a similar or better Altec Lansing product.

How To Get Warranty Service: To get a covered product repaired or replaced, you must contact Altec Lansing during the warranty period by email (csupport@alteclansing.com). You must include in your email, your name, address, email address, telephone number, date of purchase and a complete description of the problem you are experiencing. In the United States, you may alternatively contact Altec Lansing by telephone at 1-800-ALTEC88 — please be prepared to provide the same information. If the problem appears to be related to a defect in material or workmanship, Altec Lansing will provide you a return authorization and instructions for return shipment. Return shipments shall be at the customer's expense, and the return must be accompanied by the original proof of purchase. You should insure the shipment as appropriate because you are responsible for the product until it arrives at Altec Lansing.

How Will State Law Affect Your Rights?: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Please note that in the European Union, you as a consumer might have other legal rights under national legislation of European Union Member States governing the sale of Altec Lansing's goods. Those rights are not affected by this guarantee.

The above limited warranties and remedies are sole warranties and remedies available to purchaser, if, and to the extent, valid and enforceable under the applicable law.

CUSTOMER SERVICE

The answers to most setup and performance questions can be found in the Troubleshooting guide. You can also consult the FAQs in the customer support section of our Web site at www.alteclansing.com. If you live in North America and still can't find the information you need, please call our customer service team for assistance before returning the speakers to your retailer under their return policy.

Tel: 800-258-3288

Email: csupport@alteclansing.com

If you live outside of North America, please visit our website at www.alteclansing.com and select your region to locate your country's distributor.

For the most up-to-date information, be sure to check our Web site at www.alteclansing.com.

INTERNATIONAL DISTRIBUTION

International customers: For information regarding the distribution of Altec Lansing products in your country, please visit www.alteclansing.com and click on your region.

DISPOSAL OF OLD ELECTRICAL & ELECTRONIC EQUIPMENT



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office or your household waste disposal service.

INMOTION iM600

DIGITAL SPEAKER SYSTEM FOR IPOD®

THE NEW STANDARD FROM THE COMPANY THAT SET THE STANDARD

Thank you for purchasing the Altec Lansing iM600 digital speaker system for iPod. When Altec Lansing introduced the original inMotion, it set new standards for sound and size and let a whole lot of music out of the iPod. Today, the new iM600 raises the bar again with an innovative and performance-leading design.

BOX CONTENTS

- inMotion iM600 mobile speaker system
- Wireless remote
- Power supply
- User's guide and quick connect instructions

MADE FOR:

- iPod touch
- iPod classic
- iPod with video
- iPod nano (3rd generation)
- iPod nano (2nd generation)
- iPod nano (1st generation)
- iPod with color display
- iPod mini
- iPod with dock connector

PLACING THE INMOTION iM600

Open the inMotion iM600 by pressing the button on the front of the speaker system. Position the inMotion iM600 on a level surface, preferably close to you (within three feet).

ASSEMBLING THE INMOTION iM600

Dock your iPod by sliding your iPod on top of the iM600 docking station. If necessary, first install the docking adapter that came with your iPod. While the docking adapter is not required for proper functioning of your iPod and iM600, it will provide a better fit.

Note: Alternate audio sources—such as non-dockable iPod models, CD players, MP3 players, portable DVD players, and laptops—can also be connected to the inMotion iM600. For more information, see the “Connecting to alternate audio source” section.

POWER

Use one of the following two options to power your inMotion iM600:

AC (Wall outlet) Power

Insert the barrel connector from the power supply into the DC connector on the rear of the inMotion iM600.

After this connection is made, insert the power supply into a wall outlet.

DC (Battery) Power

The inMotion iM600 features a built-in rechargeable Lithium-ion battery.

Charging time up to 3 hours

Continuous Playing Time up to 5 hours

Charging the rechargeable battery:

The battery should be fully charged before initial use.

To recharge the battery, insert the barrel connector from the power supply into the DC connector on the rear of the inMotion iM600. After this connection is made, insert the power supply into a wall outlet. The indicator light turns on. When the battery is fully recharged, the indicator light turns off.

When the battery icon on the LCD screen displays a single segment the battery should be recharged. When the icon starts flashing, the iM600 is about to shut down.

Warning: During the recharging process it is typical for the battery to become warm. To be safe, keep flammable materials away from the inMotion iM600.

Note: To conserve battery power, reduce the inMotion iM600 volume level.

Disconnecting the rechargeable battery:

1. Unplug the inMotion iM600 from the wall outlet.
2. Open the inMotion iM600 by pressing the button on the front of the speaker system.
3. Remove the rechargeable battery compartment cover by removing the 2 screws.
4. Unplug the battery and remove it.

START PLAYING

1. Turn on your iPod.
2. Turn on the inMotion iM600 by pushing the ϕ button. The indicator light turns on.
3. Press the SOURCE button until “iPod” is displayed on the LCD screen.

Note: To avoid hearing a popping sound when you turn on your inMotion iM600, always turn on your audio source first.

POWER OFF

Turn off the inMotion iM600 by pushing the ϕ button. The indicator light shuts off.

AUTO SHUT-DOWN

During battery-only operation the inMotion iM600 automatically shuts down if no audio is detected for four minutes. Press the ϕ button to turn the inMotion iM600 back on.

NOTE: The Auto Shut-down feature is active during battery-only operation. If the AC wall adapter is used, the inMotion iM600 will remain on until the ϕ button is pushed and the indicator light shuts off.



FM RADIO

The inMotion iM600 features a built-in FM radio.

Activate the FM radio mode:

Press the SOURCE button until "FM" is displayed on the LCD screen.


 
Scanning FM radio stations:

Press and hold the  or  buttons to scan radio stations in an incremental manner.

Note: When the reception level of the FM station is strong enough for stereo reception, the FM stereo indicator on the LCD screen will illuminate.

Programming FM radio stations:

To program FM radio stations into the wireless remote, follow the steps below:


1. Press the SOURCE button until "FM" is displayed on the LCD screen.
2. Use the  and  buttons to tune in the station to be preset.
3. To program the station in the inMotion iM600 memory, press and hold for 3 seconds one of the preset buttons [P1, P2, P3, P4] on the wireless remote. The LCD will display the preset number together with the word "SAVED" when a station has been successfully programmed.

Once an FM radio station has been programmed, simply press the appropriate preset button [P1, P2, P3, P4] to select it.

Note: To re-program a station in the inMotion iM600 memory, simply repeat steps 1–3.

ALARM CLOCK FUNCTION

The inMotion iM600 is compatible with your iPod device's alarm clock feature. To use your iPod and the inMotion iM600 as an alarm clock, follow the steps below:

1. Activate the alarm clock feature on your iPod (for more information, consult your iPod user's guide.)
2. Dock your iPod in the inMotion iM600.
3. Make sure the inMotion iM600 is plugged into a wall outlet.
4. Turn on the inMotion iM600 by pushing the  button. The indicator light turns on.
5. Press the SOURCE button until "iPod" is displayed on the LCD screen.
6. Use the "+" and "-" buttons on the inMotion iM600 to set the master volume.

Note: For the alarm clock function to work properly, the inMotion iM600 must be plugged in to a wall outlet. The inMotion iM600 will otherwise automatically shut down if no audio is detected for four minutes.

CONNECTING TO ALTERNATE AUDIO SOURCE

The inMotion iM600 system includes an auxiliary input jack that allows you to connect to alternate audio sources, such as non-dockable iPod models, CD players, MP3 players, portable DVD players, and laptops. To connect the iM600 to an alternate audio source, follow the steps below.

1. Locate a 3.5 mm stereo cable (sold separately).
2. Connect one end of the 3.5 mm stereo cable into the auxiliary input jack (AUX) located on the back of the inMotion iM600 system, and the other end to the headphone or line out jack on your alternate audio device.
3. Press the SOURCE button until "AUX" is displayed on the LCD screen.
4. Set the volume on the audio source at mid-level.
5. Set the volume on the inMotion iM600 at minimum level and adjust to a comfortable listening level.

VOLUME

The "+" and "-" buttons control the master volume. Press and hold the "+" button to increase the volume and the "-" button to decrease the volume.

FOR ADDITIONAL BASS

The inMotion iM600 is equipped with a subwoofer out jack ("SUB OUT"). This output should only be used to connect an Altec Lansing optional subwoofer specifically designed to increase the bass output of this speaker system. Please check www.alteclansing.com for availability information.

TROUBLESHOOTING

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
The rechargeable battery won't charge and no power indicator light is on (AC operation).	The surge protector (if used) isn't powered on.	If the power supply cord is plugged into a surge protector, make sure the surge protector is switched on.
	The wall outlet is not functioning.	Plug another device into the same wall outlet to confirm the outlet is working.
	The power isn't turned on.	Turn on the inMotion iM600 by pushing the ϕ button. The indicator light turns on.
No Power indicator light is on (Battery operation).	The rechargeable battery isn't charged.	Recharge the battery (see the "Power" section for details.)
	The power isn't turned on.	Turn on the inMotion iM600 by pushing the ϕ button. The indicator light turns on.
No sound is coming from speakers.	The volume is set too low.	The "+" and "-" buttons control the master volume. Press and hold the "+" button to increase the volume.
		Check the volume level on alternate audio source device and set at mid-level.
	An incorrect source has been selected.	Press the SOURCE button until the appropriate source is displayed on the LCD screen.
	The iPod is not correctly seated into the docking station.	Turn off the iPod, remove it from the docking station, reseal it, and turn it on again.
	If using an alternate audio source, the audio source is not properly connected to the inMotion iM600 or there is a problem with the alternate audio source.	<ul style="list-style-type: none"> • Connect an alternate audio source—such as a CD player, MP3 player, or portable DVD player—to your inMotion iM600 by plugging one end of a 3.5mm stereo cable (sold separately) to the line out of your portable device (if it has one) or to the device's headphone jack. Connect the other end to the input marked "AUX" on the back of the inMotion iM600. • Set the volume on the audio source at mid-level. • Set the volume on the inMotion iM600 at minimum level and adjust upward to a comfortable listening level.

SYMPTOM	POSSIBLE PROBLEM	SOLUTION
There is a crackling sound coming from speakers.	The iPod is not correctly seated into the docking station.	Turn off the iPod, remove it from the docking station, reseal it, and turn it on again.
	If using an alternate audio source, the audio source is not properly connected to the inMotion iM600 or there is a problem with the alternate audio source.	<ul style="list-style-type: none"> • Connect an alternate audio source—such as a CD player, MP3 player, or portable DVD player—to your inMotion iM600 by plugging one end of a 3.5mm stereo cable (sold separately) to the line out of your portable device (if it has one) or to the device's headphone jack. Connect the other end to the input marked "AUX" on the back of the inMotion iM600. • Set the volume on the audio source at mid-level. • Set the volume on the inMotion iM600 at minimum level and adjust upward to a comfortable listening level.
There is a crackling sound coming from speakers (when connected to PC or laptop).	The operating system's volume level is set too high.	Check the operating system volume level and decrease it if necessary.
The sound is distorted.	The inMotion iM600's volume level is set too high.	The "+" and "-" buttons control the master volume. Press and hold the "-" button to decrease the volume.
There is radio interference.	The unit is too close to a radio tower.	Move the unit to see if the interference goes away.
Intermittent buzzing.	The unit is located too close to a GSM cell phone.	Move the GSM cell phone away from the unit.
The inMotion iM600 exhibits erratic or unexpected behavior. Controls do not function.	Static electricity, momentary interruption of power, or abnormal operating conditions may be responsible.	<ol style="list-style-type: none"> 1. Disconnect the power supply from the wall outlet. 2. Disconnect the rechargeable battery per instructions in the "Power" section. 3. Wait 20–30 seconds. 4. Reconnect the rechargeable battery. 5. Reconnect the power supply.



This Class B digital apparatus complies with Canadian ICES-003. • Cet appareillage digital de Classe B est conforme au ICES-003 canadien.

"Made for iPod" means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Patents pending.

© 2007 Plantronics, Inc. All rights reserved.

Altec, Altec Lansing, inMotion, the Altec Lansing inMotion logo, SFX, and the SFX logo are registered trademarks or trademarks of Altec Lansing.

Plantronics, the logo design and Sound Innovation are trademarks or registered trademarks of Plantronics, Inc.

iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

All other trademarks appearing herein are the property of their respective owners.

Designed by Altec Lansing in the USA. Made in China.



CORPORATE HEADQUARTERS 535 Rte. 6 & 209, Milford, PA 18337-0277, USA • 866-570-5702 • 570-296-4434 • Fax 570-296-6887
Designed in USA. Made in China

A12118 R07

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>