


CHICAGO[®]
Electric

7" DESKTOP FAN

Model 67594

SET UP AND OPERATING INSTRUCTIONS

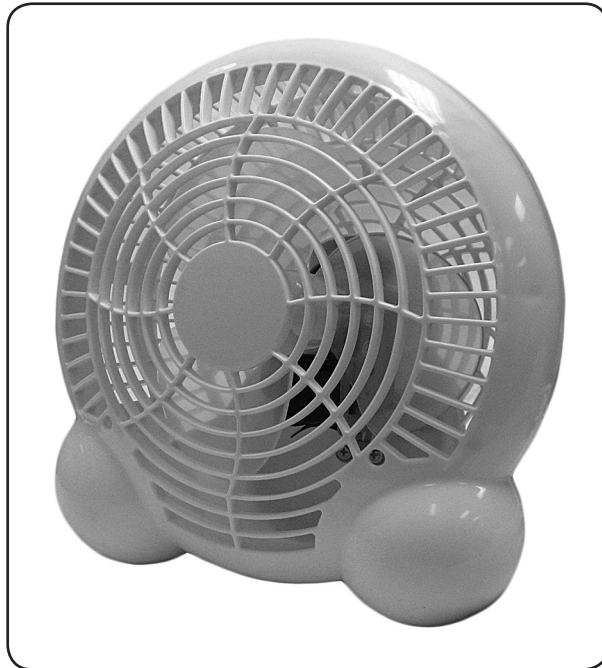

Visit our website at: <http://www.harborfreight.com>



**Read this material before using this product.
Failure to do so can result in serious injury.
SAVE THIS MANUAL.**

Copyright© 2009 by Harbor Freight Tools®. All rights reserved. No portion of this manual or any artwork contained herein may be reproduced in any shape or form without the express written consent of Harbor Freight Tools. Diagrams within this manual may not be drawn proportionally. Due to continuing improvements, actual product may differ slightly from the product described herein. Tools required for assembly and service may not be included.

For technical questions or replacement parts, please call 1-800-444-3353.

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

1. To reduce the risk of fire or electric shock, do not use this Fan with any solid-state speed control device.
2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not change the plug in any way. Do not attempt to defeat this safety feature.
3. Do not leave Fan running while unattended.

RULES FOR SAFE OPERATION

1. For indoor use only; do not expose to water or rain.
2. Do not insert fingers or any other object through grill.
3. Inspect before use; do not use if parts loose or damaged.
4. Disconnect Fan when moving it from one location to another.
5. Be sure fan is on a stable surface when operating to avoid overturning.
6. Do not pull on cord.



SAVE THESE INSTRUCTIONS.

Safety Symbols

In this manual, on the labeling, and all other information provided with this product:



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to personal injury.

CAUTION

CAUTION, without the safety alert symbol, is used to address practices not related to personal injury.

Additional Safety Instructions

1. Maintain labels and nameplates on the tool. If unreadable or missing, contact Harbor Freight Tools for a replacement.
2. Do not run Power Cord under carpeting. Do not cover cord with throw rugs, runners or similar coverings. Arrange

cord away from traffic area and where it will not be tripped over.

3. Use only in dry environments. Do not use in bathrooms, laundry area, near sinks or other sources of water or moisture.
4. This product is not a toy. Keep it out of reach of children.
5. **WARNING:** Handling cord on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm. Wash hands after handling.
(California Health & Safety Code § 25249.5, *et seq.*)
6. The warnings, precautions, and instructions discussed in this instruction manual cannot cover all conditions and situations that may occur. It must be understood by operator that common sense and caution are factors which cannot be built into this product, but must be supplied by operator.

Save This Manual

Keep this manual for the safety warnings and precautions, assembly, operating, inspection, maintenance and cleaning procedures. Write the product's serial number in the back of the manual near the assembly diagram (or month and year of purchase if product has no number). Keep this manual and the receipt in a safe and dry place for future reference.

SPECIFICATIONS

Electrical Requirements	120 V~ / 60 Hz / 22W
Speeds	Low/High

HOUSEHOLD USE ONLY



UNPACKING

When unpacking, make sure that the item is intact and undamaged. If any parts are missing or broken, please call Harbor Freight Tools at 1-800-444-3353 as soon as possible.

OPERATION



Read the **ENTIRE RULES FOR SAFE OPERATION** section at the beginning of this manual including all text under subheadings therein before set up or use of this product.

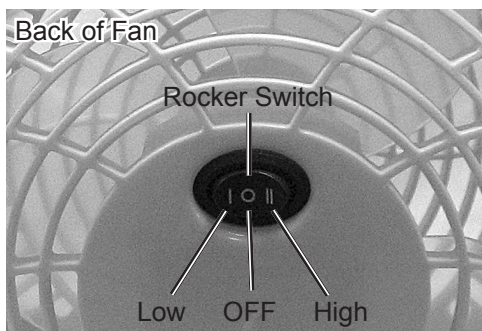


Figure 1

1. Set the Rocker Switch to the Off (O) position.
2. Place the fan on a flat, stable surface, routing the power cord to the nearest outlet, avoiding tripping hazards or strain on the cord.
3. Plug the cord into the outlet.
4. Press the Rocker Switch to the desired speed:
 - a. Low (I)
 - b. High (II)
5. When finished using the fan, turn the Rocker Switch to Off (O), unplug the unit and store in a safe, dry location.

CAUTION: Should the Fan not start when the unit is plugged in and turned on, or if the motor “hums” but the fan does not rotate, immediately turn off and unplug the fan and have it serviced by a qualified technician.

INSPECTION AND MAINTENANCE



TO PREVENT SERIOUS INJURY

FROM ACCIDENTAL OPERATION OR ELECTRIC SHOCK:

Before appliance inspection or maintenance, make sure the appliance’s switch is turned off, the cord is unplugged, and the unit has cooled completely.

TO PREVENT SERIOUS INJURY FROM APPLIANCE FAILURE:

Do not use damaged appliances. If abnormal noise or vibration occurs, have the problem corrected before further use.

1. **BEFORE EACH USE**, inspect the condition of the Fan. Check for loose screws, misalignment or binding of moving parts, the condition of the electric wire and its plug, and any other condition that may affect its safe operation.
2. To facilitate flow of air, clean the fan blade and grills regularly. To do so:
 - a. Turn off and unplug the fan. Remove the five screws from the back of the grill and gently pry the grills apart.
 - b. Wash the front grill in mild detergent and warm water, then wipe dry with a clean cloth.
 - c. Wipe dirt from the blades, rear grill and electrical cord.
 - d. Re-assemble in reverse order. Allow to dry completely before reconnecting to power source.
3. When not in use, store in a safe, dry location, out of reach of children.
4. This item is pre-lubricated at the factory. No additional lubrication is required.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>