

BOSCH

Owners Manual Mode d'emploi

**MKM 6000 Series
Coffee Grinder**

**MKM série 6000
Moulin à café**

READ THIS MANUAL
for important safety and operating instructions.

PRIÈRE DE LIRE CE MANUEL
Il contient des instructions importantes concernant la
sécurité et l'utilisation.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Check hopper for presence of foreign objects before using.
3. To protect against risk of electrical shock do not put unit in water or other liquid.
4. This appliance should not be used by children and care should be taken when used near children.
5. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
6. Avoid contacting moving parts.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
8. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter.
11. Do not let cord contact hot surfaces, including the stove.
12. Do not remove cover until after blade stops.

SAVE THESE INSTRUCTIONS

Download from www.Somanuals.com. All Manuals Search And Download.

HOUSEHOLD USE ONLY

Introduction

The Bosch MKM 6000 series coffee grinders are powerful, yet lightweight, high efficiency grinders designed for household use. The MKM 6000 series grinder uses a slanted basket that causes the coffee to swirl as it is ground for a more even grind.

The packaging used for the coffee grinder is biodegradable type and may be disposed of through your local recycling center. In addition, Bosch recommends that when it comes time to dispose of your grinder that it be disposed of in a safe and environmentally friendly way as recommended by your local, city, state or provincial government offices.

As you read through these instructions, please pay particular attention to the **IMPORTANT SAFEGUARDS**.

About your coffee grinder

Please refer to **figures 1 and 2**. The parts of the coffee grinder shown in **figures 1 and 2** identified below:

1. Body
2. Actuating button and cover
3. Slanted basket
max. cap. 2¾ ounces (75 grams)
4. Grinder blade

North American models of the MKM 6000 series coffee grinders are supplied for use on 120 volts, 60 Hz.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. **Do not** modify the plug in any way.

Before using for the first time

Before using your coffee grinder for the first time:

1. Check to make sure that the voltage on which the grinder is to operate is the same as shown on the rating plate.
2. Using a damp cloth wipe the inside of the cover and dry.
3. Using a dry cloth wipe the slant basket.

Your coffee grinder is now ready for use.

Tips for successful brewing

Fine, well prepared coffee is enjoyed by almost everyone. The following tips can help to assure that your coffee will have that fresh, full flavored taste every time:

- Always use fresh cold water.
- Use fresh, top quality coffee beans. After you have found a coffee that you like, freshness is perhaps the most important quantity; oils in the coffee beans can turn rancid with age, spoiling the flavor.
- Keep unused coffee in a tightly sealed container in your refrigerator or freezer.
- Experiment, to learn how much ground coffee to use for the strength of coffee you prefer. Tastes vary and there are no hard and fast rules.
As your first trial we recommend, trying one heaping tablespoon for every three cups (for 10 cups use 3½ tablespoons). From this point vary to taste, until you find the amount you prefer; then make a note of your preference.
- For best flavor, serve coffee immediately after brewing.
- Clean the coffee maker's carafe and filter basket, and gold filter (if used), after each use.
- Descale (decalcify) the coffee maker on a regular basis.

Using your coffee grinder

The Bosch coffee grinder is intended to be used to grind coffee beans only. If other items are ground in the grinder the warranty will be voided and the flavor of the substance(s) ground will often be carried over into the items ground subsequently for some period of time.

The Bosch coffee grinder can hold up to 2¾ ounces of coffee beans. There are various types of coffee makers and each type will have a recommended grind and a recommended amount of coffee to be used to yield the best results. Below, in **Table 1**, you will find listed the commonly recommended grinds for many of the various coffee makers on the market. These are provided as a guide only, you should always refer to your coffee makers manual and also, of course, rely on your own tastes in determining the "best" coffee for you.

Fines of grind is determined by the length of time grinder is in operation. After you have opened the coffee grinder and placed the desired amount of beans in the grinder, **replace the cover and press the**

actuating button. Darkness of roast of the coffee beans, humidity and quantity of beans being ground will effect the length of time required to grind the beans to the proper degree of fineness. In general a good starting point is to run the grinder for 10 seconds. After 10 seconds stop grinding and allow the motor to come to a complete stop. Then check the result and if the frind is not yet fine enough close the cover and run the grinder for another 5 seconds. If you are attempting to obtain the pulverized coffee required for Turkish coffee repeat the 5 seconds grinding step, allowing the motor to come to a full stop after each 5 seconds of running, until the proper fineness is achieved. For Turkish coffee this will usually require one 10 second run followed by four runs of 5 seconds.

Cleaning and maintenance

The Bosch MKM 6000 series coffee grinder requires no special care other than occasional cleaning. Before cleaning always be

sure to unplug the appliance. With the coffee grinder unplugged you can remove the cover and wipe it clean with a brush or damp cloth. The cover may be washed, if desired. The slant basket should be cleaned with a brush or dry (not wet) cloth. The exterior of the grinder body should periodically be wiped with a damp cloth.

Important: Never immerse the grinder in water or attempt to wash the coffee grinder in any liquid. To do so could result in damage to the grinder as well as an electrical hazard.

Service and repair

The coffee grinder is a sealed unit and no repair is possible. Do not attempt to repair the appliance yourself. Any work performed by unauthorized personal may void the warranty. If the coffee grinder fails within the warranty period it should be returned to your dealer of the manufacturer with a proof of purchase, showing the date of purchase, for replacement.

Table 1

Type of Coffee Maker	Fineness of Grind
Turkish	Pulverized
Espresso Machine	Extra Fine
Espresso/Cappuccino Machine (with manual or electric pump)	Extra Fine
Espresso Coffee Pot	Medium
Drip Coffee Maker	Medium
Chemex Coffee Maker	Medium-Coarse
Plunger Coffee Maker	Coarse
Percolator	Coarse

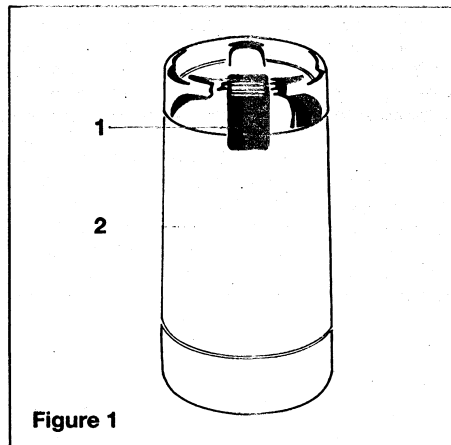


Figure 1

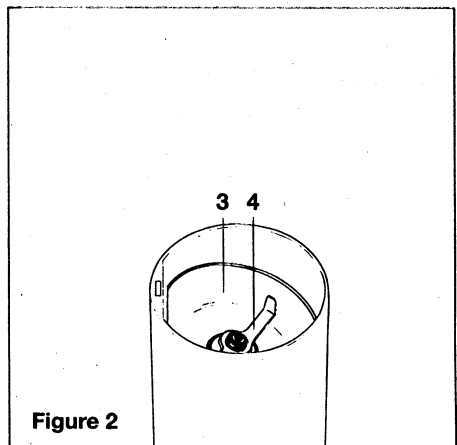


Figure 2

BOSCH Small Appliances Limited Warranty

BSH HOME APPLIANCES ("BOSCH") warrants all new small appliances sold by it to be free from original defects in design, materials and workmanship as follows:

Vacuum Cleaners five (5) years motor warranty*
Kitchen Machines three (3) years motor warranty*
Slicers two (2) years motor warranty*
Cofeemakers, Grinders & all other appliances. one (1) year motor warranty*

* All other component parts one (1) year

Within the stated warranty period, BOSCH will repair or replace, at its sole option, any small appliance or parts thereof which prove defective under conditions of normal use and service at no charge to you. Repaired and replacement small appliances and parts shall assume the identity of the original for the purposes of this warranty.

In case you have a problem with your new BOSCH small appliance and to obtain performance of this warranty, you should return it to where you purchased it or send it, securely packed, along with a dated proof of purchase to:

BSH HOME APPLIANCES
C/O KITCHEN SPECIALTIES
3767 South 150 East
SALT LAKE CITY, UT. 84115

OR CALL 1-800-MY-BOSCH FOR THE NEAREST REPAIR CENTER

To insure prompt service, a statement giving the specific reasons for the return should be included with the product. Glass carafes (coffee pots) should NOT be returned unless they themselves are defective.

This warranty is limited to the original consumer purchaser and is not transferrable. Specifically excluded from this warranty are failures caused by accident, misuse, neglect, abuse, including tampering, use on a frequency or voltage other than that marked on the product, and use for commercial purposes.

BOSCH

WARRANTY REGISTRATION CARD & QUESTIONNAIRE

Thank you for purchasing a BOSCH small appliance. To help us serve you better, please complete this card and return it as soon as possible.

Name _____

Address _____

City _____

State _____ Zip _____

Purchased at _____
Store Name

Date purchased _____

Received as gift? YES NO

Download from www.Somanuals.com

Please check the type of appliance you bought:

- Coffeemaker Toaster
 Espresso Maker Juicer
 Teamaker Hand Mixer
 Coffee Grinder Automatic Grill
 Kitchen Machine Slicer
 Iron Vacuum Cleaner

Other _____

Model No. _____

Price paid _____

Indicate your age group:

- 18-25 26-34 35-49
 50-64 65+

Please indicate: Male Female

Do you own any other BOSCH appliances?
 YES NO

If yes, please indicate which models:

Do you have any suggestions for improvement? _____

To the extent allowed by law, this warranty sets out your exclusive remedies, whether for negligence or otherwise. BOSCH will not be liable for any consequential or incidental damages, losses or expenses. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESSED WARRANTIES. ANY WARRANTY IMPLIED BY LAW, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, SHALL BE EFFECTIVE ONLY FOR THE PERIOD THAT THIS EXPRESSED WARRANTY IS EFFECTIVE.

No attempt to alter, modify or amend this warranty shall be effective unless authorized in writing by an officer of BOSCH. Some states do not allow limitations on how long implied warranties last or the exclusion or limitation of incidental or consequential damages, so the foregoing limitations and exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Notice to California Residents

If you need warranty service and there is no authorized BOSCH small appliance service center reasonably close to you, you may notify the dealer from whom you purchased it or any other dealer who sells BOSCH small appliances. The dealer may repair or replace the defective product or, if returned to the dealer from whom purchased, he may partially refund your money. This choice is up to the dealer. If the dealer fails to repair, replace or partially refund your money, you may take your defective product to any repair shop and they can fix your unit at our expense unless the repair cost exceeds the depreciated value of the product.

33666001

PLACE
STAMP
HERE

BSH HOME APLLIANCES

Attn: Dept. BSH

2800 South 25th Avenue

Broadview, IL 60153

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>