



dreamGEAR
www.dreamgear.net

Contents:

- **Blue** LED Glow Saber
- **Red** LED Glow Saber
- 2 Glow Saber handles

1. Insert 2 “AAA” batteries into the battery compartment located on the bottom portion of the Glow Saber extension. Align the pegs on top of the Wii Remote handle with the slots located on the bottom of the Glow Saber extension.
2. Insert the Glow Saber extension to the Wii Remote handle.
3. Turn the Glow Saber extension counter-clockwise and lock into place.
4. Insert the Wii Remote into the handle by sliding up the latch located on top of the Wii Remote handle and set into place.
5. Power the Glow Saber On/Off with the switch located right below the battery compartment. The Glow Saber will illuminate once the power switch is set to the “ON” position.
6. To detach the Glow Saber extension from the Wii Remote handle, slide down the latch on the Wii Remote handle. Turn the Glow Saber extension clockwise and lift up and out.

7. To remove the Wii Remote from the handle, slide up the latch on the Wii Remote handle. Lift the Wii Remote up and out.

(NOTE: Always practice safety first. When you are swinging the Glow Sabers, be aware of your surrounding making sure not to hit anyone or anything. To prevent injury and property damage, make sure the Glow Saber extension is properly and securely attached to the Wii Remote handle and you are within a reasonable distance from your television and any people around you. The Glow Sabers are designed for gaming only, never swing one Glow Saber at another Glow Saber. Always use your Wii Remote wrist straps when using the Dual Glow Sabers.)

Troubleshooting:

Problem: The Glow Saber extension does not properly stay secure on the Wii Remote handle?

Solution: Make sure the pegs on the Glow Saber extension line up with the slots on the Wii Remote handle. Make sure there aren't any broken parts or any debris on the Glow Saber extension and Wii Remote handle. Make sure the latch for connecting the handle to the Glow Saber extension isn't damaged.

Problem: The Wii Remote does not stay properly secure inside the Remote handle?

Solution: Make sure the latch on the handle is properly set.

Problem: The Glow Saber will not illuminate?

Solution: Make sure the Glow Saber extension is powered ON. Make sure there are batteries in the Glow Saber extension. Make sure the batteries are inserted properly and securely. Replace batteries

DISCLAIMER: dreamGEAR is NOT responsible for any damage to personal injury and or property when using this product. It is your responsibility to practice proper safety procedures.

dreamGEAR
www.dreamgear.net

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>