

## CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Please study this manual carefully and always keep it available. There are, however, some installa-

(1). Read these instructions (2). Keep these instructions. (3). Heed all warnings.

(4). Follow all instructions. (5). Do not use this apparatus near water.

can result in a risk of fire or electric shock.

tion and operation precautions which you should be aware of.

- (6). Clean only with dry cloth. (7). Do not block any ventilation openings-Maintain well ventilated conditions around the product. Do not put product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's
- (8). Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. (9). Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two
- blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. (10). Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles,

and the point where they exit from the apparatus. Power supply cords should be routed so that they


are not likely to be walked on or pinched by items placed upon or against them, paying particular

- attention to cords at plugs, convenience receptacles, and the point where they exit from the product. (11). Only use attachments or accessories specified by the manufacturer. Do not use attachments not recommended by the product manufacturer as they may cause hazards. (12). Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been
- damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. (13). Unplug this apparatus during lightning storms or when unused for long periods of time. Unplug it from
- the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power line surges. (14). Power sources-this product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer

(15). Overloading-do not overload wall outlets, extension cords, or integral convenience receptacles as this

Safe	ety Precautions	Table of Contents	
	CAUTION  RISK OF ELECTRIC SHOCK  WARNING SHOCK HAZARD DO NOT DPEN  AND RISCOUGE CHOICK ELECTRIQUE HE PAS OLIVRIR	IMPORTANT SAFETY INSTRUCTIONS SAFETY INFORMATION TABLE OF CONTENTS	Page
		UNPACKING	1
<b>A</b>	. The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert	NOTE ON DISC	2
4	the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute risk of electric shock to persons.	WEING OF THE MAINTINIT	2.4
		VIEWS OF THE MAIN UNIT	3-4
$\Lambda$	. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.	VIEWS OF THE REMOTE CONTROL	5
		CONNECTIONS(Connecting to a TV)	6
		CONNECTIONS(Connecting to a HeadphonePower  Connections (to AC Adapter) Power  Connections (to DC Car Cord)	
WARNING:	To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.	CONNECTIONS(Power Connections to Battery Pack)	8
	Dangerous high voltage is present inside the enclosure. Do not open the cabinet.	FUNCTION BUTTONS	0.1/
CAUTION:	To prevent electric shock, match wide blade plug to wide slot, and fully insert.		
CAUTION:	This Digital Video Disc Player employs a laser System. To prevent direct exposure to the	SETUP MENU	15-17
	laser beam, do not try to open the enclosure. When open and the interlocks are defeated,	CUSTOM SETUP	17
	visible laser radiation is present.	TROUBLE CHOOTING	10
	Use of controls or adjustments or performance of procedures other than those specified	TROUBLE SHOOTING	18
	herein may result in hazardous radiation exposure. DO NOT STARE INTO BEAM.	SPECIFICATIONS	19
FCC NOTICE:	This equipment has been tested and found to comply with the limits for a Class B digital device. Pursuant with		

## Unpacking Please make sure the following items are included with your DVD player. If any items are missing, contact your dealer. Remote Control

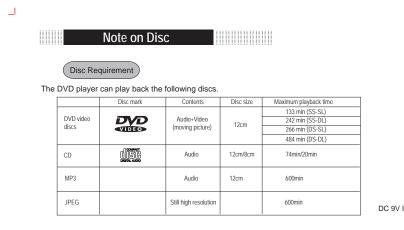


In addition, this unit can play back a CD-R, or CD-RW that contains audio titles or MP3 files. You cannot playback discs

Video disc contains high-density compressed data that needs proper handling. Hold the disc with fingers. Hold the disc's outer edge and/or the center spindle hole. Do not touch the disc surface.



Store discs in cabinet vertically, and in dry condition. Prevent exposure to Direct sunlightHeat or exhaust from a heating device.

Clean the disc surface with a soft, dry cleaning cloth. Wipe the disc surface gently and radically from center toward the outer edge.Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

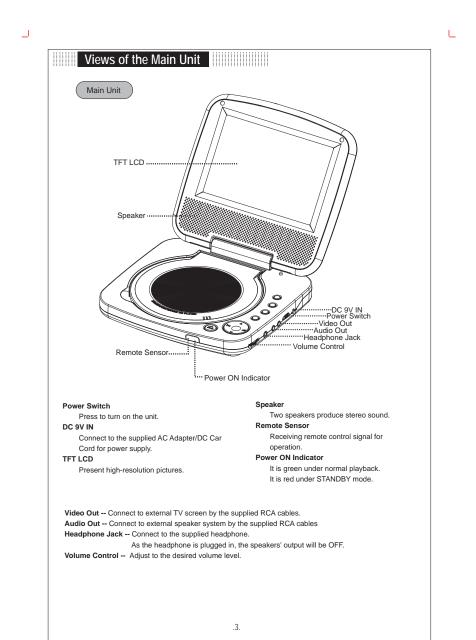

in a residential installation.

the FCC Rules, Part 15. These limits are designed to provide reasonable protection against harmful interference


NOTE: 1. Mains plug is used as the disconnect device. It shall remain readily operable and should not

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in


accordance with the instruction may cause harmful interference to radio communication.


be obstructed during intended use.

2. The rating label is located on the bottom enclosure of the apparatus.

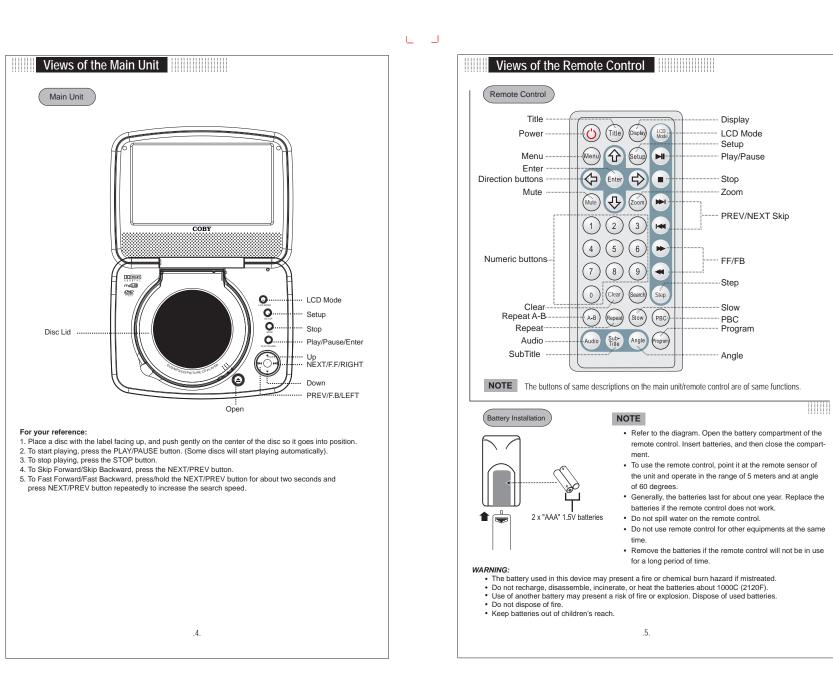



 $\Box$ 

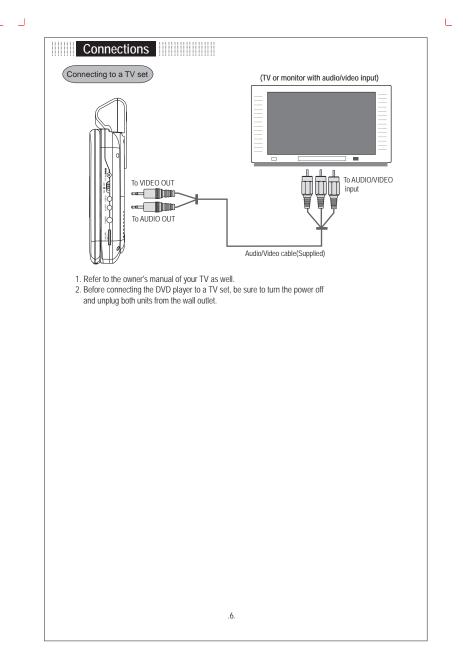

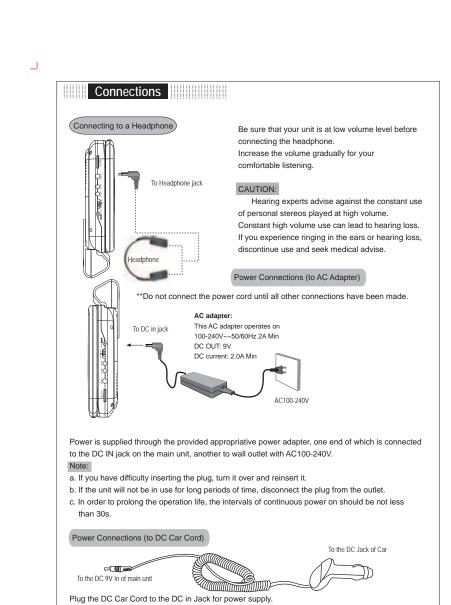

a. Please do not plug it to the battery recharge jack. b. The DC Car Cord is only for in car use.

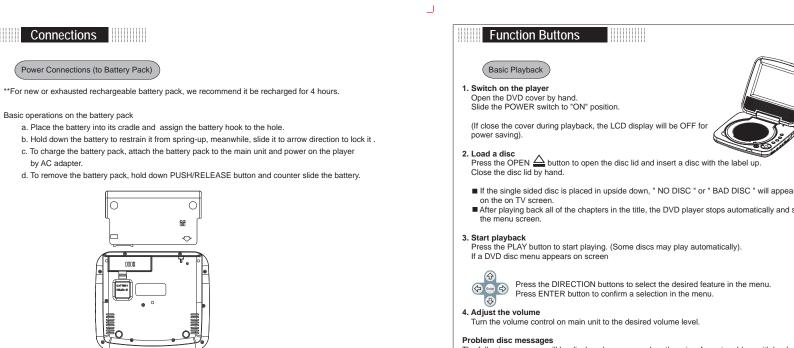

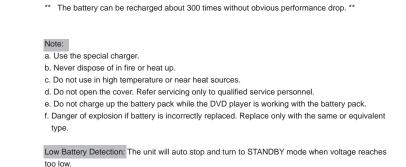

In CD mode

In MP3 mode

When the program menu appears, press right direction button to highlight "track" column and

by the numeric buttons. c. Repeat the above steps to preset up to 20 tracks .
d. Press PLAY to start playback.

To quit, press Program button.

select a desired track by up/down direction button. b.Press PLAY button or ENTER button to confirm. NOTE: You can input title/chapter number directly

When the program menu appears, press direction button to select a desired file.

 NOTE: The wanted files might be in the different.

folders, press left/right button to open/exit the folder. b. Press right direction button to confirm. The chosen

file will be framed as a programed one.

To cancel selection, press right direction button again.

c. Repeat steps above to select tracks you wish to play.

Press the SETUP button to enter the player's setup menu.

Setup The SETUP menu allows the viewer to adjust the setting details of the DVD player.


Please read the "Setup Menu" of the manual for further directions on how to use the SETUP

d. Press PLAY or ENTER to start playback.

Press Program button to quit.

NOTE: Some discs do not allow program setting.

(NI-MH Rechargeable Battery Pack)

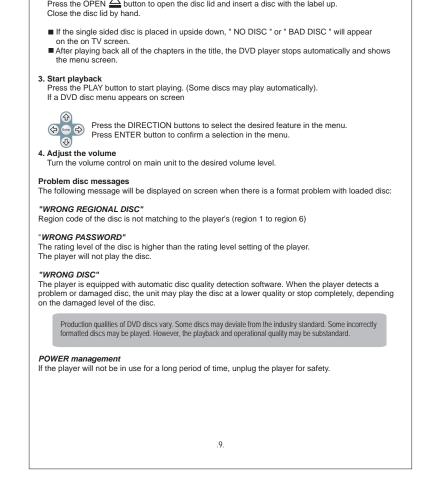

Setup Menu

Automatic power off function

press ENTER to confirm.

The default setting is 0.


The default setting is Normal.


4. And press ENTER to confirm.


turn itself off, except during CD playback.

2. Screen Saver

3. TV System

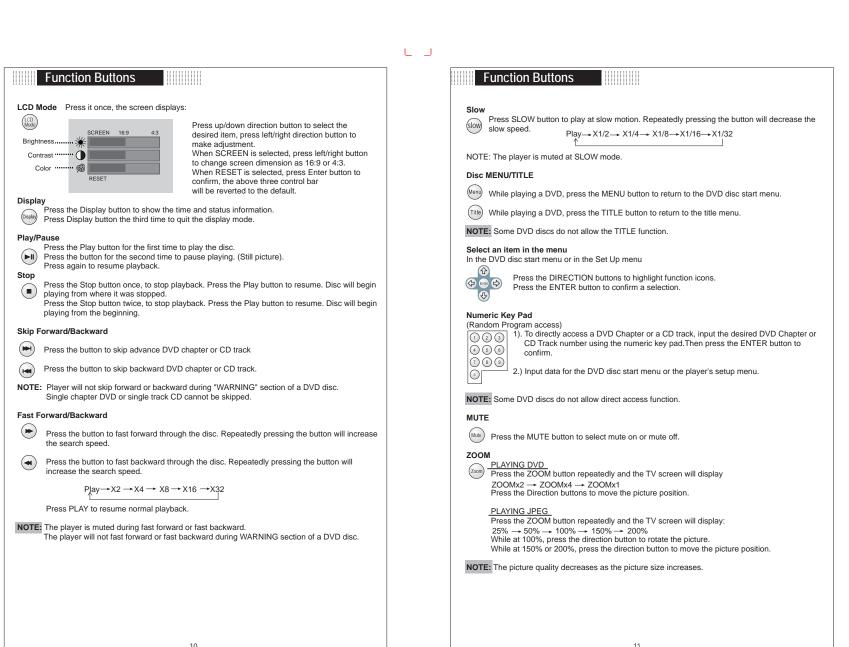


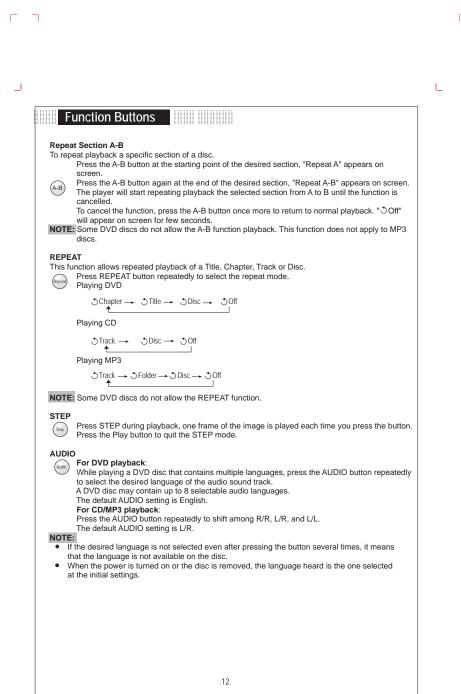


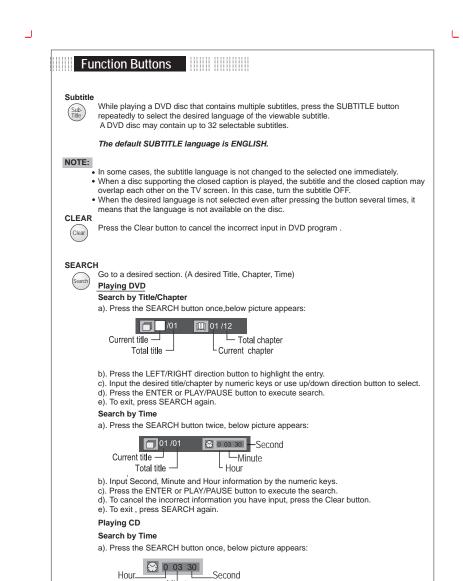


b). Input Second, Minute and Hour information by the numeric keypad.

c). To cancel the incorrect input, press the Clear button.
d). To execute the search, press ENTER or PLAY/PAUSE. To exit, press SEARCH again.

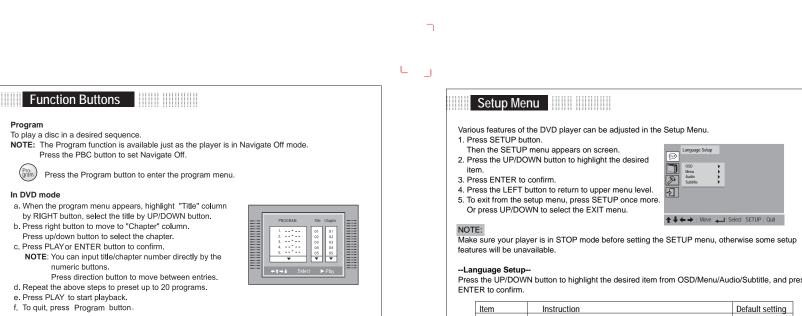

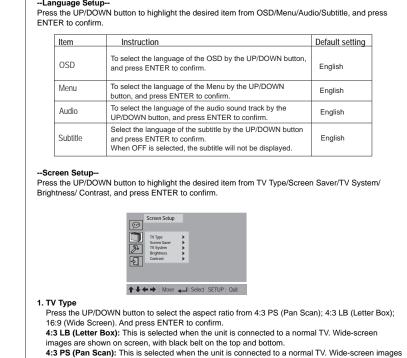

are shown on screen, with some parts cut automatically.

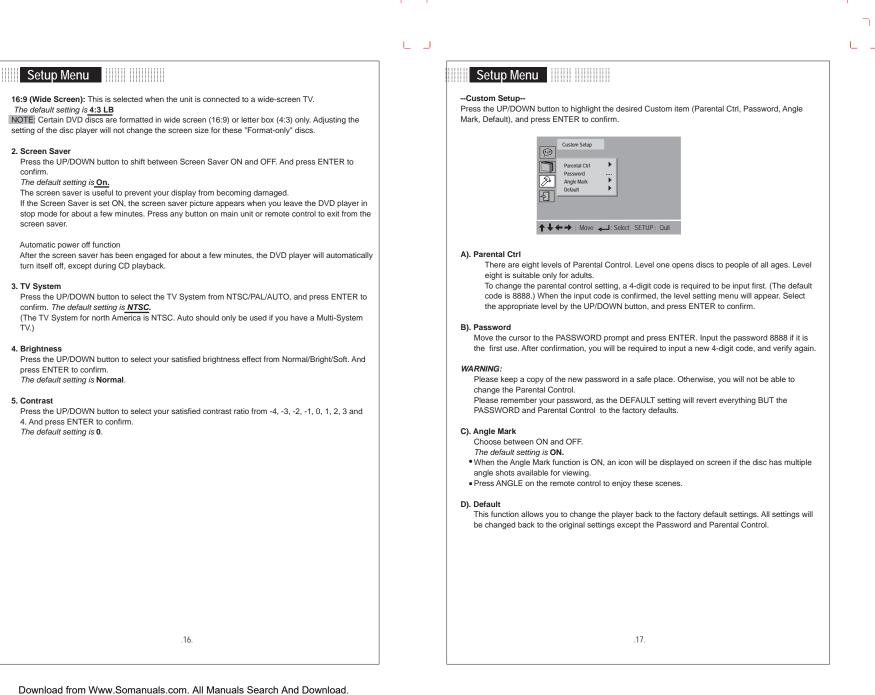

		Г		
Trouble Sh	ooting		Specification	
ould your DVD playe	r develop a problem, please check below before requesting service:		Power supply	DC 9.0V 2A (AC adapter TERMINAL)
Symptom	Check and Action		Power consumption	<=9W
No power	Make sure the unit has been powered on manually.     Check if the power cord has been properly connected to the power outlet.     Make sure the battery pack is fully charged.		Signal system Video output	NTSC  1±0.2V (p-p), 75ohm, Negative sync., 3.5 mm mini jack
Does not play	1. No disc, load a disc. 2. Disc has been loaded upside down. Place the disc with the label side up. 3. Disc's rating level is higher than the player's setting. 4. Disc is incorrect type for the player. 5. Disc is damaged or dirty. Clean the disc or try another one. 6. Moisture may be condensed inside the player. Remove the disc and leave the unit power on for one or two hours.		Audio output  Earphone terminal  Signal /Noise ratio(audio)	1.5 Vrms (1 KHz, 0dB), 3.5 mm mini jack x1 3.5mm stereo mini jack x1 90dB typical
			Dynamic range(audio) Panel size Resolution	90dB typical 7 inch (16:9) 480(H) x 234 (V) (QVGA) Pixels
No Picture	Check if the TV set has been powered on. Use TV remote to select AV signal for DVD rather than broadcast.     Check if the system connection is proper and secure.     Check if the connection cables are damaged.     Clean the disc.		Laser Operating conditions Dimensions Weight	Wavelength 650 nm  Temperature: 0 °c to 35 °c. Operation status: Horizont 187x170x50mm (Main Unit & Batt.)  937g (Main Unit & Batt.)
Picture noisy/ distorted	Disc is damaged or dirty. Clean the disc or try another one.     Reset the color system of the TV set.     Make sure the DVD player is not connected through a VCR, cable or satellite dish.			
lo sound or sound utput not complete	1. Check if the TV and amplifier have been switched on and correctly set. 2. Check if the TV and amplifier system connections are secured. 3. Press AUDIO button to select other audio tracks of the disc. 4. Check if the MUTE function of the TV or amplifier has been activated. 5. There will be no sound output during REVERSE PLAY/PAUSE/SLOW and SEARCH.			
Remote control does not work	1. Make sure the POWER button on the unit has been turned on manually. 2. Remove the obstacles between the remote control and the player. 3. Point the remote control towards the remote sensor on the player. 4. Check if the batteries of the remote control have been loaded with correct polarities. 5. Replace the batteries of the remote control.			
Malfunction	Should the player develop a malfunction, unplug the player for 30 minutes. After that, power on the player and the restore function should reset the player.			

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com