



Innovation in Mobility

ECLIPSE®
F8000 (A) Series
(ADA) Transit Use
Wheelchair and Standee Lift

[PRINT ENTIRE MANUAL](#)

[TABLE OF CONTENTS](#)

Service/Owner Manual

(Retained by Owner After Installation by an Authorized RICON Service Technician)

06/19/98

32DF8AS0.F

U.S. Patent # 5,253,973
GB (U.K.) Patent # 2,224,992
Other U.S. and foreign patents pending

©1997-00 RICON CORPORATION

All Rights Reserved

Printed in the
United States of America

This RICON product must be installed and serviced only by authorized RICON service technicians.

The authorized RICON service technician must refer to this manual for installation instructions.

The owner must refer to this manual for operating instructions, then retain it for future reference by authorized RICON service technicians who perform service and repairs.

Customer Name: _____

Installing Dealer: _____

Date Installed: _____

Serial Number: _____

REVISION RECORD

This table records page changes made since the last revision.

REV.	PAGE(S)	DESCRIPTION OF CHANGE	ECR/ECO
32DF8AS0.F 06/19/98	ALL	VARIOUS REVISIONS AND UPDATES	001575/3240
END OF LIST			

TABLE OF CONTENTS

PAGE

I. INTRODUCTION	1-1
RICON 1-YEAR WARRANTY	1-2
SHIPMENT INFORMATION	1-3
GENERAL SAFETY PRECAUTIONS	1-3
PRODUCT TERMINOLOGY	1-4
II. INSTALLATION	2-1
A. MECHANICAL	2-1
1. LIFT LOCATION	2-1
2. LIFT MOUNTING	2-1
3. HYDRAULIC POWER UNIT	2-3
a. Unit Mounting	2-3
b. Unit-to-Cylinder Connection	2-3
B. ELECTRICAL	2-4
1. INTERLOCK WIRE	2-4
2. WIRING FOR OPTIONAL PUMP ENCLOSURE	2-5
3. MAIN WIRING	2-5
C. FINAL ADJUSTMENTS	2-7
1. FLOOR LEVEL TRAVEL LIMIT SETTING	2-7
2. BRIDGEPLATE ADJUSTMENT	2-9
3. LIFT STOW LEVEL SETTING	2-10
4. DEPLOY LOCK SETTING	2-11
5. STOW LOCK SETTING	2-12
D. VERIFY INSTALLATION	2-13
E. CUSTOMER ORIENTATION	2-14
III. OPERATING INSTRUCTIONS	3-1
A. SAFETY PRECAUTIONS	3-1
B. DAILY SAFETY CHECK	3-3
C. LIFT FUNCTIONS	3-3

D. CONTROLS AND INDICATORS	3-4
1. CONTROL PENDANT	3-4
2. ELECTRICAL CONTROLS AND INDICATORS	3-5
a. Main Circuit Breaker	3-5
b. Control System Circuit Breaker	3-5
3. MANUAL BACKUP PUMP	3-6
a. To Raise Platform Manually	3-6
b. To Lower Platform Manually	3-7
E. LIFT OPERATION	3-8
1. TO ENTER VEHICLE	3-9
2. TO EXIT VEHICLE	3-9
3. TO STOW PLATFORM	3-10
4. MANUAL OPERATION	3-11
a. To Manually Deploy the Lift	3-11
b. To Manually Lower or Raise the Platform	3-11
c. To Manually Stow the Lift	3-11
5. EMERGENCY STOW PROCEDURE	3-12
IV. MAINTENANCE	4-1
A. MAINTENANCE SCHEDULE	4-1
B. TROUBLESHOOTING GUIDES	4-3
1. LIFT TROUBLESHOOTING GUIDE	4-3
2. LIFT OPERATIONAL TROUBLESHOOTING	4-5
C. POWER CUT-OFF INTERLOCK INDICATOR DIAGNOSTICS	4-6
D. ELECTRICAL WIRING DIAGRAMS	4-6
1. COLOR CODES	4-6
2. CONNECTORS	4-7
3. LABELS	4-7
4. SYMBOLS	4-7
5. WIRING DIAGRAMS	4-7

E. HYDRAULIC POWER UNIT FLUID FLUSH AND RENEWAL	4-10
F. BLEEDING THE HYDRAULIC SYSTEM	4-11
V. PARTS DRAWINGS AND LISTS	5-1
APPENDIX 1. LIFT SPECIFICATIONS	5-25

LIST OF FIGURES**PAGE**

FIGURE [1-1]: LIFT REFERENCES	1-4
FIGURE [2-1]: LIFT MOUNTING ATTACHMENT POINTS	2-1
FIGURE [2-2]: LIFT MOUNTING FASTENER	2-2
FIGURE [2-3]: INTERLOCK WIRING	2-4
FIGURE [2-4]: WIRING FOR OPTIONAL PUMP ENCLOSURE	2-4
FIGURE [2-5]: TRAVEL LIMIT ADJUSTMENT	2-6
FIGURE [2-6]: TRUNION REMOVAL	2-7
FIGURE [2-7]: BRIDGEPLATE ADJUSTMENT	2-8
FIGURE [2-8]: STOW LEVEL ADJUSTMENT	2-9
FIGURE [2-9]: DEPLOY LOCK ADJUSTMENT	2-9
FIGURE [2-10]: STOW LOCK HOOK ADJUSTMENT	2-10
FIGURE [2-11]: DECAL LOCATIONS AND PART NUMBERS	2-12
FIGURE [3-1]: UNSAFE VEHICLE SLOPING	3-1
FIGURE [3-2]: PLATFORM POSITIONS	3-2
FIGURE [3-3]: CONTROL PENDANT	3-3
FIGURE [3-4]: MAIN CIRCUIT BREAKER	3-4
FIGURE [3-5]: CONTROL SYSTEM CIRCUIT BREAKER	3-4
FIGURE [3-6]: STANDARD PUMP ENCLOSURE	3-5
FIGURE [3-7]: PLATFORM MANUAL RAISING	3-5
FIGURE [3-8]: PLATFORM MANUAL LOWERING	3-6
FIGURE [3-9]: STOW LOCK HANDLE	3-7
FIGURE [3-10]: PLATFORM LOCK BAR	3-7
FIGURE [3-11]: DEPLOY LOCK HANDLE	3-9

FIGURE [4-1]: MOLEX CONNECTORS	4-7
FIGURE [4-2]: ELECTRICAL DIAGRAM SYMBOLS	4-7
FIGURE [4-3]: WIRING DIAGRAM W/STANDARD PUMP ENCLOSURE	4-8
FIGURE [4-4]: WIRING DIAGRAM W/OPTIONAL PUMP ENCLOSURE	4-9
FIGURE [5-1]: MONARCH HYDRAULIC POWER UNIT	5-2
FIGURE [5-2]: PUMP INTERIOR (STANDARD ENCLOSURE) MOUNTING ASSEMBLY	5-4
FIGURE [5-3]: OPTIONAL PUMP ENCLOSURE ASSEMBLY	5-6
FIGURE [5-4]: LIFT ENCLOSURE ASSEMBLY	5-10
FIGURE [5-5A]: PLATFORM ASSEMBLY	5-14
FIGURE [5-5B]: RESTRAINT BELT DETAIL ASSEMBLY	5-15
FIGURE [5-6]: TRAVELING FRAME ASSEMBLY	5-20
FIGURE [5-7]: CARRIAGE ASSEMBLY	5-22

LIST OF TABLES**PAGE**

TABLE [1-1]: F8000 (A) SERIES LIFT TERMINOLOGY	1-5
TABLE [2-1]: LIFT MOUNTING BRACKET LOAD CAPACITIES	2-2
TABLE [2-2]: HYDRAULIC POWER UNIT BRACKET LOAD CAPACITIES	2-3
TABLE [3-1]: LIFT FUNCTIONS	3-3
TABLE [4-1]: MAINTENANCE SCHEDULE	4-1
TABLE [4-2]: TROUBLESHOOTING GUIDE	4-3
TABLE [4-3]: OPERATIONAL TROUBLESHOOTING GUIDE	4-5
TABLE [4-4]: INTERLOCK INDICATOR TROUBLESHOOTING GUIDE	4-6
TABLE [4-5]: COLOR CODE DEFINITIONS	4-6

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>