

 
# EUREKA

## Cordless, Rechargeable VACUUM CLEANER

Household Type

### Owner's Guide Model 92A

---

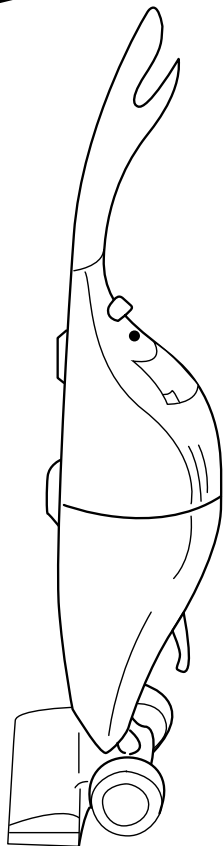

Charge 14-16 hours  
before first use.

### **IMPORTANT**

Do not return this product  
to the store.

**For assembly problems or  
questions contact:** Eureka's  
Customer Service Division  
toll free at 1-800-282-2886\*,  
7 a.m. to 8 p.m., Central  
Standard Time, Monday through  
Saturday.

**For replacement of broken or  
missing items** to be shipped  
direct to you, call 1-800-438-  
7352\*, 8 a.m. to 4:45 p.m.,  
Central Standard Time, Monday  
through Friday.

**\*En Mexico llame al 5670-6169**

### **Index**

Important Safeguards.....	2
Service Information .....	4
Assembly .....	5
Use .....	6
Dust Cup .....	7
Filter .....	7
Battery Disposal .....	8

[www.eureka.com](http://www.eureka.com)

# IMPORTANT SAFEGUARDS

When using an electric appliance, basic precautions should always be followed, including the following:

**Read all instructions before using this vacuum cleaner.**

## WARNING

**To reduce the risk of fire, electric shock, or injury:**

- **Do not use outdoors or on wet surfaces.**
- Do not operate the vacuum cleaner or charger that has been damaged in any way. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- To avoid excessive heat and damage to the unit or batteries, do not operate the vacuum cleaner while plugged into the charger.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual.
- Use only Eureka charger D7300-02 for 120 volt and 6.0 volt battery pack 61223.
- Do not pull or carry the charger by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Do not unplug by pulling on cord. To unplug, grasp the charger, not the cord.
- Do not handle charger or vacuum cleaner with wet hands.
- **DO NOT MUTILATE OR INCINERATE BATTERIES AS THEY WILL EXPLODE AT HIGH TEMPERATURES.**
- Leaks from battery cells can occur under extreme usage or temperature conditions. If the liquid gets on the skin wash quickly with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
- The terminal on the vacuum cleaner should be kept free and clean of objects. While there is no shock hazard from the terminal, a burn could occur if metal objects are inserted into the terminal area.
- This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without a filter in place. When servicing the unit, never put fingers or other objects into the fan chamber in case the unit would accidentally be turned on.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Locate the charger indoors in a cool, dry area not exposed to the weather to avoid electrical shock and/or cleaner damage.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

## SAVE THESE INSTRUCTIONS

# CONSEILS DE SÉCURITÉ

Lors de l'utilisation d'un appareil électrique, quelques précautions élémentaires doivent être observées, incluant les suivantes:

**LISEZ TOUTES LES INSTRUCTIONS AVANT D'UTILISER VOTRE ASPIRATEUR.**

## AVERTISSEMENT

Pour réduire le risque de feu, de choc électrique ou de blessure:

- **N'utilisez pas l'aspirateur à l'extérieur ou sur une surface mouillée.**
- N'utilisez jamais l'aspirateur ou le chargeur s'ils ont été endommagés. Si l'aspirateur ne fonctionne pas comme il le faut, s'il a été échappé, s'il a été endommagé, s'il a été laissé à l'extérieur, s'il a été échappé dans de l'eau, retournez-le à un centre de service avant de l'utiliser.
- Pour éviter que l'aspirateur surchauffe, ou que l'aspirateur ou les piles soient endommagés, n'utilisez pas l'aspirateur lorsqu'il est encore dans son support de recharge.
- Ne permettez pas que l'aspirateur soit utilisé comme un jouet. Une attention particulière est nécessaire lorsqu'il est utilisé par ou près d'un enfant.
- Suivez les recommandations d'utilisation de ce manuel.
- Utilisez uniquement le chargeur Eureka modèle n° D6300-02 pour 120 volt; et pièce n° 61223, 6.0 volt bat de pile.
- Ne pas tirer l'aspirateur ou le transporter par le cordon. Ne pas utiliser le cordon en guise de poignée. Ne pas fermer une porte sur le cordon ou tirer le cordon sur des bordures ou des coins pointus. Tenir le cordon à distance des surfaces chauffantes.
- Ne pas utiliser des rallonges ou des prises qui n'ont pas une capacité suffisante pour transporter le courant.
- Ne pas débrancher en tirant sur le cordon. Pour débrancher, empoignez le chargeur et non pas le cordon.
- Ne pas manipuler le chargeur ou l'aspirateur avec les mains mouillées.
- **NE PAS MUTILER OU INCINÉRER LES PILES. LES PILES EXPLOSENT A DES TEMPÉRATURES EXCESSIVES.**
- Il peut y avoir des fuites des éléments des piles lorsque celles-ci sont soumises à des conditions d'emploi excessif ou de température excessive. Si le liquide touche la peau (1) laver tout de suite la peau avec de l'eau et du savon. Au cas de contact avec les yeux, nettoyer à grande eau pour un minimum de 10 minutes. Cherchez des soins médicaux.
- La borne de l'aspirateur doit être maintenue propre et libre de tout autre objet. Il n'y a aucun risque de choc électrique de la borne elle-même, mais une brûlure est possible si des objets en métal sont introduits dans la borne.
- Cet aspirateur crée de la succion. Tenir les parties mobiles et les ouvertures loin des cheveux, des habits, des doigts et de toute partie du corps.
- Ne pas ramasser des objets qui brûlent ou fument comme des cigarettes, des allumettes ou les cendres chaudes.
- Ne pas utiliser sans que le filtre ne soit installé. Lors de réparations ou d'entretien, il ne faut jamais mettre les doigts, ou autres objets, près du ventilateur dans le cas où l'aspirateur serait accidentellement mis en marche.
- Portez une attention particulière lorsque vous nettoyez les escaliers.
- Ne pas utiliser pour ramasser des liquides inflammables ou combustibles comme de l'essence. Ne pas utiliser dans les endroits où ces liquides pourraient être présents.
- Situez le support et le chargeur pour l'aspirateur à l'intérieur, dans un endroit frais, sec et protégé pour éviter le choc électrique ou les dommages.
- Travaillez toujours dans un endroit bien éclairé.
- Débranchez les appareils électriques avant de les nettoyer avec l'aspirateur.

## CONSERVEZ CES INSTRUCTIONS

## GENERAL INFORMATION

The cordless vacuum cleaner is the answer for quick, convenient, and easy cleanups. Grab the cleaner for little tasks rather than using a larger cleaner.

**Charge for 14-16 hours before first use.  
Batteries could lose charge in shipping.**

It is best to charge the batteries when temperatures are between 32°F (0°C) and 104°F (40°C). Other temperatures could damage batteries.

While charging, the charger may become warm to the touch. This is a normal condition and does not indicate a problem.

## Service Information

The instructions in this booklet serve as a guide to routine maintenance. If additional service is required, telephone toll free:

**USA: 1-800-282-2886  
Mexico: 5670-6169  
Canada: 1-800-282-2886**

for the nearest Eureka Authorized Warranty Station. If you prefer, you can write to The Eureka Company, Service Division, 807 N. Main St., Bloomington, IL 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7. Refer to The Eureka Warranty for complete service information.



**DO NOT OIL.** The motor has lubrication and has a permanent seal.

## Rating Plate

The model number is indicated on the rating plate which is located on the back of the vacuum cleaner. For prompt and complete service, always refer to these numbers

THE EUREKA COMPANY  
Bloomington, Illinois 61701 USA  
HOUSEHOLD TYPE

MODEL

Model and Type No. \_\_\_\_\_

Serial No. or Date Code \_\_\_\_\_

## Important Battery Disposal Information - Call 1-800-822-8837 Nickel-Cadmium Batteries



The RBRC Battery Recycling Seal on the nickel-cadmium (Ni-Cd) battery indicates The Eureka Company is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful life, when taken out of service in the United States or Canada. The RBRC program provides a convenient alternative to placing used Ni-Cad batteries into the trash or the municipal waste system, which is illegal in some areas. Please call 1-800-8-BATTERY for information on Ni-Cd battery recycling in your area.

**NOTE: Remove the battery pack only when the batteries no longer hold a charge and you plan to dispose of them.**

## Identify Parts

Telescoping Handle

Telescoping Handle Release

Charger Socket

 
 
On/Off Switch

Battery Cover

Motor Unit

Dust Cup Latch

Dust Cup

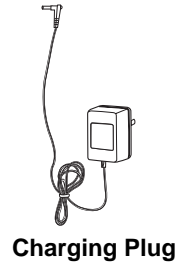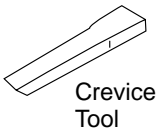


## Charge the Batteries

**NOTE:** Charge the batteries for 14-16 hours before initial use. A cleaner may lose charge in shipment. The charging plug will become warm, however, this is not a cause for concern.

It is all right to leave the cleaner on constant charge so it is always ready to use. Unplug only if it will not be in use for several weeks at a time.

 1. Find the charger connector on the opposite end of the charging plug.
2. Push the charger connector into the charger socket on the vacuum.
3. Push the charging plug into your electric socket.
4. The vacuum batteries are now being charged.

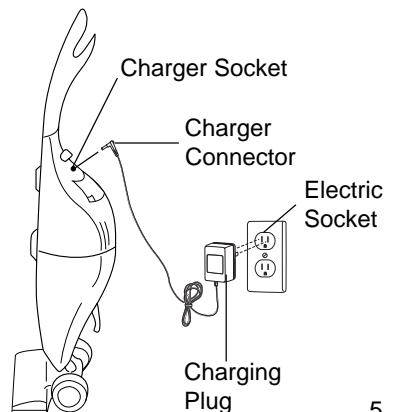


## HOW TO USE

Use this lightweight vacuum cleaner for quick and easy cleaning. Move the nozzle over any floor covering to quickly clean dirt, lint or threads.


### Telescopic Handle

 Press down on telescoping handle release, then pull the handle out to its maximum length and release the latch so that the handle locks firmly into place.

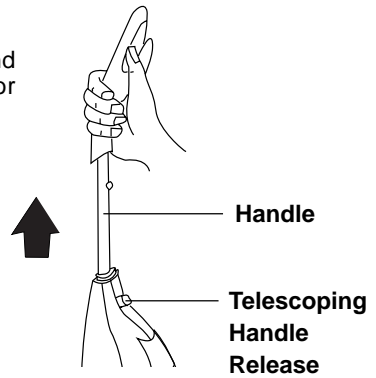


### Power Switch

 1. Push switch forward to turn on.
2. Pull switch back to turn off.

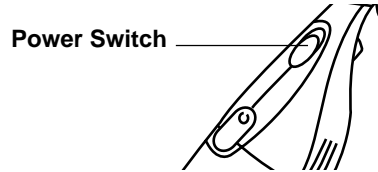


### As a Stick Vac

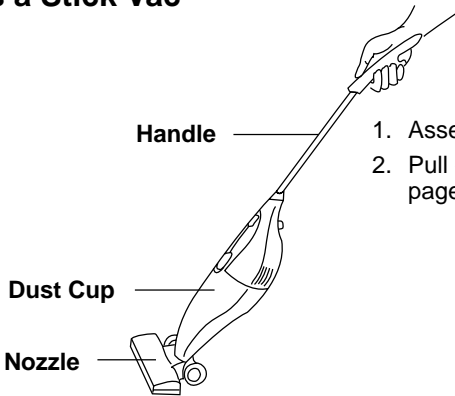 

1. Assemble the nozzle into the dust cup.
2. Pull out handle to its maximum length. (See page 5.)

### As a Hand Vac

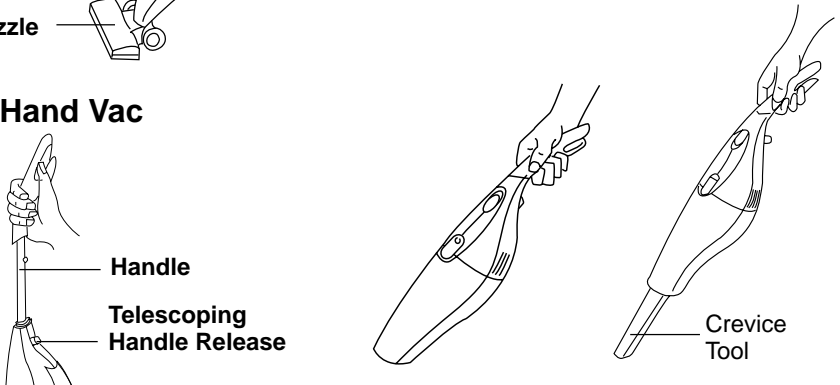 


1. Remove the nozzle if it is attached.
2. Press down on the telescoping handle release button and push the handle firmly down into the cleaner. It will lock into place.
3. To use hand vac with crevice tool, push crevice tool into hand vac till it stops.

## HOW TO MAINTAIN

 
The instructions in this booklet serve as a guide to routine maintenance. To keep the cleaner operating at top efficiency empty the dust cup and clean the filter after each use.

### Empty Dust Cup

**Note:** Turn off the power switch before emptying dust cup.

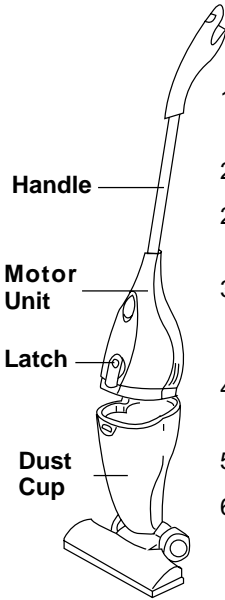

 1. The telescoping handle must be completely extended to remove the dust cup.
2. Push down on the top of the dust cup latch.
2. Pull dust cup from handle section and lift from the nozzle.
3. Grasp the edge of dust cup filter and pull out to remove. *Clean motor filter (refer to dust cup filter section).*
4. Shake contents of dust cup into waste container.
5. Replace dust cup filter.
6. Fit dust cup and motor unit back together and push firmly until latch clicks into place.

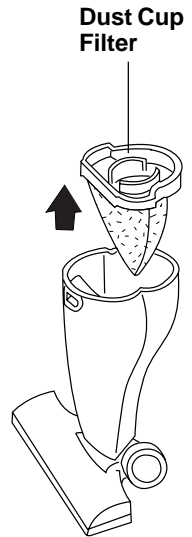


### How to Clean Dust Cup Filter

**Note:** Turn off the power switch and unplug the electrical cord to service.

Clean the dust cup filter after each cleaner use.

 1. Separate dust cup from motor unit.
2. Pull dust cup filter out of dust cup.
3. Shake and brush the dust and dirt from filter.
4. If desired, launder the filter by hand in warm water using a mild detergent.
5. Air dry thoroughly before returning to use.
6. Replace dust cup filter in dust cup. Fit dust cup and motor unit back together and push firmly until latch clicks into place.

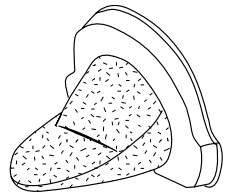


**Replace a dirty or torn filter. Order additional dust cup filters from The Eureka Company, Bloomington, IL 61701. Order dust cup filter, part number 60796. To place an order please telephone 1-800-438-7352.**

## HOW TO MAINTAIN (continued)

### How To Change Batteries

 1. Find the battery cover located on the back of the vacuum.
2. Use a screwdriver at either bottom corner of the battery cover to pry the battery cover up and off the vacuum.
3. Remove the battery pack by disconnecting the two wires attaching it to the vacuum. After disconnection pull out battery pack.
4. Put the new battery pack into the vacuum with contact strips facing out. Connect the wires. (Hook the black lead to the top contact strip and the red lead to the bottom contact strip.)
5. Replace battery cover.

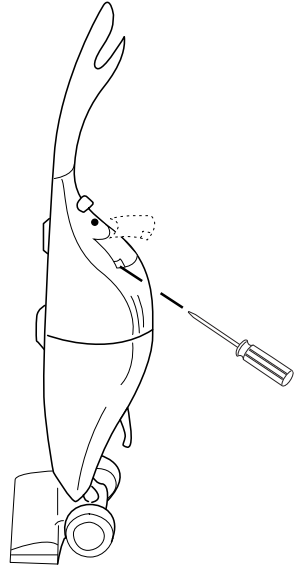


### Cleaner Care

**NOTE: Turn off power switch before cleaning unit.**

To keep the vacuum cleaner looking new, it can be wiped with a damp cloth and a mild soap solution, then thoroughly dried. Never use any type of chemical as chemicals can damage the cleaner.
 
### How to Store Unit

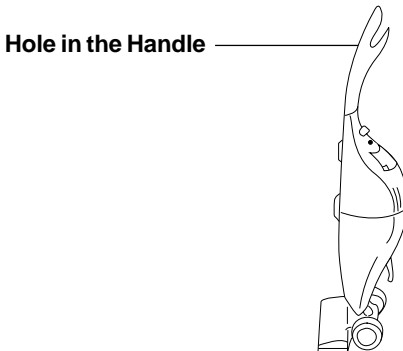

Use the hole in the handle to hang the cleaner for storage or stand upright by itself.



S O L D T O

Name \_\_\_\_\_  
 Address (street address needed for UPS) \_\_\_\_\_  
 City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
 Telephone (Day) \_\_\_\_\_ (Eve) \_\_\_\_\_ (Fax) \_\_\_\_\_

S H I P T O

Name \_\_\_\_\_  
 Address (street address needed for UPS) \_\_\_\_\_  
 City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
 Telephone (Day) \_\_\_\_\_ (Eve) \_\_\_\_\_ (Fax) \_\_\_\_\_

**To Order**



 
**By Phone**  
**1-800-438-7352\***

HOURS:  
 Call between 8 a.m.  
 and 4:45 p.m.,  
 central standard time  
 Monday through Friday.

**By FAX**  
**1-309-823-5789**

\*En Mexico  
 llame al **5670-6169**

**By Mail**



**Simply fill out this  
 Order Form.  
 Please be sure to  
 include day  
 and evening  
 phone numbers.  
 www.eureka.com**

**Genuine Eureka Parts**

	Part No.	Qty.	Price (USD)	Total
Filter	60796		1.99	
Battery Pack (92A)	61223		17.39	
Charger (92A)	70674		3.99	
Crevice Tool (92A)	60925-2		3.09	
Crevice Tool (160A)	60925-1		3.09	
Crevice Tool (166A)	60925		2.99	
<b>Total</b> (prices subject to change without notice)				
<b>Tax</b> (add state and local taxes as required by law)				
<b>Postage and Handling Charge</b> (Within the U.S.A.)				<b>\$3.75</b>
<b>TOTAL</b>				

To Answer Problems or Questions for U.S.A. and Canada call:

**1-800-282-2886\***

7 a.m. to 8 p.m. central standard time Monday through Saturday.

\*En Mexico llame al

**5670-6169**

*Method of Payment (No C.O.D.s)*

Check or money order (payable to The Eureka Company). Do not send currency.  
 Charge to my  Visa (13/16 digits)  MasterCard (13 digits)  American Express (15 digits)  
 \_\_\_\_\_  
 Acct. number \_\_\_\_\_  
 \_\_\_\_\_  
 Expiration date \_\_\_\_\_

Signature (Full name as shown on account) \_\_\_\_\_



# THE EUREKA LIMITED WARRANTY

## *What This Warranty Covers*

Your Eureka cleaner is warranted to be free from all defects in material and workmanship in normal household use for a period of one year. The warranty is granted only to the original purchaser and members of his or her immediate household. The warranty is subject to the following provisions.

## *What This Warranty Does Not Cover*

- Parts of the cleaner that require replacement under normal use.
- Damages or malfunctions caused by negligence, abuse, or use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka parts.

## *What The Eureka Company Will Do*

The Eureka Company will, at its option, repair or replace a defective cleaner or cleaner part that is covered by this warranty. As a matter of warranty policy, the Eureka Company will not refund the consumer's purchase price.

## *Warranty Registration*

Please fill out and return the warranty registration card accompanying your cleaner.

## *Obtaining Warranty Service*

To obtain warranty service you must return the defective cleaner or cleaner part along with proof of purchase to any Eureka Authorized Warranty Station. You will find the nearest location in the Yellow Pages, under "Vacuum Cleaners-Service and Repair." Be certain that the Warranty Station is "Eureka Authorized."

For the location of the nearest Eureka Authorized Warranty Station or for service information, telephone toll free:

**USA: 1-800-282-2886**

**Mexico: 5670-6169**

**Canada: 1-800-282-2886**

If you prefer, you can write to The Eureka Company, Service Division, 807 North Main Street, Bloomington, Illinois 61701, USA. In Canada write to The Eureka Company, 866 Langs Drive, Cambridge, Ontario N3H 2N7. If it is necessary to ship the cleaner outside your community to obtain warranty repair, you must pay the shipping charges to the Eureka Authorized Warranty Station.

Return shipping charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type, and serial number from the data plate on the cleaner.

## ***Further Limitations and Exclusions***

Any warranty that may be implied in connection with your purchase or use of the cleaner, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall Eureka be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the cleaner. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary by state.



## ***Questions & Answers about Genuine Eureka Products***

**Q:** Why should I use only Genuine Eureka parts in my Eureka product?

**A:** Using Genuine Eureka Products, which are made to our exacting specifications and engineered with emphasis on quality, performance, and customer satisfaction, ensures the long life and cleaning efficiency of your vacuum cleaner. Overall, this saves you money and helps to keep your home clean.

**Q:** How can I be sure I am using only genuine Eureka products in my product?

**A:** Typically, packaged products and paper bags can be identified by a "Genuine Eureka Product" symbol (see illustration above). For further identification assistance, you may call our toll-free number, 1-800-282-2886, for the location of a nearby Eureka Authorized Warranty Station.

**Q:** Are there any differences between "made to fit" or "imitation" and Genuine Eureka parts?

**A:** Yes, there are some very important differences in materials, quality, and reliability. Many customers have mistakenly purchased "imitation" paper bags and parts while thinking they purchased genuine. Unfortunately, many of these customers discovered the differences after they experienced related difficulties.

**For Genuine Eureka Value, Accept No Limitations!**

Household Warranty  
abs 190

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>