

B) Timer Setting Mode

- 1) Press [S2] to cycle around the setting item: Timer-Type, hour, minute, second and back to timer-type again.
- 2) Press [S3] / [S4] to increase/decrease the setting value.
- 3) Press [S1] to exit the setting.

C) Timer Alarm:

- 1) Timer alarm will be output at 2 beeps per second
- 2) Timer alarm will be output for 30 seconds if timer is counted down to zero normally.
- 3) If preset value is less than 1 min, and count down repeat is selected, timer than will output for 1 second only each time the timer counted down to zero.
- 4) Timer will be stopped and reset automatically with alarm sounds for 30 seconds, if repeat counter counted up to 100.
- 5) Timer will be stopped and reset with alarm sounds for 30 seconds if timer counted up to overflow (>23H59M59S).

Remark: If there is no key operation for 30 seconds, setting mode will be exit automatically.
(Any adjustment in setting mode, it will be updated during auto exit)

8. Alarm Mode




- 1) Press [S3] to select the alarm.
- 2) Press [S4] to enable/disable the alarm
- 3) Press [S2] to change to Time mode again.

Remark:

- 1) If there is no key operation for 30 seconds, time mode will be retrieved automatically.
- 2) Alarm (4 beeps per second) will be output for 30 seconds, if alarm time is arrival and alarm is enabled, press any key to stop to alarm.

9. Alarm Setting Mode

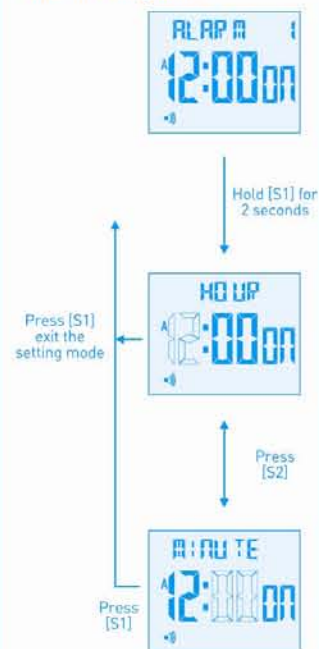

- 1) Press and hold [S1] for 2 second to enter the alarm setting mode.
- 2) Press [S3]/[S4] to increase/decrease the setting value.
- 3) Press [S1] to exit the setting mode.

Remark:

- 1) If there is no key operation for 30 seconds, setting mode will exit automatically.
- 2) Alarm will be enabled automatically if there is any change in hour or minute.

10. EL Function

- 1) The display will be illuminated by pressing the [S1] in any mode. The EL will be light on for 3 seconds.
- 2) Please on/off the Auto EL function in Time setting mode. EL will be on if any key pressed when Auto EL function is on.
- 3) Auto EL function will be disabled 30 minutes automatically after it is enabled.

JAMES SAYS...



FOLLOW THESE 8 TIPS TO GET THE MOST OUT OF YOUR NEW WATCH!

1. Never Pull out the crown or operate the pushers/buttons under water.
2. Make sure your crown is returned to the original position before you expose your watch to water.
3. If your watch is exposed to saltwater it is very important to wash it thoroughly under tap water and wipe dry with a soft cloth. Keep it clean!
4. Sever impacts or drops may affect your watches water resistance and performance.
5. Avoid exposing your Freestyle watch to extreme temperatures such as in a hot shower, Jacuzzi, sauna or hot tub. The combination of extreme heat and water may cause your watch to lose some of its water resistance.
6. Avoid exposing your watch to chemicals, soaps or solvents as they deteriorate the water resist seals in your watch.
7. Never try to remove the caseback, leave this to a certified watch repair technician or Freestyle service center. This will help in preventing water leakage from improper battery replacement.
8. It is advisable to have your watch pressure tested annually and to re-furbish your watch every 2-3 years to extend the life of the watch.

LIMITED LIFETIME WARRANTY

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for the lifetime of the watch (under normal use) from date of original purchase. The following are not covered under warranty: battery, strap/bracelet/band and crystal.

Accidental breakage or damage due to normal wear or misuse of the product, including but not limited to the mathematical accuracy of the product, is not covered under this warranty. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Under this warranty FREESTYLE will make any necessary repairs, if applicable, at no cost to you the consumer. Any repair needed that is not under warranty will be at the cost of you the consumer. Proof of purchase and / or original receipt it needed to validate your warranty.

Your warrantee is voided by any servicing out by a non-authorized agent. Any other form of guarantee to you by the retailer is his / her responsibility. This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact you authorized FREESTYLE dealer for warranty information.

Please send to the address below and include the following (w/ the form included on either this page or the flipside)

- 1) A copy of your original sales receipt
- 2) Your printed name, address, phone number and a brief description of the problem.
- 3) A Check, Money Order payable to Freestyle USA in the amount of \$8.50 for processing and handling. If using a Credit Card, be sure to include card number and expiration date on included form.

FREESTYLE

Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101
1-800-776-6449

Should the warranty on your watch no longer be valid or found to be voided, please see the enclosed mailing form (on this page or flipside) for replacement costs per item. Please do not include any special watchband or any other items of personal value in your shipment. Allow 30 days for processing and the return of your serviced watch.



Freestyle

Attn: Individual Returns
47-50 33rd Street
Long Island City, NY 11101
1-800-776-6449

Battery	\$ 4.00
Case	10.00
Bezel	6.00
Band(Polyurethane)	12.00
Band(Leather)	12.00
Band(Metal)	20.00
Band(Nylon)	7.00
Processing and handling	8.50

Total \$ _____

- Check or Money Order
 Master Card
 Visa

Card # _____

Exp Date _____

Name _____

Address _____

Phone # _____

Signature _____

visit our site

www.freestyleusa.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>