



**#527 KAT  
WATCH INSTRUCTIONS**

**FEATURES:**

- CURRENT TIME
- DAY/MONTH/DATE
- DAILY ALARM
- HOURLY CHIME
- STOPWATCH
- OPTIONAL 24-HR. TIME
- WATER RESISTANT TO 330FT/100M
- NIGHT VISION™ BACK LIGHT

**KEY TO SYMBOLS**



**LIGHT BUTTON:**

In order to activate the light feature on this display, simply press the light button. The light will remain on for a few seconds after you release your finger.

**Control of watches:**

Normal Display :  
Hour, Minute, Second and Day of week.

Push of S1-Button :  
Display shows alarm time in Hour and Minute.

Push of S2-Button :  
Month, Date and Day of week.

Push of S3-Button :

For change of Function.

**ALARM OF CHIME ON/OFF :**

In normal time :  
Hold S1-Button and Display shows alarm time in hour and Minute.

1 x Push S2-Button : Chime Bell will be on.

2 x Push S2-Button : Alarm mark will be on.

3 x Push S2-Button : Chime Bell will be off.

4 x Push S2-Button : Alarm mark will be off.

Release S1-Button and Display changes to normal time immediately

**CHRONOGRAPH MODE :**

In normal time, Push S3-Button, chronograph Function will be set.

**Start/Stop:** Push S2-Button, it operates in cumulative counting up to 1/100 second.

**Split time :** Change to Split Time from chronograph time display is performed by pressing S1-Button while chronograph is counting. Chronograph keeps counting after change. Push S1-Button again to return to chronograph Time display.

**Reset :** Push S2-Button to stop counting and then push S1-Button.

**ALARM TIME SETTING :**

In normal time, hold S3-Button about three seconds. Monday flag + Hour digits will flash which is advanced through depression of S1-Button.

1 x Push of S2-Button : Monday flag + Minute digits of the Alarm time will flash which is advanced as above.

1 x Push of S3-Button display change to normal time again.

**NORMAL TIME SETTING :**

In normal time, hold S3-Button about three seconds and then Push S3-Button once. Tuesday flag + second digits will flash. Push S1-Button and Second will be reset to zero.

1 x Push of S2-Button : Minute digits flash and advance by depression of S1-Button.

2 x Push of S2-Button : Hour digits flash and advance as above.

3 x Push of S2-Button : Month digits or Date digits flash. It depends on their position and advance as above.

4 x Push of S2-Button : Month digits or Date digits flash and advance as above.

5 x Push of S2-Button : Flag of weekday flashes and advances as above.

Push of S2-Button and second will start for setting again. If S3-Button is pushed during any time change Normal Time will resume on display.

**12/24 HOURS REVERSAL OPTION :**

In normal time, hold S1-Button or S2-Button and then Push S3-Button. Hour digits will reverse and the A.M. or P.M. mark will appear

or disappear. 12 Hours mode P.M. will be present on the display when it is afternoon.

**ALARM TEST :**

Hold S1-Button and then hold S2-Button together. Alarm will "Beep" and Alarm sounded.

**ALARM SOUND OFF :**

Push of S1-Button: To silent Alarm.

Month/Date Position Interchange In Normal Time Mode, Hold S2-Button. And Then Push S1-Button.

**WARRANTY INFORMATION**

Freestyle U.S.A. warrants, to the original purchaser, that its watches are free from defects in materials and workmanship for a period of ten (10) years under normal use. The warranty excludes batteries, crystal, watch case plating, and strap/bracelet/ band. The warranty excludes normal wear and tear and abuse.

Special note: Freestyle® watches are designed and engineered to be highly water-resistant, and to withstand the most active of lifestyles. The most important component in keeping your watch water-resistant is the case back O-ring, which prevents water from entering the watch through the case back.

Water leakage most often occurs after improper battery replacement. We strongly recommend having a certified jeweler, watch repair technician or Freestyle's service center replace your battery. Water leakage due to improper battery replacement is not covered under warranty.

Should your Freestyle® watch require warranty service, send it along with the following:

1. A copy of your sales receipt
2. Your printed name and address
3. Your telephone number
4. A brief description of the problem
5. Please include \$8.50 for processing and handling, using one of the following payment methods:

- Check
- Money order
- Credit card (be sure to include card number and expiration date)

REMEMBER: NEVER INCLUDE A SPECIAL WATCHBAND OR ANY OTHER PERSONAL ARTICLES OF VALUE IN YOUR SHIPMENT.

Send to the following address:

Freestyle  
Attn: Individual Returns  
47-50 33rd Street  
Long Island City, NY 11101

(718)-729-8890

Please allow 30 days for return of your watch.

Neither this warranty, nor any other warranty expressed, is assumed for any incidental or consequential damages, including but not limited to the mathematical accuracy of the product. Some states do not allow limitations on how long an implied warranty lasts, or the exclusions of or limitations on consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty applies to watches purchased in the United States. For watches purchased outside the United States, please contact your authorized Freestyle® dealer for warranty information.

If your watch requires servicing not covered under our warranty (battery, crystal, strap/bracelet/band, watch case plating), or refurbishing, complete the return form (next column) and return with your watch.

Visit our website at:  
[www.freestyleusa.com](http://www.freestyleusa.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>