

iHome®

Model: iDN55

***Dual Charge and Play
Portable Stereo System
with Sliding Cover
for iPad, iPhone or iPod***

works with



iHome+ apps
available on the App Store



Questions? Visit www.ihomeaudio.com
Download from Www.Somanuals.com. All Manuals Search And Download.

Introduction

Thank you for purchasing this unit. This product is designed to provide high quality sound for your iPad, iPhone, iPod, or other audio device (via line in).

This instruction booklet explains the basic operation and care of the unit. Please read carefully and keep for future reference.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials can damage the surface of the unit.

Table of Contents

| | |
|---|-----|
| Meet Your Unit | 1-2 |
| Setting up the Unit | 3 |
| Playing your iPad, iPhone or iPod / Playing Audio Via Aux | 4 |
| Troubleshooting / Battery Warning | 5 |
| Consumer Product Safety Guide | 6 |
| Warranty Information | 7 |



is a registered trademark of SRS Labs, Inc. TruBass technology is incorporated under license from SRS Labs, Inc.

SRS WOW®, which features TruBass®, significantly improves the playback quality of audio, delivering a dynamic 3D entertainment experience with deep, rich bass and high frequency clarity for crisp detail.

FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.


Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Meet Your Unit


Top/Front of Unit (open)

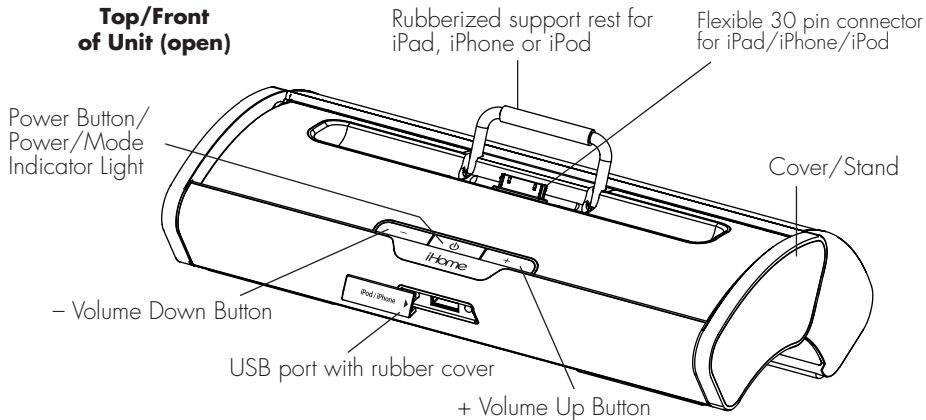

Rear of Unit

 


Bottom of Unit

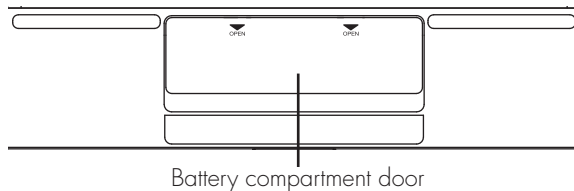 

Meet Your Unit



Included

 - iDN55 system
- 1 100V-240V AC Adaptor

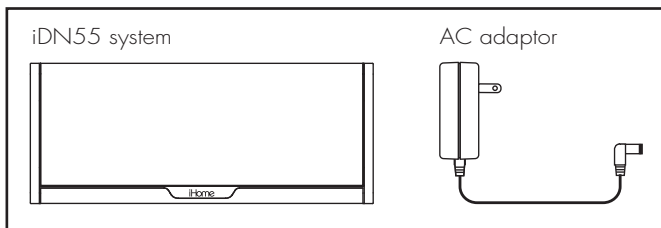

Opening and Closing the Slide Cover

  
- Slide the cover open to access the dock and controls. To do so, grip the unit in both hands. Press down slightly on the cover with both thumbs to release it, then pull it gently to slide it towards the back of the unit. The cover will click into place when fully extended/open.
- Slide the cover closed for travel or to protect from dust. To do so, make sure nothing is docked in the unit and gently slide the cover forward. The support rest will automatically fold down when the cover is closed.

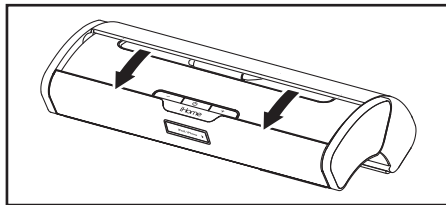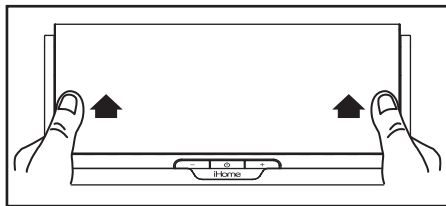

Setting up the Unit to Operate on Power

For easy access to the DC jack, make sure slide cover is closed.

 
1. Connect the included AC adaptor to the DC Jack on the back of the unit.
2. Connect the plug to a working outlet.

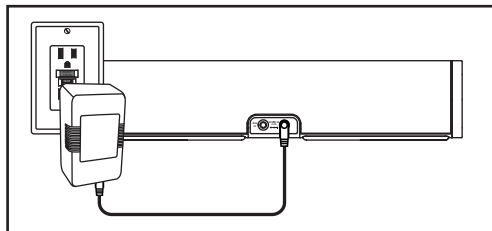

Setting up the Unit to Operate on Batteries

The unit operates on 4 AA batteries for portable use. When the sound becomes weak or distorted, it's time to replace the batteries with fresh ones.

 1. Turn the unit over and slide open the battery compartment door located on the bottom of the unit.
2. Insert 4 AA batteries as shown, making sure to match the polarity (+ or -) to the diagram inside the battery compartment.
3. Close the battery compartment.

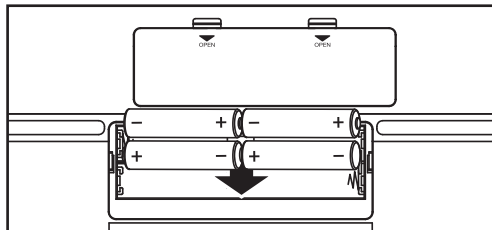

NOTE: When the unit is connected to a power source, it will charge a docked iPad iPhone or iPod and/or an iOS device connected to the USB port. It will not charge while operating on batteries. USB port will **NOT** charge iPad models. iHome+Apps do not work while unit is operating on batteries.

Make sure to dispose of batteries according to local regulations.

Playing your iPad, iPhone or iPod

This unit has 3 play modes, each indicated by a different color on the **⏻ Button**:

30-pin dock mode = Blue LED, USB mode = Green LED, Aux-in = Red LED. You can press and release the **⏻ Button** as needed to cycle among the play modes.

1. Make sure the unit has a power source (4 AA batteries are installed or AC adaptor is connected).
2. Slide open the cover to expose the flexible 30-pin connector. The USB port is located on the front of the unit. To access USB port, gently pull the rubber USB cover away from the port.
3. When operating on AC power, gently dock a playing iPad, iPhone or iPod to the flexible 30-pin dock OR connect a playing device to the USB port using the cable that came with the device. The unit will power on (Blue LED for 30-pin dock, Green LED for USB port) and in a moment you will hear the audio from your device. If needed, press and release the **⏻ Button** to switch modes. If docking to the USB port with a Lightning device it may be necessary to turn the unit on to begin play. If operating on batteries you will need to turn the unit on to begin play.
4. By default, the unit turns on to the last connection (USB port or 30-pin dock) a device was PLAYED through, not the last connection docked to. Press and release the **⏻ Button** as needed to select and start playback of the desired device.
5. Control your iPad, iPhone or iPod music using its iPod controls. Use the **Volume +/- Buttons** on the unit to adjust system volume.
6. When you are done listening, press and hold the **⏻ Button** to turn unit off. You can also turn the unit off by removing a playing device from the 30-pin dock OR USB port.

Playing Audio via Aux

1. Connect a right-angled 3.5 mm stereo audio plug to the headphone or line-out jack on your audio device and the other end to the line-in jack located on the back of the unit.
2. Press the **⏻ Button** to turn on the unit. Press and release as needed to access aux mode, indicated by the **⏻ Button** LED turning Red.
3. Turn on your audio device and place it in play mode.
4. Use the **Volume +/- Buttons** to adjust volume. You may wish to adjust the volume on your audio device, too.
5. When done listening, press and hold the **⏻ Button** as needed to turn the unit off. Remember to turn off your audio device, too.

Troubleshooting

Unit doesn't respond (no power)

- Check that all connections are correct and properly plugged in. If operating on batteries, make sure batteries are fresh and are properly installed.

Unit doesn't charge my device

- Make sure the unit is connected to working AC power outlet. Unit will not charge devices while operating on batteries.
- USB port will NOT charge iPad models

Resetting the unit

If the unit does not respond properly or appears to be "frozen", you may wish to try resetting it. To do so, disconnect unit from AC power, remove all batteries and let the unit sit for a few minutes before replacing the batteries and reconnecting to AC power.

Using with iHome+Apps

- Apps will not work when operating on batteries
- Alarm app will wake to last connection (USB port or 30-pin dock) a device was PLAYED through, not the last connection docked to.

For further information and to see the latest instructions, visit www.ihomeaudio.com/support

Battery Warning

For models that require more than one battery

- Do not mix with used or other battery types/brands
- Replace all batteries at the same time
- Do not open batteries
- Do not dispose of in fire
- Do not heat above 75°C (167°F)
- Do not expose contents to water
- Do not charge or recharge
- Do not install backwards

Consumer Product Safety Guide

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

- Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
- Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
- Cleaning** – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
- Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
- Attachments** – Do not use attachments not recommended by the product manufacturer.
- Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
- Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - the power supply cable or plug has been damaged.
 - objects have fallen into or liquid has been spilled into the enclosure.
 - the unit has been exposed to rain.
 - the unit has been dropped or the enclosure damaged.
 - the unit exhibits a marked change in performance or does not operate normally.
- Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
- Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Questions? Visit www.ihomeaudio.com
or call 1-877-446-6301 Toll Free

Limited 1 Year Warranty

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Call SDI Customer Service at 1-877-446-6301 for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. SDI is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by SDI Customer Service.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI product.

© 2013 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihomeaudio.com or call 1-877-446-6301 Toll Free.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>