

**CREATIVE**  
**PC-CAM**

*920 Slim*



**User's Manual**

Download from [www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

# Content

## **Chapter 1 Attention**

1-1 Safety Precautions.....	2
1-2 How to Maintain Your Camera.....	2
1-3 Before Using Your Camera.....	2
1-4 Package Contents.....	3

## **Chapter 2 Getting to Know Your Camera**

2-1 Names of Parts.....	4
2-2 Specifications.....	6
2-3 System Requirements.....	6

## **Chapter 3 Controls, Operation, and Display**

3-1 LED Indicators.....	8
3-2 LCD Monitor Display.....	8
3-3 Power Supply.....	9
3-4 Shutter Button.....	9
3-5 Mode Selection.....	10
3-6 Function Key.....	10
3-7 Set Button.....	10
3-8 Mode Display Button.....	10
3-9 Macro Button.....	10

## **Chapter 4 Navigating Modes and Menus**

4-1 Record Mode.....	11
4-2 Playback Mode.....	12
4-3 Movie Mode.....	13
4-4 Setup Mode.....	14

4-5 PC Mode.....	16
------------------	----

## **Chapter 5 Preparing Your Camera**

5-1 Attaching the Strap.....	17
5-2 Loading Batteries.....	17
5-3 Loading and Removing the Memory Card.....	18
5-4 Setting Up the OSD Language.....	19
5-5 Setting Up the Date/Time.....	19

## **Chapter 6 Getting Started**

6-1 Setup Mode.....	20
6-2 Record Mode.....	20
6-3 Play Mode.....	21
6-4 Movie Mode.....	21
6-5 PC Mode.....	22

## **Chapter 7 Driver Installation**

7-1 Installing the Camera Driver for PC.....	24
7-2 Installing the Application for PC.....	25

# 1. Attention

---

Please read this manual carefully before using the camera and follow the instructions to avoid damage caused by improper operation.

## 1-1 Safety Precautions

- The software CD-ROM packaged with the camera is designed for PC use only. Using a stereo or CD player may damage the CD-ROM.
- This camera is a precision electronic device. Do not attempt to service this camera yourself, as opening or removing parts may expose you to dangerous voltage points or other risks.
- Avoid dropping the camera or subject it to heavy force.
- Avoid using or placing the camera in the following locations:
  1. Damp and dusty places.
  2. Sealed vehicles, or areas exposed to direct sunlight.
  3. Environments with violent turbulence.
  4. Locations with smoke, oil fumes or steams.
  5. Locations subject to strong magnetic fields.
  6. Places with extreme temperatures, rain or snow.
- Do not open the battery cover when the camera is turned on.
- If the camera comes into contact with water, turn the power off and remove the batteries immediately.

## 1-2 How to Maintain Your Camera

- If the lens, LCD monitor or viewfinder surface is dirty, use a lens brush or soft cloth to wipe it clean. Avoid touching the lens with your fingers.
- Avoid scratching the lens, LCD monitor or viewfinder surface by placing the camera away from solid objects.
- Do not use any detergent or volatile solution on your camera casing, as this will subject it to distortion and cause the paint to dissolve. Use soft cloth only.

## 1-3 Before Using Your Camera

- Take test shots  
Before using this camera for an important occasion (such as a wedding ceremony or an overseas trip), test it beforehand to ensure that it functions well. Any additional loss caused by the malfunction of this product (such as costs of photography or any loss of benefit generated by the photography) is not the responsibility of our company and no compensation will be given for it.
- Copyright information  
Copyright ownership should be respected at all times, and where applicable, permission should be sought when the use of this camera may violate copyright law. Where there is a "No Photography" restriction, this camera should not be used to record any live performance, or be used for exhibition, even for personal purposes. Any transfer of pictures or data must be conducted under the constraints of copyright

law.

- Notes on the LCD (Liquid Crystal Display) monitor

In the rare event that the LCD monitor breaks and the liquid within spills, follow the care instructions below:

1. If the liquid makes contact with the skin:  
Wipe the skin dry and wash it thoroughly with water.
2. If the liquid gets into the eye:  
Rinse with water immediately for at least 15 minutes.  
Consult a physician as soon as possible.
3. If the liquid is accidentally swallowed:  
Rinse the mouth with water, drink large amounts of water and induce vomiting. Consult a physician as soon as possible.

## 1-4 Package Contents

Please check if the following items are in the package when purchasing this product.



CD-ROM

(incl. Camera Driver), Pouch, Wrist Strap, Batteries



USB CABLE



User's Manual

- CD-ROM (incl. Camera Driver)
- Pouch
- Wrist Strap
- 2 x AAA Alkaline Batteries
- USB Cable
- User's Manual

## 2. Getting to Know Your Camera


### 2-1 Names of Parts

#### Front View



- (1) Shutter
- (2) Flash Light
- (3) Lens
- (4) Lens Cover/ Power Switch
- (5) Strap Holder
- (6) Battery Cover
- (7) Memory Card Slot
- (8) Tripod Socket

## Rear View

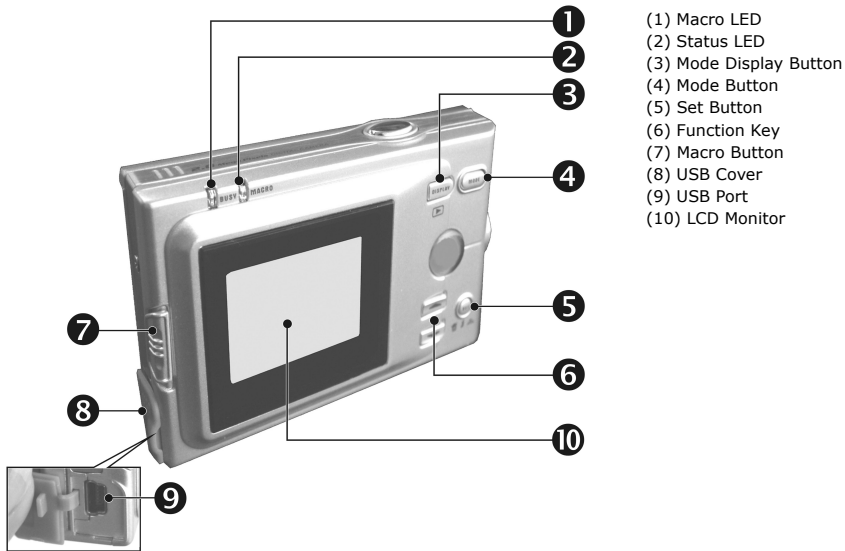

## 2-2 Specifications

- Lens: f=8.79mm
- Image Sensor: 1/2" CMOS with 2.0 mega pixels
- Focus: F / 2.8
- Sensitivity: ISO 100
- White Balance: White Balance: Auto, Sunny, Tungsten, Fluorescent.
- Shutter: Electrical
- Shutter Speed: 1/4 sec. ~ 1/2000 sec.
- Storage Medium: 16MB Internal Flash Memory  
SD Card Slot (support 4MB~512MB)
- Image File Format: Still Image for JPEG  
Motion Image for JPEG
- Image Resolution: Fine: 2048 x 1536 (Software Interpolation)  
1600 x 1200  
1280 x 960  
800 x 600
- Digital Zoom: 10-Step 4X Digital Zoom
- Focal Range – Standard: 1.2m ~ Infinity
- Focal Range – Macro: 15 ~ 20cm
- Self-timer: 10 sec. delay
- PC-CAM Mode: QVGA (320 x 240)  
VGA (640 x 480)
- Flash Mode: Auto, Off
- PC Interface: USB (Ver. 1.1)
- Movie File: Recording movie files for 60 seconds continuously with QVGA (320 x 240) format (16MB internal memory)

- Recordable Image Numbers (16MB):

		800 x 600	1280x960	1600x1200	2048x1536
16MB	Fine	60	25	15	10
	Normal	130	60	35	25

- Power Supply: 2 x AAA Alkaline Batteries or supports USB 5V (PC-CAM Mode)
- Dimensions: 85 x 56 x 18 mm
- Weight: About 88g (batteries excluded)

## 2-3 System Requirements

When operating the digital camera, we strongly recommend you to use a better computer system for optimal performance. The minimal system requirement for digital camera is as follows: (For Macintosh® computers, only mass storage is applicable)

System Requirement	
OS	Microsoft® Windows® 98SE/Me/2000/XP
CPU	Intel® Pentium® 166MHz or higher
Memory	32 MB memory or above
CD-ROM	4X or above
HDD	Minimum 10MB free disk space on the hard drive
Others	One standard USB 1.1 or USB 2.0 port

---


System requirement (Macintosh Computer)	
OS	Mac <sup>®</sup> OS X 10.1 or above
CPU	PowerPC <sup>®</sup> 601 processor or higher
Memory	64 MB memory or above
HDD	Minimum 10MB free disk space on the hard drive
Others	One standard USB 1.1 or USB 2.0 port and CD-ROM




### 3. Controls, Operation, and Display

#### 3-1 LED Indicators

The LED indicators located on the top of the LCD monitor are:

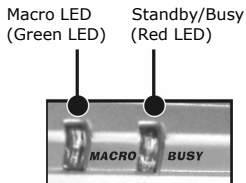

#### 3-2 LCD Monitor Display

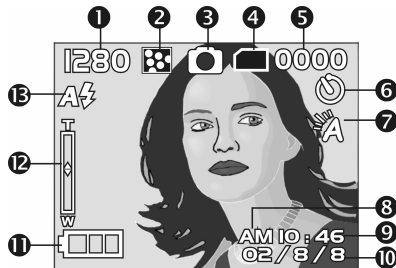


- (1) Image resolution
- (2) Image quality
- (3) Current working mode
- (4) Memory Status
- (5) Possible number of shots
- (6) Self-timer photography
- (7) White balance display
- (8) Morning/Afternoon display
- (9) Time display
- (10) Date display
- (11) Remaining battery power
- (12) Zoom indicator
- (13) Flash light status


Macro (Left Green LED)	The green LED will be on when the Macro key on the left hand side of the camera is switched to Macro mode.
Busy (Right Red LED)	The red LED will be on when the camera is recording or when the batteries for the flash lights are charging. The LED would blink every 10 seconds under normal standby mode.

### 3-3 Power Supply

- Gently slide the lens cover to the left as illustrated. A long beep indicates that the camera is turned on.

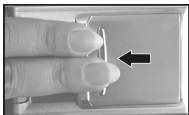

- To turn off the camera, gently slide the lens cover to the right.


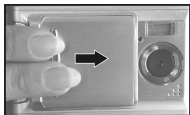


- When the camera is turned on, the red LED flashes, and the last recorded image appears on the LCD monitor.
- ※ This camera has a power-saving feature. If there is no operation on the camera for 60 seconds, the power is turned off to prevent the battery from draining. Please power on camera again.
- ※ The following features will automatically save the

configuration before the camera is turned off unless the "Reset Default" has been selected to restore its factory anticipated settings.

1. Resolution
2. Image Quality
3. Language
4. White balance
5. EV value
6. Frequency
7. PC MODE

### 3-4 Shutter Button

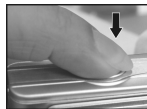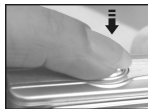



This camera is designed for 2-step shutter function. A "[ ]" mark will appear in the center of the LCD monitor when the **Shutter** button is pressed and held half way down. The camera will beep after the **Shutter** button is pressed down fully; then release the **Shutter** button to take a picture.

### 3-5 Mode Selection

- Please press and hold " **MODE** " button for 2 seconds to enter mode selection menu including "Play

Mode"  "Setup Mode"  "Movie Mode" 


"Record Mode"  "Function Selection" 

### 3-6 Function Key




- You can perform different operations in the different mode by using the **Function Key**, e.g. select, go up/down and move.

### 3-7 "SET" Button

- **SET** This key is used for **SELECTION/SET UP** under selection menu This key  is also flash button under record mode.


### 3-8 Mode Display Button



Press this button you can change the LCD Monitor to several displays.  
Standard→Image only→LCD OFF→Standard

### 3-9 Macro Button


You can select between **Standard** and **Macro mode** under **Record mode** and **Movie mode** by the switch on left side of the camera. When you have selected the **Macro mode**, the green LED will be on at the back of the camera.

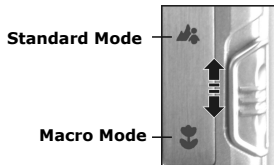

※When you select **Macro mode**, the flash is disabled automatically.

## 4. Navigation Modes and Menus



### 4-1 Record Mode

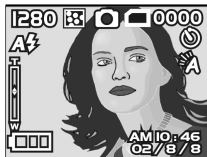

↑ For more information, please refer to the "3-2 LCD Monitor Display" section on page 8.

Index for Quick Menu:

Press MODE to enter

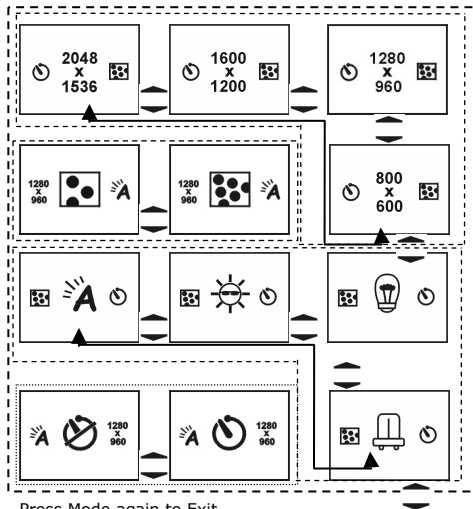

Press Mode again to Exit

## 4-2 Play Mode




- (1) Possible Number of Shots  
(2) Remaining Battery Power

### Index for Quick Menu:

#### 1. Delete Pictures




#### 2. Slideshow

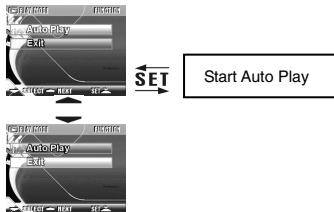


#### 3. DPOF (Digital Print Order Format) Settings

- There are three options when printing images with DPOF: Printing one image, printing all images and the option of printing the recorded date or not.
  - DPOF function can only be operated when the printer settings of the memory card is inserted, and not active with the internal memory of the camera.
- ※If the memory card is not inserted, the DPOF function is disabled even if there are images stored in the internal memory.

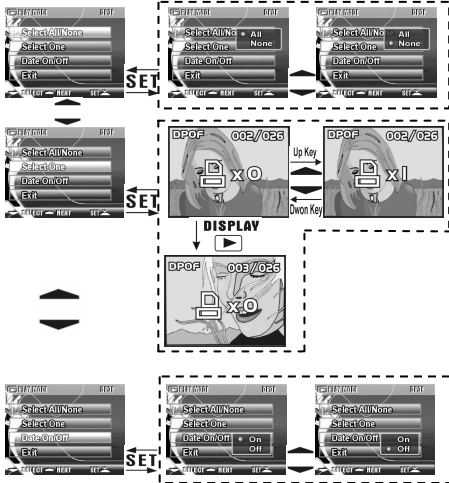

### 4-3 Movie Mode

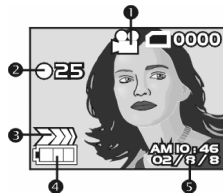


- (1) Movie Mode
- (2) Recorded Movie Time (seconds)
- (3) Recording
- (4) Remaining Battery Power
- (5) Time/Date

## 4-4 Setup Mode




### 1. Image Resolution

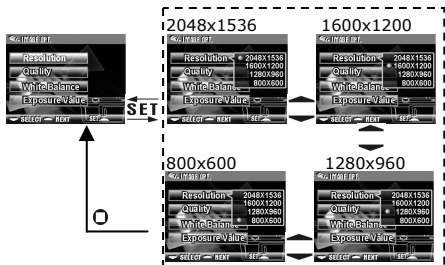


### 2. Image Quality



### 3. White Balance

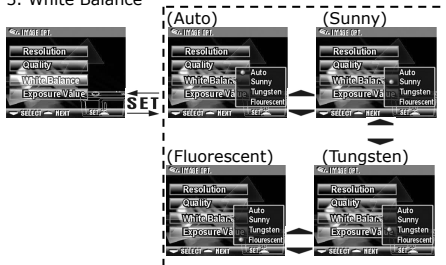

### 4. EV Compensation

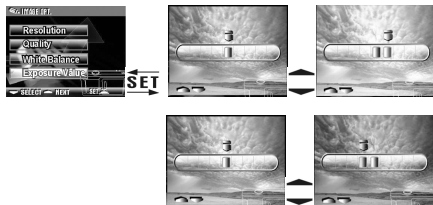

## 5. OSD Language



## 6. Date/Time



## 7. Light Frequency

Select the correct frequency type (50Hz or 60Hz) according to your region.



## 8. Format Media




※If the memory card has been inserted, it would only format the memory card, and not the internal memory.

## 9. Reset to Default Factory Settings






## 4-5 PC Mode



SET




SET

## 5. Preparing Your Camera

### 5-1 Attaching the Strap



- Insert the thin end of the strap into the strap holder.

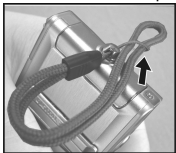

- Pass the other end of the strap through the loop.




- Pull the strap tightly.


### 5-2 Loading Batteries

- Turn the camera off first.
- Insert 2 x AAA alkaline batteries or rechargeable batteries. Please make sure the batteries are fully charged. If the batteries are low power, please change the batteries as soon as possible to maintain operation normality.


※ If the battery power indicator only shows one black block, the flash light would be disabled: If lower than **1.8V** (when the battery power indicator turns red) the camera would automatically turn off.

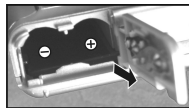

- Slide the battery cover open in the direction indicated by the arrow.

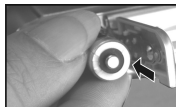

- Insert the batteries according to the indication on the inner side of the cover.



- Close and lock the battery cover.

**NOTE:** Do not open the cover roughly to avoid damaging the battery compartment cover.

- ※ If the battery power indicator only shows one black block, the flash light would be disabled.
- ※ When the battery indicator turns red, recording of still pictures and movies would be disabled.
- ※ The Date/Time would be stored for approximately 3 minutes during battery change. However, double-check the correct Date/Time after the new batteries have been inserted.


### 5-3 Loading and Removing the Memory Card

- Turn off the power of the camera first.

#### 1. Loading the Memory Card




- Memory card insertion diagram.

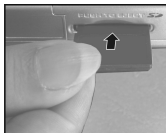


- Insert the memory card according to the indicated arrow.

#### 2. Removing the Memory Card



- Press the memory card down gently first.

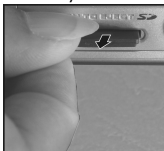

- The memory card would pop up automatically. Remove the memory card according to the indicated arrow.

#### **Attention:**

Before using the camera, please remember to insert the


memory card into the slot. If the memory card is full or contains other images, you can press the **Mode Button**

**MODE** to **Format** of the **Setup Mode**  to format the memory card.

- There is 16MB internal memory built-in in the digital camera for Image Storage. If a memory card is inserted, your data will be saved on this memory card.
- ※ The specification of memory card applicable for this camera is SD or MMC (4MB~512MB).
- ※ Please turn off the camera first when inserting/removing the SD memory card.
- Please don't take out the SD card while the camera is powered on to avoid damaging the SD card or camera.
- If the memory card is inserted wrongly, it would not fit into the memory card slot. Do not force the card into the slot to avoid damaging the memory card.
- If the camera does not detect the memory card, please gently wipe the metal interface of the card with a soft cloth and reload the card again.

## 5-4 Setting Up the OSD Language

Before using the camera, please select "**Language**" to set the OSD language by pressing the **Mode Button**

**MODE** to **Setup Mode**  . There are 7 options for your selection: English, Chinese, French, German, Italian, Japanese, Spanish.

## 5-5 Setting Up the Date/Time




Before using the camera, please select "**Date/Time**" to set the date and time by pressing the **Mode Button**

**MODE** to **Setup Mode**  .

## 6. Getting Started

### 6-1 Setup Mode

By using the **Setup Mode**, you can adjust the **basic camera** settings, including: Image Size, Image Quality, White balance, and EV Compensation. **General setting** format and factory default setting. **Setup** for language, date/time and light frequency is as follows:



1. Turn the camera on/off by sliding the lens cover.
2. Press **Mode Button MODE** and use **Function key**  to move to .
3. Press the **SET Button** to get into **Setup Mode** screen, the LCD monitor will display the menu.
4. Use the "▼" of the **Function key**  to move between selections; Use "▲" to toggle between selections.
5. Use **SET Button** to enter the menu. and confirm function selections with "▲" and "▼".
6. Lastly, use the **SET Button** to confirm selections.



### 6-2 Record Mode

**Record Mode** offers you a quick and easy way to take your ideal pictures.

1. Turn on the camera by sliding the lens cover to go directly into **Record Mode**. You can also enter into

**Record Mode** through **Mode Button MODE** and use




the **Function key**  to move to , and select **SET**.



- Upon entering, images will appear on the LCD monitor.
2. Press and hold the **Shutter** button down half way to select the photography location, and a yellow "[ ]" will appear in the center of the LCD monitor. Select the AE, and press the **Shutter** button down fully and release it to complete the recording.
  3. You can use **SET** to select two flash light modes when using the camera: Auto, and Off.
  4. Press the **Mode Display Button DISPLAY** to toggle the LCD Monitor displays and there are five display modes: Standard Display, Full Display, Image Only, LCD Monitor Off, Only Operation Settings.
  5. Using the **Mode Button MODE** to set the details settings for recording images, e.g., Image Resolution, Image Quality, Self-timer, and Light Frequency settings. The menu will appear on the LCD monitor when **Mode Button MODE** is pressed. Use "▼" of the **Function key**  to move between selections.
  6. Using "▲" and "▼" of the **Function key**  to adjust the digital zoom. The adjustment ratio of the digital zoom will appear on the left hand side of the LCD monitor, from 1.0 time to 4.0 times, with 0.5 times increase at each adjustment.
  7. The green LED will be on when the **Macro** key on the left hand side of the camera is toggled to **Macro Mode**.

- ※ If the icon appears on the LCD Monitor for low battery power, please change the batteries immediately to maintain operation normality.
- ※ The countdown for the **Self-timer** is 10 seconds.
- ※ There are 4 types of resolutions offered by the camera: **2048x1536**, **1600x1200**, **1280x960**, and **800x600**.
- ※ Please pay attention to the distance between the camera and the object when using the **Flash Light**. The internal built-in **Flash Light** of this camera is effective within 1.5 meter.
- ※ If the **Macro Mode** is selected, the flash off function will be enabled automatically.
- ※ If the "**Memory Full**" or "**Card Full**" warning messages appear on the LCD Monitor, it means the memory card is full. Please remove the memory card and insert a new one in immediately.

### 6-3 Play Mode

In **Play Mode**, users can review the recorded still and movie pictures. To review the pictures, perform the following:




1. Turn the camera on/off by sliding the lens cover.
2. Press **Mode Button**  **MODE** and use **Function key**  to move to .
3. Press the **SET Button** to get into **Setup Mode** screen, the LCD monitor will display the menu.

4. Use "▲" and "▼" of the **Function key**  to go to "previous" and "next" of the picture display.
5. You can select **Delete Picture** and **Slideshow** when using the **SET Button** to enter the function menu.
6. Use "▼" of the **Function key**  to move between selections; Use "▲" to toggle between selections.
7. Use **SET Button** to enter the menu.
8. Use **exit** to end the function menu, and return to **Play Mode** menu.

- ※ DPOF function can only be operated when the memory card is inserted.
- ※ If there is no image stored in the internal memory or memory card, a "**No picture**" message will pop up on the LCD Monitor in the **Play Mode**.

### 6-4 Movie Mode


You can use **Movie Mode** to record movie pictures (not including audio). To record the movie pictures, perform the following:

1. Turn the camera on/off by sliding the lens cover.
2. Press **Mode Button**  **MODE** and use **Function key**  to move to .
3. Press the **SET Button** to get into the **Setup Mode**

- screen, the LCD monitor will then display the menu.
- The top left hand corner will display the recorded time in red while you are recording the movie pictures.
  - The green LED will be on when the **Macro** key on the left hand side of the camera is toggled to **Macro Mode**.
  - You can use **Display** button **DISPLAY** to toggle between display modes while recording movie pictures: normal display mode and image display mode.




- ※ When the LCD monitor displays "**Memory full**", the recording will be stopped because the memory card is full.
- ※ When recording the movie pictures, the maximum recording time will depend on the free spaces of the memory card.
- ※ The digital zoom function will be disabled when recording movie pictures.
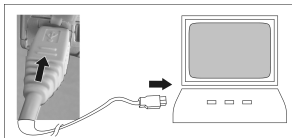
## 6-5 PC Mode



### ● Removable Disk




The digital camera offers removable disk function such as a card reader device. You can treat this digital camera as an SD device; just follow the instructions mentioned below:

- Please follow the steps of "software installation, camera driver" to complete the installation of the camera driver.
- Turn the camera on/off by sliding the lens cover.
- Press and hold **Mode Button** **MODE** and use **Function** key  to move to .
- You will see "Mass storage" and "PC camera" upon entering the menu screen when the **SET** Button is pressed.
- Please use the **Function** key  to move to "Mass storage" and press **Function** key **SET** to confirm storage.

- 
- Please connect the USB cable to the camera and the PC when the diagram **USB Connection** pops up the screen.
  - A new item – removable disk will be added into **my computer** after the system installation is completed.
  - You may start to operate with the newly added removable disk (SD device) offered by the digital camera.

● PC Camera

The digital camera can be treated as a PC camera or a Web Cam. Please follow the instructions mentioned below:

- Please follow the steps of “software installation, camera driver” to complete the installation of the camera driver.
- Turn the camera on/off by sliding the lens cover.
- Press **Mode Button MODE** and use **Function** key  to move to .
- You will see “Mass storage” and “PC camera” upon entering the menu screen when the **Function** key **SET** is pressed.
- Please use the **Function** key  to move to “PC camera” and press **Function** key **SET**.
- Please connect the USB cable to the camera and the PC when the diagram **USB Connection** pops up the screen.
- You may operate the PC camera through the software that comes with the CD-ROM or other software.



## 7. Driver Installation

### 7-1 Installing the Camera Driver for PC


You can use the **PC Camera** and **Mass Storage** functions of the camera via PC. To install the proper camera driver, perform the following:

1. Insert the installation CD into the CD-ROM drive.
2. The Auto-run program will be executed and the welcome screen will appear:  
(If your CD-ROM drive doesn't support the auto-run function, please double click on the "**My Computer**" icon on the desktop. Then double click the CD-ROM drive icon and click the **Setup.exe** file in the root directory.)




- ※ For Windows 98SE/2000 users, follow the instructions on the screen (not shown here).

3. Click **Install Driver** to install camera driver of the digital camera. The screen will appear the following message (for Windows XP only):

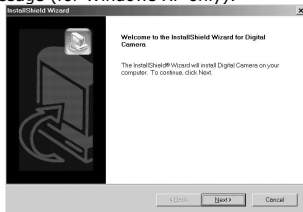

4. Click **Next** to continue the setup program. After you have installed camera driver successfully, the screen will appear the following message (for Windows XP only):

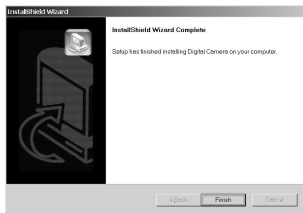

5. Click **Finish** to restart the computer and thus completes the camera driver installation.

## 7-2 Installing the Application for PC

Arcsoft application installation (In case of Photo Impression)


1. Insert the software CD-ROM supplied by the package into the CD-ROM drive.
2. The Auto-run program will be executed and the welcome screen will appear the following message :  
(If your CD-ROM drive doesn't support the auto-run function, please double click on the "My Computer" icon on the desktop. Then double click the CD-ROM drive icon and click the **Setup.exe** file in the root directory.)




3. Please click on the Arcsoft PhotoImpression installation, the screen will appear the following diagram:





4. Select the desired language, and then press **OK**.
5. Press "next" to continue the installation after the welcoming screen.

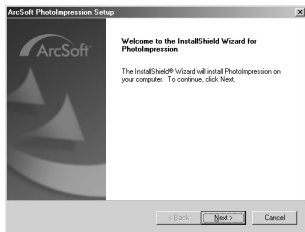


6. Press **YES** to accept the conditions of CAL (Software License Agreement) and continue the installation.

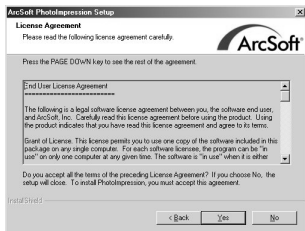

7. Please follow the installation wizard to select the folder location and application components.

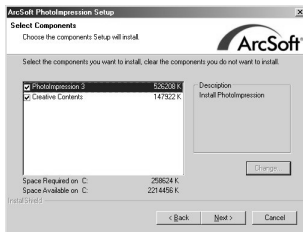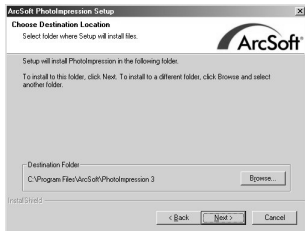


8. Please select the folder where you want to install the application in.

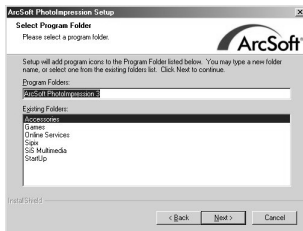

---

9. After the installation the following diagram will appear. Press **Finish** to complete the application installation.

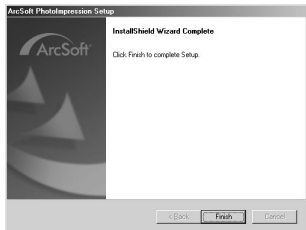

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>