FRONT

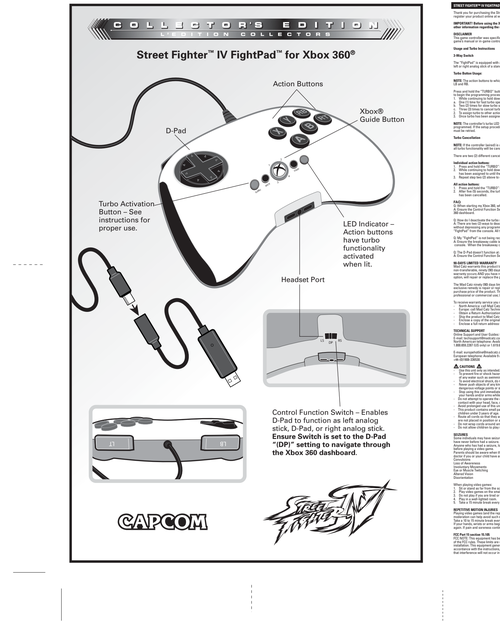

SF4 4728 MUG

STREET FIGHTER IV FIGHTPAD™

Congratulations on your purchase of Street Fighter™ IV FightPad™ for use with the Xbox 360 video game system. Be sure to read this product guide and other important information in your manual prior to the first time you use this game accessory.

IMPORTANT! Before using the Xbox 360® with this product, read the Xbox 360 instruction manual for safety, health, and other information regarding the use of the Xbox 360.

DISCLAIMER
This product is only for use specifically designed for use with Street Fighter IV. For use with other games, please refer to the game's manual or game product options.

Cargo and Turbo Instructions

1-Way Switch
The "FightPad" is equipped with a 3-way switch labeled "L2," "DP" and "R2," which allows the D-Pad to emulate either the left analog stick, D-Pad or right analog stick of a standard controller. Set the switch to the desired location to make use of this feature.

Turbo Button Design
NOTE: The button factory is which the turbo feature can be assigned are A, B, X, Y, L1 (LP), L2 and R2.

Press and hold the "Turbo" button. Once the "Turbo" button has been depressed, you will have a five (5) second window to assign the button you wish to have the turbo function.

1. While continuing to hold down the "Turbo" button, press the action button you wish to have the turbo function assigned to. Release the "Turbo" button. The LED will flash.
2. Two (2) times for slow turbo speed – the turbo LED will flash slowly.
3. Three (3) times for medium turbo speed – the turbo LED will flash.
4. To assign turbo to other action buttons, repeat steps one through four.
5. To disable the turbo assigned to the desired button (button), release the "Turbo" button to complete the process.

NOTE: Turbo functionality is only available for the buttons that have been assigned. Only one button can be assigned at a time unless programmed. If the setup procedure has not been properly executed, the turbo LED will not illuminate and the procedure must be retrued.

Turbo Cancellation

NOTE: If the controller (wired) is unplugged from the console, or loses its wireless connection or is powered OFF (wireless), the turbo function will be cancelled.

There are two (2) different cancellation methods, individual action buttons and all action buttons:

Individual action buttons:
1. Press and hold the "Turbo" button.
2. While continuing to hold down the "Turbo" button, press any action button(s) which turbo has been assigned to until the turbo LED goes out.
3. Release the "Turbo" button to cancel other action buttons.

All action buttons:
1. Press and hold the "Turbo" button for five (5) seconds without depressing any programmable action buttons.
2. After five (5) seconds, the LED will illuminate for one (1) second and then go out, indicating all turbo functionality has been cancelled.

Setup
1. Turn on the Xbox 360, who can't navigate through the main dashboard.
2. Ensure the Control Function Switch is set to the D-Pad "(DP)" setting. This will enable you to navigate through the Xbox 360 menus.

3. Slide the 3-Way switch to the turbo setting!
4. Press and hold the Xbox Guide button on the FightPad. Be holding down the Turbo Activation Button for 5 seconds. Release the Xbox Guide button. The Xbox Guide will now be displayed. Navigate to the "Settings" tab and select "FightPad" from the controls. All turbo settings will be cleared after plugging it back into the console.

5. Slide the "FightPad" is not being recognized by the Xbox 360 console. What should I do?
6. Ensure the FightPad is plugged into the console. Check the connection between the controller port on the Xbox 360 console. When the breakaway cable is loose, the console will sometimes fail to recognize the controller.

7. The D-Pad doesn't function at all when I try navigating dashboard. Why is this?
8. Ensure the Control Function Switch is set to the D-Pad "(DP)" setting. Set the switch to "(DP)" or D-Pad "(DP)" setting.

90-DAYS LIMITED WARRANTY
Mad Catz warrants this product to be free from defects in materials and workmanship for the warranty period. This warranty does not cover normal wear and tear, or damage resulting from negligence, misuse, or accidents. In the event of a defect in materials or workmanship, Mad Catz will, at its sole discretion, repair or replace the product free of charge. This warranty does not cover consequential or incidental damages, or damage caused by improper use or abuse of the product or any other product.

The Mad Catz name, Mad Catz logo and warranty is available in North American and European customers. Visit only and only the warranty information for the product in question. Mad Catz warranty is valid only if the product was purchased from an authorized Mad Catz dealer or distributor. Warranty is void if the product has been damaged by accident or abuse, improper use, modification, professional or commercial use, or if the product has been damaged repair or service.

To receive warranty service you must:
- Contact Mad Catz Customer Service or Technical Support at 1.800.659.2561 or 1.619.683.2015
- Contact Mad Catz Technical Support at +44 (0)1962 738530
- Obtain a Return Authorization Number from Mad Catz Technical Support
- Ship the product to Mad Catz, postage prepaid, with the Return Authorization Number
- Enclose a copy of the original sales receipt showing a purchase date.

Mad Catz will pay for return shipping for warranty service. Mad Catz reserves the right to charge for shipping and handling for any product that is not covered by this warranty.

TECHNICAL SUPPORT
Technical Support is available at: http://www.madcatz.com
E-mail: techsupport@madcatz.com
North American telephone: Available 8 AM to 4:45 Pacific Standard Time, Monday through Friday (excluding holidays) at 1.800.659.2561 or 1.619.683.2015 (outside US).
E-mail: europesupport@madcatz.com
European telephone: Available 9 AM to 5 PM Greenwich Mean Time, Monday through Friday (excluding bank holidays) at +44 (0)1962 738530.

⚠ **CAUTION** ⚠
- Use this unit only as intended.
- Do not use this product in wet areas (bathroom, pool, hot tub, sauna or restaurant). Do not use within 30' of any water such as swimming pools, bathtubs, or sinks.
- Do not use this product during a lightning storm. Do not connect to any peripheral personal use.
- Never push objects of any kind, other than authorized items, into the product as they may touch dangerous parts or short out parts that could result in a fire or electric shock.
- Stop using this unit immediately if it is hot to the touch or if you experience disorientation or pain in your hands, arms, shoulders, neck, or other parts of your body while using this product.
- Do not attempt to operate the unit in any way except with your hands. Do not bring this unit in contact with your face, eyes, or any part of your body other than your hands.
- Avoid prolonged use of this unit. Take breaks every 30 minutes.
- Do not use this product if you are tired or have your hands or other parts of your body cramped or stiffened (either before or after use).
- Do not use this product if your hands or other parts of your body are bruised, cut or chapped over. Make sure that cards are placed in position in areas where they may become pinched or damaged.
- Do not use this product if you are prone to blisters or other skin irritations or injuries.
- Do not allow children to use this product.

WARNING
Control functions with this product are factory assigned to the Xbox 360 controller. Modifications to these functions may cause hazardous situations in which injury may occur. Do not use this product if you have trouble holding a controller or if you have pacemaker or other medical implant. Consult your doctor before using this product if you have any medical condition that could be affected by electrical stimulation. Do not use this product if you are pregnant. Do not use this product if you are prone to seizures or have any other medical condition that could be affected by electrical stimulation. Do not use this product if you are prone to blisters or other skin irritations or injuries. Do not allow children to use this product.

WARNING
Do not use this product while operating a motor vehicle or any other equipment. Do not use this product if you are tired or have your hands or other parts of your body cramped or stiffened (either before or after use). Avoid prolonged use of this unit. Take breaks every 30 minutes

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com